

Subject

How to Enable iPhone Text Messages on Multimedia Display

Market

USA

Service Category

Audio/Visual/Telematics

Section

Cellular Communication

Applicability

All models with Bluetooth

APPLICABLE VEHICLES

2015	RC F	2015	RC350
2015-2016	NX300H	2013-2016	ES300H
2014-2015	IS250C	2013-2016	ES350
2013-2016	LS600H	2013-2016	LS460
2014-2016	GX460	2013-2015	RX450H
2014-2015	IS250	2013-2016	CT200H
2013-2015	GS350	2014-2015	IS350
2013-2015	RX350	2015-2016	NX200T
2014-2015	IS350C	2013-2015	GS450H
2013-2014	IS F	2013-2016	LX570

CONDITION

iPhone text messages do not appear on multimedia display.

RECOMMENDATIONS

Follow these steps if iPhone text messages are not shown on the multimedia display.

- After the initial pairing is completed, and if applicable to your multimedia system, enable messaging features by accessing the Phone's Bluetooth menu.
- First, select the "Information" symbol to the right of the "Connected" system and turn on "Show Notifications".
- Then, disconnect/reconnect the phone using the multimedia System's controls.

For iPhones running IOS 8 or later

- On the iPhone go to "Settings".
- Select "Notifications" under "Settings".
- Then choose "Messages".
- Finally ensure that the either "Banners" or "Alerts" is selected and style is not set to "None".

LINK REFERENCES

This Tech Tip does not contain any link references