

Subject How to Enable iPhone Text Messages on Multimedia Display		Market USA
Service Category Audio/Visual/Telematics	Section Cellular Communication	
Applicability Bespoke with navigation.		

APPLICABLE VEHICLES

2014	xD	2014-2016	FR-S
2014-2015	xB	2016	iA
2014-2016	tC	2014-2015	iQ
2016	iM		

CONDITION

iPhone text messages do not appear on multimedia display.

RECOMMENDATIONS

- Follow these steps if iPhone text messages are not shown on the multimedia display.
- After the initial pairing is completed, and if applicable to your multimedia system, enable messaging features by accessing the Phone's Bluetooth menu.
 - First, select the "Information" symbol to the right of the "Connected" system and turn on "Show Notifications".
 - Then, disconnect/reconnect the phone using the multimedia System's controls.
- For iPhones running IOS 8 or later
- On the iPhone go to "Settings".
 - Select "Notifications" under "Settings".
 - Then choose "Messages".
 - Finally ensure that the either "Banners" or "Alerts" is selected and style is not set to "None".

LINK REFERENCES

This Tech Tip does not contain any link references