JTB00492NAS3

TECHNICAL BULLETIN 15 NOV 2017



© Jaguar Land Rover North America, LLC

NOTE: The information in Technical Bulletins is intended for use by trained, professional Technicians with the knowledge, tools, and equipment required to do the job properly and safely. It informs these Technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by 'do-it-yourselfers'. If you are not a Retailer, do not assume that a condition described affects your vehicle. Contact an authorized Jaguar service facility to determine whether this bulletin applies to a specific vehicle.

INFORMATION

This reissue replaces all previous versions. Please destroy all previous versions.

Changes are highlighted in blue

SECTION:

414-00: Battery and Charging System - General Information

SUBJECT/CONCERN:

Auto Stop/Start System Inoperative

AFFECTED VEHICLE RANGE:

MODEL:	MODEL YEAR:	VIN:	ASSEMBLY PLANT:	APPLICABILITY:
F-PACE (X761)	2017	045409- 099996	Solihull	
F-PACE (X761)	2017	488002- Solihull 499998		
F-PACE (X761)	2017	880002- 899840	Solihull	
F-TYPE (X152)	2014-2017	K00001-K47319	Castle Bromwich	
XE (X760)	2017	921222- 979442	Solihull	
XE (X760)	2017	P10187-P16863	Castle Bromwich	
XF (X260)	2016-2017	Y00214- Y53221	Castle Bromwich	
XJ Range (X351)	2013-2017	V39427- W13368	Castle Bromwich	
XF (X250)	2013-2015	S47999- U88785	Castle Bromwich	V6 S/C 3.0L Petrol /V8 S/C 5.0L Petrol

MARKETS:

NORTH AMERICA

CONDITION SUMMARY:

SITUATION:

The Auto Stop/Start system may be inoperative.

CAUSE:

This may be because the Auto Stop/Start system can only be robustly diagnosed using the Jaguar Land Rover-approved diagnostic system, starting with the health check application, which will indicate the cause of any faults.

ACTION:

Should a customer express this concern, follow the Diagnostic Procedure outlined below.

PARTS:

No Parts Required

TOOLS:



Jaguar Land Rover-approved Midtronics battery power supply



Jaguar Land Rover-approved diagnostic tool with latest SDD software, Calibration File

WARRANTY:

NOTES:

- Repair procedures are under constant review, and therefore times are subject to change; those quoted here must be taken as guidance only. Always refer to JLR claims submission system to obtain the latest repair time.
- The JLR Claims Submission System requires the use of causal part numbers. Labor only claims must show the causal part number with a quantity of zero.

DESCRIPTION	SRO	TIME (HOURS)	CONDITION	CAUSAL PART
Auto start/stop system inoperative	86.80.90	0.2	42	Refer to the Diagnostic Procedure section

NOTE:

Normal Warranty procedures apply.

DIAGNOSTIC PROCEDURE: SDD

This Diagnostic Procedure is only for vehicles requiring the Jaguar Land Rover-approved diagnostic tool with Symptom Driven Diagnostics (SDD).

CAUTIONS:

- A Jaguar Land Rover-approved Midtronics battery power supply must be connected to the vehicle battery during diagnosis / module programming.
- All ignition ON/OFF requests must be carried out. Failure to perform these steps may cause damage to control modules in the vehicle.
- The causal part number will vary depending on the findings of the Diagnostic Procedure.Make sure the relevant causal part number is claimed based on the test results.
- Connect the Jaguar Land Rover-approved Midtronics battery power supply to the vehicle battery.

3

NOTE:

The Jaguar Land Rover-approved diagnostic tool must be loaded with DVD151.04 Calibration File 282 (or later).

Connect the Jaguar Land Rover-approved diagnostic tool to the vehicle and begin a new session.

4 Follow the on-screen prompts, allowing the diagnostic tool to read the VIN, identify the vehicle, and initiating the data collect sequence.

NOTE:

The battery power supply must be disconnected from the vehicle battery.

- 5 If the hyperlink is not available:
 - 1 Select **Diagnosis** from the Session Type screen.
 - 2 Select the Selected Symptoms tab.
 - ³ Select one of the following symptoms:
 - Powertrain Engine system Starting system Start-stop system Inoperative
 - 4 Select continue.
 - ⁵ Select the **Recommendations** tab.
 - Select Run to perform the 'Powertrain Auto stop/start system Health check' option.
- 6 Follow all on-screen instructions until the application completes successfully.
 - 1 When all tasks are complete, go to the next Step.
- **7** Exit the current session.
 - ¹ Select the **Session** tab.
 - ² Select the **Close Session** option.
- B Disconnect the diagnostic tool and battery power supply from the vehicle.