

## 2018 VW Maintenance Schedule - All Models except e-Golf

## MY 2018 Maintenance Intervals - USA

Minor Maintenance

Service intervals in miles												
	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K
Minor Maintenance	Х		Х		Х		Х		Х		Х	
Standard Maintenance		Х		Х		Х		Х		Х		Х
Extended Maintenance				Х				Х				Х
Additional Maintenance Items	Refer to the Additional Maintenance Items Table below											

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

	Brake pads: Check thickness and brake disc condition. Look for contact pattern and corrosion of brake discs (front and rear) Engine: Change oil and replace filter Service interval display: Reset
	Sunroof water drains: Check for clearance and clean if necessary (Passat only)
Sta	ndard Maintenance (Includes All Minor Maintenance Items)
	Automatic headlight control: Check (if equipped)
	Battery: Check (and second battery if applicable)
	Brake fluid: Check level
	Brake pads: Check thickness and brake disc condition. Look for contact pattern and corrosion of brake discs (front and rear)
	Coolant level and frost protection: Check
	Engine and engine compartment components: Check (from above) for leaks and damage
	Engine and engine compartment components: Check (from below) for leaks and damage, check transmission, final drive, and drive
	axle boots
	Engine: Change oil and replace filter
	Exterior lighting: Front and rear lights, headlights (adjust if necessary), turn signals, cornering lights, and hazard warning lights: Chec
	Headlight washing system: Check (if equipped)
	Horn: Check
	Removable trailer hitch: Inspect (Tiguan, Tiguan Limited, and Atlas only if equipped)
	Service interval display: Reset
	Sunroof water drains: Check for clearance and clean if necessary (Passat only)
	Test drive: Check braking, kickdown, steering, electrical, heating and ventilation systems, air conditioning, handling, and parking
_	brake C. H
	Tire pressure monitoring system: Calibrate to correct tire pressure settings
	Tire pressure: Check LF RF LR RR Spare
	Tire renair kit: Check for damage and prior use

## **Extended Maintenance**

Ball joints, wheel bearings, drive axles, coupling rods, tie rod ends, and stabilizer bar rubber bushings: Visually inspect for damage and excessive play

1

■ Body interior and exterior: Visually inspect for corrosion

Windshield wiper/washer system: Check

Tires: Check condition and wear pattern, record tread depth

Wiper blades: Bring into service position and check for damage

7/14/2017



## **Extended Maintenance (continued)**

Brake system: Visually inspect for leaks and damage
Convertible top: Clean and lubricate, perform leak test (Beetle Convertible only)
Exhaust system: Inspect for leaks and damage
Front and rear coil springs and shock absorbers: Inspect
Hood latch: Lubricate (Does not apply to: Passat, Golf, Beetle, Jetta)
Interior lighting: Glove box lights, cigarette lighter/power outlets, luggage compartment, and all warning lights: Check
Panoramic Sunroof and Sliding/Tilting Sunroof: Check
Ribbed belt: Check condition
Underbody: Visually inspect underbody protection, underbody trim panels, wire routing, and plugs for damage
Windshield: Visually inspect for damage

Additional Maintenance Items					
6-Speed DSG transmission fluid and filter: Change	Every 40K miles				
7-Speed DSG transmission fluid: Change	Every 80K (Golf R only)				
Air filter element and snow screen: Replace element and clean screen and housing	Every 60k miles or 6 years, whichever occurs first				
Automatic transmission fluid and filter: Change (non DSG, automatic transmissions)	Every 80k miles				
AWD clutch fluid: Change (if equipped)	Every 3 years (AWD only vehicles)				
Brake fluid: Change	3 years after initial registration, then every 2 years, regardless of mileage				
Coolant pump toothed belt: Check	At 150k miles then every 20k miles				
Dust and pollen filter: Replace	Every 40k miles or 2 years, whichever occurs first				
Front axle differential lock fluid: Change (if equipped)	Every 3 years				
Panorama Sliding Sunroof: (if equipped)  O For gray grease, the guide rails must be cleaned and greased, and the wind deflector must also be cleaned.  O For colorless grease, only perform a functional check while listening for unusual noises	After 40k miles or 3 years, then every 40k miles or 2 years, whichever occurs first				
Spark plugs: Replace	Every 40k miles or 4 years, whichever occurs first (4 Cyl: 1.4L gasoline, 1.8L gasoline, and 2.0T gasoline)				
Spark plugs: Replace	Every 60k miles or 6 years, whichever occurs first (6 Cyl: 3.6L engines only)				
Sunroof: Check function, clean, lubricate, and check water drains (if equipped)	After 40k miles or 3 years, then every 40k miles or 2 years, whichever occurs first.				
Timing belt: Check	At 150k miles then every 20k miles				
Tire Filler Bottle (if equipped)	Every 2 years check expiration date, must not be more than 4 years old				

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

2

7/14/2017

<sup>© 2017</sup> Volkswagen Group of America, Inc.