



Countries: CANADA, UNITED STATES, PUERTO RICO
Availability: ISIS, Bus ISIS, FleetSIS
Major System: PROGRAMMING SUPPORT
Current Language: English
Other Languages: [Français](#), [Español](#),
Viewed: 1329

Document ID: IK0800196
Revision: 2
Created: 9/28/2009
Last Modified: 2/5/2014
Author: Chris Moody

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 202	Not Helpful 357
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	---------------------------	-------------------------------

Title: Asterisk in Lower Right Quadrant of Dash Display

Applies To: ProStar, LoneStar, DuraStar, TranStar, WorkStar, and CE Bus Models

DESCRIPTION

An asterisk or star displayed on the lower right quadrant of dash information display.

SYMPTOMS

- There is no failure related to this asterisk-it is just visible in the display.

TROUBLESHOOTING

1. No troubleshooting is required as there is no failure.

RESOLUTION

To identify the reason for the asterisk you can turn the display button so the lower right quadrant is highlighted, then press the button to toggle to the next screen. The asterisk symbol tells you that there is an additional message available. This is most likely going to be a compass module but following these instructions will allow you to see what that message is.

Hide Details

Feedback Information

Viewed: 1328
 Helpful: 202
 Not Helpful: 357

No Feedback Found



Copyright © 2014 Navistar, Inc.