	Base				Countries: Availability: Major System: Current Languages Other Languages: Viewed:	•	Document ID: Revision: Created: Last Modified: Author:	0 12/5/2012
								Less Info
😽 Hide Details			(Coding Information				
Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedba	ck Helpf	ul	Not Helpful
60		View My Bookmarks	*	•	P	1		1

Title: IC Bus, Fuel Fired Engine Coolant Heaters

Applies To: AE, BE, CE, and RE Bus Models

DESCRIPTION

Optional fuel fired engine coolant heaters may require the fuel system to be primed prior to use.

Option Codes:

49BRM

HEATER, ENGINE COOLANT Fuel Fired, Espar, 17,000 BTU, Mounted Forward of Rear Wheel Pocket, with Exhaust Exit Out left side, AFT of Wheel Pocket

49WNS

HEATER, ENGINE COOLANT Fuel Fired, Espar, 17,000 BTU, With Exhaust Exit Ahead of Rear Axle

49EAS

HEATER, ENGINE COOLANT Fuel Fired, Espar, 42,000 BTU, with Exhaust Exit Ahead of Rear Axle

49GDM

HEATER, ENGINE COOLANT Fuel Fired, Webasto Scholastic, 45,000 BTU, With Exhaust Exit Under Rear Bumper

49GWX

HEATER, ENGINE COOLANT Fuel Fired, Webasto Scholastic, 45,000 BTU, With Exhaust Exit Out Left Side

49MRB

HEATER, ENGINE COOLANT Fuel Fired, Espar, 42,000 BTU, with Exhaust Exit Under Bumper, Mounted Aft of Rear Axle, Left Side

The coolant heater fuel filter is filled during the manufacturing assembly process which allows sufficient fuel to test fire the unit. The test fire, or operation validation process, will result in air in the fuel system as the fuel tank fuel level will be below the pickup tube level.

SYMPTOMS

- Unit will not start and run when received from the manufacturing.
- Repeated failed start attempts resulted in system shut down requiring system to be reset (Espar).

RESOLUTION

- Prior to validating fuel fired heater operation, remove fuel filter housing and fill with clean fuel.
- Ensure fuel tank is filled to above 1/4 of a tank.
- Reset system and timer as required by the manufacturer.
- · Follow engine coolant heater manufacturer instructions to fire system.
- Once running, run unit for a minimum of 30-40 minutes to purge all air from the fuel system.

NOTE:

Priming the fuel system would be considered part of the dealer pre-delivery process and would not be covered under standard warranty coverage.

ADDITIONAL RESOURCES

Espar:

http://www.espar.com/documents/E-Guardian%20Manual%200908.pdf

Webasto:

Webasto Installation/Operation Instructions

\land Hide Details

Feedback Information

Helpful: 1
Not Helpful: 1

Copyright © 2013 Navistar, Inc.