 


Service

Category Vehicle Exterior

Section Door/Hatch Market USA



Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2008 - 2015	Sequoia	
2007 - 2015	Tundra	

REVISION NOTICE

October 6, 2017 Rev1:

• The Parts Information and Repair Procedure sections have been updated.

Any previous printed versions of this bulletin should be discarded.

Introduction

Some 2007 – 2015 model year Tundra and 2008 – 2015 model year Sequoia vehicles may exhibit an abnormal feeling, dragging, or sticking when using the outside door handle. Follow the Repair Procedure in this bulletin to address this condition.

Production Change Information

This bulletin applies to vehicles produced **BEFORE** the Production Change Effective VINs shown below.

MODEL	DRIVETRAIN	BODY	ENGINE	TRIM LEVEL	PRODUCTION CHANGE EFFECTIVE VIN	
		Crew Max	4.6L	SR/SR5/TRD	5TFEM5F1#FX090270	
			5.7L	Limited	5TFFY5F1#FX184867	
				Platinum/1794	5TFGY5F1#FX184882	
	Tundra 2WD			SR/SR5/TRD	5TFEY5F1#FX184885	
Tundra			5.7L FFV	Limited	5TFFW5F1#FX192356	
				Platinum/1794	5TFGW5F1#FX192373	
					5TFEW5F1#FX192376	
		Double Cab Long Box	5.7L	SR/SR5/TRD	7L SR/SR5/TRD 5TFTY5F1#FX00890	5TFTY5F1#FX008900
			5.7L FFV		5TFTW5F1#FX008975	

Production Change Information (Continued)

MODEL	DRIVETRAIN	BODY	ENGINE	TRIM LEVEL	PRODUCTION CHANGE EFFECTIVE VIN
		Double Cab Regular Box	4.6L	SR/SR5/TRD	5TFRM5F1#FX090284
			5.7L	Limited	5TFSY5F1#FX184908
				SR/SR5/TRD	5TFRY5F1#FX184897
	2WD		5.7L FFV	Limited	5TFSW5F1#FX192060
					5TFRW5F1#FX192357
		Regular Cab Long Box	5.7 FFV	SR/SR5/TRD	5TFNW5F1#FX192403
			5.7L	3N/3N3/1ND	5TFNY5F1#FX185010
			4.6L		5TFDM5F1#FX062409
				Limited	5TFHY5F1#FX462270
			5.7L	Platinum/1794	5TFAY5F1#FX462211
		Crew Max		SR/SR5/TRD	5TFDY5F1#FX462318
Tundra				Limited	5TFHW5F1#FX462440
			5.7L FFV	Platinum/1794	5TFAW5F1#FX462209
					5TFDW5F1#FX462128
	4WD	Double Cab Long Box	5.7L	SR/SR5/TRD	5TFCY5F1#FX018744
	4000		5.7L FFV		5TFCW5F1#FX018739
		Double Cab Regular Box Regular Cab Long Box	4.6L		5TFUM5F1#FX062406
			5.7L	Limited	5TFBY5F1#FX462376
			3.7 L	SR/SR5/TRD	5TFUY5F1#FX462362
			5.7L FFV	Limited	5TFBW5F1#FX462391
					5TFUW5F1#FX474914
			5.7L	SR/SR5/TRD	5TFPY5F1#FX462367
			5.7L FFV		5TFPW5F1#FX463212
		SUV	5.7L	Limited	5TDKY5G1#FS059139
	2WD			Platinum	5TDYY5G1#FS059138
				SR5	5TDZY5G1#FS059131
	4WD			Limited	5TDJY5G1#FS121016
Sequoia				Platinum	5TDDY5G1#FS126934
				SR5	5TDBY5G1#FS121013
			5.7L FFV	Limited	5TDJW5G1#FS120886
				Platinum	5TDDW5G1#FS120802
				SR5	5TDBW5G1#FS120996



T-SB-0202-17

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
BD1626	R & R Outside Door Handle No. 2, 1 Door	0.2			
BD1626A	R & R Outside Door Handle No. 2, 2 Doors	0.3	69210-0C010 69210-0C020	97	83
BD1626B	R & R Outside Door Handle No. 2, 3 Doors	0.4	69210-0C020	91	03
BD1626C	R & R Outside Door Handle No. 2, 4 Doors	0.5			

APPLICABLE WARRANTY

- This repair is covered under the Toyota Basic Warranty. This warranty is in effect for 36 months or 36,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

Parts Information

PART N	IUM BER	PART NAME	QTY	
PREVIOUS	NEW	PARI NAME		
69210-0C010				
69210-0C020	69214-0C010	Outside Door Handle Inner	1 per affected door	
69210-0C030-##				

Required Tools & Equipment

SPECIAL SERVICE TOOLS (SST)	PART NUMBER	QTY
Plastic Pry Tool Kit*	00002-06020-01	1

REQUIRED TOOLS & MATERIAL	QUANTITY
#2 Phillips Screwdriver	1
T30 Torx Driver	1
Thread Locking Compound (Permatex High Strength Threadlocker Red or Similar)	1

^{*} Essential SST.

NOTE


Additional SSTs may be ordered by calling 1-800-933-8335.



Repair Procedure


- 1. Remove the outside door handle cover.
 - A. Remove the hole plug.
 - B. Using a T30 Torx wrench, loosen the screw and remove the front door outside handle cover and the door lock key cylinder (if equipped) as a unit.

Figure 1. WITH Lock Cylinder

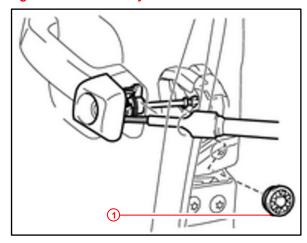

Hole Plug

Figure 2. WITHOUT Lock Cylinder

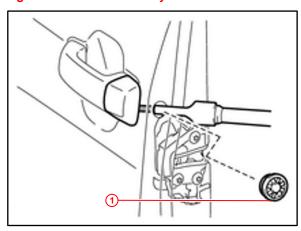


Hole Plug



Repair Procedure (Continued)

2. Remove the outside door handle assembly by sliding and pulling it in the direction indicated by the arrow as shown.

Figure 3.

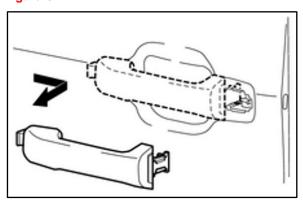

- 3. Disassemble the outside door handle.
 - A. Remove the screw from the outside door handle assembly previously removed from the vehicle.

NOTICE

- The screw is secured using thread locking compound. When attempting to remove the screw, use a high quality, #2 Philips screwdriver, with an undamaged tip.
- To minimize slipping and to reduce the risk of stripping the screw head, apply firm inward pressure while turning the screw.
- B. Remove the door handle inner from the outside door handle outer cover by rotating it in the direction indicated by the arrow as shown and discard the outside door handle inner.

Figure 4.

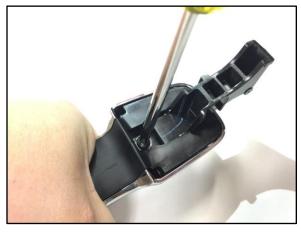


Figure 5.





Repair Procedure (Continued)

- 4. Reassemble the outside door handle.
 - A. Install the NEW door handle inner to the OLD outside door handle cover by engaging the two tabs.

Figure 6.



B. Seat the cover by rotating in the direction indicated by the arrow as shown.

Figure 7.



- C. Apply thread locking compound to the threads of the screw.
- D. Install the screw in the outside door handle.

Torque: 2.6 N*m (26.5 kgf*cm, 23 in*lbf)


TOYOTA

Outside Door Handle Sticking

Repair Procedure (Continued)

Install the outside door handle assembly by pushing it in the direction of the arrow as shown.


Figure 8.

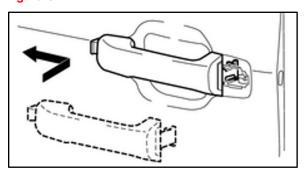

- 6. Install the outside handle cover.
 - A. Using a T30 Torx socket, install the outside handle cover and the door lock key cylinder (if equipped) as a unit.

Torque: 4.0 N*m (41 kgf*cm, 35 in*lbf)


Figure 9. WITH Lock Cylinder

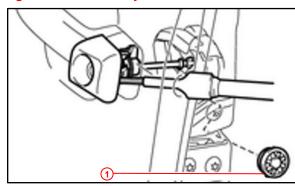

1 Hole Plug

B. Install the hole plug.

Figure 10. WITHOUT Lock Cylinder

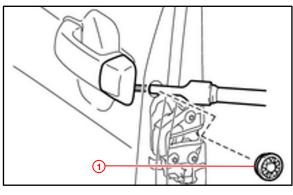

1 Hole Plug

7. Confirm the repair and proper vehicle operation.