

Tech Tip T-TT-0377-15

December 07, 2015

USA

Adjustment of Bluetooth Hands Free Sound Quality

Audio/Visual/Telematics

13CY Audio Systems

Cellular Communication

APPLICABLE VEHICLES

2014-2016	Camry	2014-2016	Highlander
2016	Prius	2014-2016	Tundra
2015-2016	Sienna	2015-2016	Avalon HV
2016	Mirai	2016	Land Cruiser
2015-2016	Prius V	2014-2016	4Runner
2015-2016	Sequoia	2016	RAV4 HV
2015-2016	Avalon	2014-2016	RAV4
2014-2016	Tacoma	2015-2016	Prius C
2014-2016	Highlander HV	2014-2016	Camry HV
2014-2016	Corolla		

CONDITION

Some customers may experience poor outgoing Bluetooth sound quality, this can occur for various reasons. Current multimedia systems are designed with the ability to adjust Bluetooth sound quality to compensate for Echo or excessive background noise.

RECOMMENDATIONS

Background on how to use Hands Free Voice Quality Settings

- There is a 4 digit code used to set the hands free sound quality
- The first digit sets noise level compensation
- The second digit sets Echo level compensation
- The 3 and 4th digits should always be 0.
- You can choose from 0 to 2 for each compensation. 0 is no compensation and 2 is maximum compensation.

The information below is found in the repair manual section: NAVIGATION / MULTI INFO DISPLAY: NAVIGATION SYSTEM: OPERATION CHECK

HOW TO ADJUST HANDS-FREE VOICE QUALITY AND VOLUME SETTING

- (a) Enter diagnostic mode.
- (b) Select "Function Check/Setting" from the "Service Menu" screen.
- (c) Select "HF Voice Quality Setting" from the "Function Check/Setting I" screen.
- (d) Hands-Free Voice Quality Setting (Voice Quality Type adjustment)

Expires on 12/07/2016


© 2015, Toyota Motor Sales, USA



Adjustment of Bluetooth Hands Free Sound Quality

USA

RECOMMENDATIONS

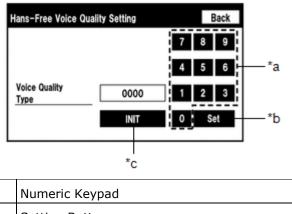

- *a Numeric Keypad

 *b Setting Button

 *c Reset Button
 - (1) If necessary, refer to the table below to adjust the voice quality type with the numeric keypad.
 - (2) When adjusting the settings, use the number pad on the screen to input the voice quality type according to the table.

Settings

	Joething J					
PARAMETER	TARGET PHENOMENON	VOICE QUALITY TYPE	POSITIVE EFFECT OF CHANGING VOICE QUALITY	NEGATIVE EFFECT OF CHANGING VOICE QUALITY		
A (Noise)	The other party hears background noise when listening to your voice.	1000	The amount of background noise the other party hears when listening to your voice is reduced.	The volume of voice the other party hears when listening to your voice may temporarily drop.		
B (Noise)	The other party hears a lot of background noise when listening to your voice.	2000	The amount of background noise the other party hears when listening to your voice is sharply reduced.	The volume of voice the other party hears when listening to your voice may temporarily drop.		
C (Echo)	The other party hears weak echoes.	0100	The amount of echo is reduced (low level).	Sound quality of the other party deteriorates (low level).		
D (Echo)	The other party hears strong echoes.	0200	The amount of echo is reduced (high level).	Sound quality of the other party deteriorates (high level).		



Adjustment of Bluetooth Hands Free Sound Quality

USA

RECOMMENDATIONS

Settings (When Multiple Phenomenon Occurred)

PARAMETER	TARGET PHENOMENON	VOICE QUALITY TYPE	POSITIVE EFFECT OF CHANGING VOICE QUALITY	NEGATIVE EFFECT OF CHANGING VOICE QUALITY
A+C	The other party hears background noise and weak echoes when listening to your voice.	1100	 The amount of background noise the other party hears when listening to your voice is reduced. The amount of echo is reduced (low level). 	 The volume of voice may drop temporarily. Sound quality of the other party deteriorates (low level).
A+D	The other party hears background noise and strong echoes when listening to your voice.	1200	 The amount of background noise the other party hears when listening to your voice is reduced. The amount of echo is reduced (high level). 	 The volume of voice may drop temporarily. Sound quality of the other party deteriorates (high level).
B+C	The other party hears a lot of background noise and weak echoes when listening to your voice.	2100	 The amount of background noise the other party hears when listening to your voice is sharply reduced. The amount of echo is reduced (low level). 	 The volume of voice may drop temporarily. Sound quality of the other party deteriorates (low level).
B+D	The other party hears a lot of background noise and strong echoes when listening to your voice.	2200	 The amount of background noise the other party hears when listening to your voice is sharply reduced. The amount of echo is reduced (high level). 	 The volume of voice may drop temporarily. Sound quality of the other party deteriorates (high level).

Adjustment of Bluetooth Hands Free Sound Quality

USA

RECOMMENDATIONS

HINT:

- The default value is "0000".
- Settings will be applied when the setting button is selected.
- If voice quality type values that are not in the table are input, the setting will not be applied and a positive effect may not be gained.
- If the quality of phone calls decreases due to the changed settings, return the settings to "0000" by pressing the "INIT" switch.

LINK	B	835	ENCES

This Tech Tip does not contain any link references