### **Technical Bulletin**



# SERVICE BULLETIN

 Classification:
 Reference:
 Date:

 AT19-009
 NTB19-072
 September 16, 2019

## TRANSMISSION RANGE SWITCH SERVICE INFORMATION

**APPLIED VEHICLES**: 2017-2019 Sentra (B17) 2015-2017 Juke (F15)

2013-2018 Altima (L33) 2015-2017 Quest (E52) 2019 Altima (L34) 2014-2019 Rogue (T32) 2016-2019 Maxima (A36) 2017-2019 Rogue Sport (J11) 2015-2019 NV200 (M20) 2015-2019 Murano (Z52) 2014-2017 & 2019 Taxi (M20T) 2013-2019 Pathfinder (R52)

**APPLIED ENGINE:** Sentra with MR16DDT (turbo) only

All other applied vehicles – all engines as equipped/available

**APPLIED** 

**TRANSMISSIONS:** RE0F10D, RE0F10E, RE0F10J, and RE0F10H

Does not apply to Hybrid models.

#### SERVICE INFORMATION

The transmission range switch of the **APPLIED VEHICLES** listed above is now available as a separate service part.

If the transmission range switch of an **APPLIED VEHICLE** is being replaced for any reason, it must be adjusted after its replacement.

 Refer to SERVICE PROCEDURE on page 3 for transmission range switch removal, installation, and adjustment.

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. **NOTE:** If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

## **REQUIRED ESSENTIAL TOOL**

## CVT Transmission Range Switch (PNP) J-52306

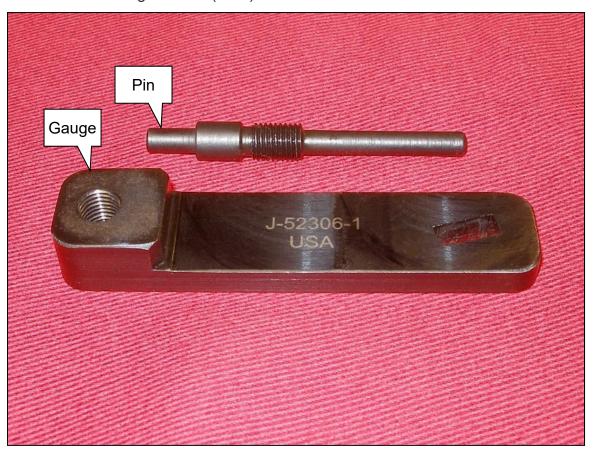


Figure 1

Additional quantities of Tool J-52306 may be purchased at Tech•Mate: 1-800-662-2001, or nissantechmate.com.

### SERVICE PROCEDURE

IMPORTANT: Follow all warnings, cautions, and notes in the Electronic Service Manual (ESM) when working under the hood, or on or near a Supplemental Restraint System (SRS), such as an air bag.

### **Access the Transmission Range Switch**

- 1. Shift the selector lever to the Park (P) position.
- 2. Gain access to the transmission range switch by loosening and moving, or removing the parts listed in **Table A**.
  - Some connectors, such as an ECM connector, may need to be disconnected.
  - Some models have removal and installation procedures in the ESM.

### Table A

	R	Lina N	23 July 18	10 00 m	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Market .		000	To de distribution of the second of the seco		X X	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	or wi	uio /
Air cleaner assembly or upper case	X	X			X	X		X	X		X	X		
Air duct hose	X	X			X			X			X	X		
Air inlet duct	X	X			X		X	X	X	X	X	X		
Engine room cover	X					X		X				X		
ECM/TCM harness retainers						X	X	X		X		X		
PCV hose	X					X		X	X			X		
Breather hose retainer					X									
Transaxle breather hose	X	Х			Х	X	Х	X				Х		
Upper core support cover	X	Х						X				Х		
Harness support retainer or clips	X	X				X	Х							
Battery & battery tray/bracket							Х			Х	х			
ECM/TCM bracket										Х				
Refer to the ESM *			X	X										

<sup>\*</sup> ESM: section TRANSMISSION & DRIVELINE > TRANSAXLE & TRANSMISSION > REMOVAL & INSTALLATION > TRANSMISSION RANGE SWITCH (PR25DD or KR20DDET).

## Example of a transmission range switch and CVT (your vehicle may differ)

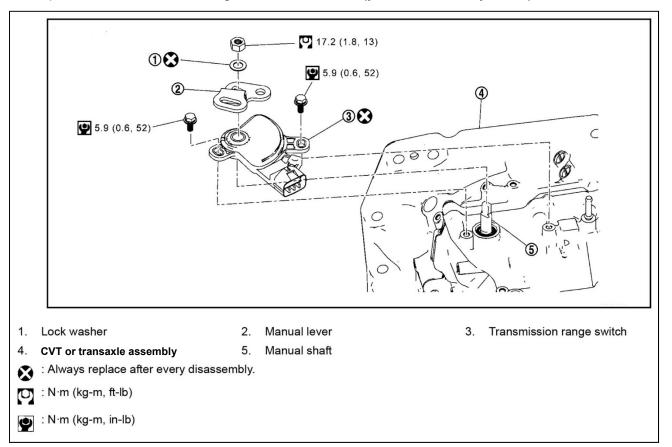


Figure 2

## Removal, Installation, and Adjustment - Transmission Range Switch

- 3. After the transmission range switch is accessible, remove the control cable nut.
- 4. Disconnect the transmission range switch connector.

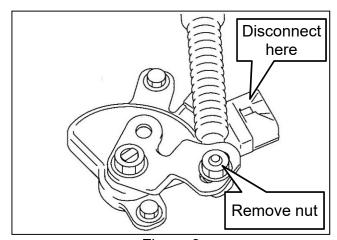


Figure 3

5. Remove the manual lever nut, the lock washer, and manual lever from the manual shaft.

### NOTICE

The lock washer is a one-time use part (this part is not to be reused after removal).

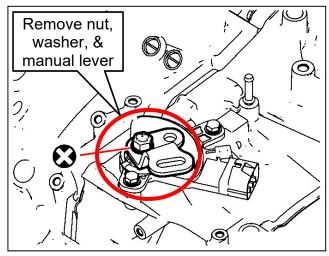


Figure 4

6. Remove the bolts, and then remove the transmission range switch.

### NOTICE

The transmission range switch is a one-time use part (this part is not to be reused after removal).

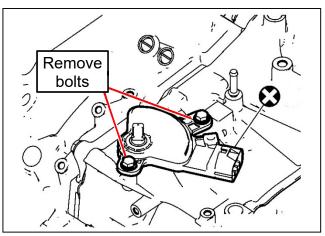


Figure 5

- 7. Install the replacement transmission range switch, and then install the bolts.
  - The bolts should be loose enough for the transmission range switch to pivot easily.
- 8. Install the manual lever, but do not install the nut or the lock washer.
- 9. Using the manual lever, shift the CVT into Neutral (N), and then remove the manual lever.
- 10. Assemble tool J-52306 (see Figure 6).

**HINT:** The pin can be threaded into the gauge from either opening. Make sure to insert and thread it into the side shown in Figure 6.

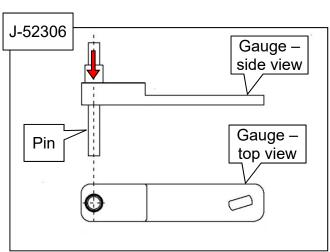


Figure 6

11. Set tool J-52306 onto the manual shaft while inserting its pin in the hole of the transmission range switch (see Figure 7).

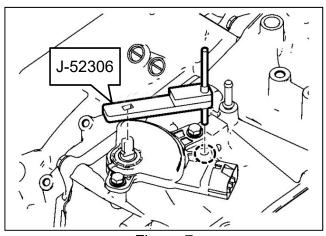


Figure 7

- 12. Tighten the bolts, and then remove tool J-52306.
  - Bolt torque: 5.9 N•m (0.6 kg-m,
     52 in-lbs)
- 13. Install the manual lever, nut, and new lock washer.
  - Nut torque: 17.2 N•m (1.8 kg-m, 13 ft-lbs)

### NOTICE

The lock washer is a one-time use part. Replace the old one with a new one.

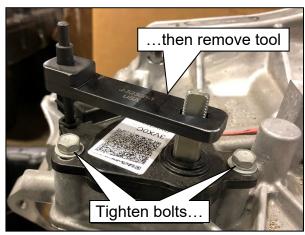


Figure 8

- 14. Reassemble the vehicle in reverse order of disassembly.
- 15. Verify:
  - a. The shift selector cannot be shifted out of Park without depressing the brake pedal.
  - b. The shift selector can be shifted out of Park with the brake pedal depressed.

### PARTS INFORMATION

DESCRIPTION	PART NUMBER	QUANTITY
PARK/NEUTRAL POSITION SWITCH (transmission range switch)	31918-29X0C	1
WASHER (lock washer)	08916-3401A	1

#### **CLAIMS INFORMATION**

### Submit a Primary Part (PP) type line claim using the following claims coding:

DESCRIPTION	PFP	OP CODE	SYM	DIA	FRT
Replace Park/Neutral Switch	(1)	JD56AA	ZE	32	(2)

- (1) Reference the Electronic Parts Catalog (EPC) and use the Park/Neutral Switch (31918-\*\*\*\*) as the Primary Failed Part (PFP).
- (2) Reference the current Nissan Warranty Flat Rate Manual and use the indicated Flat Rate Time (FRT).

### **AMENDMENT HISTORY**

PUBLISHED DATE	REFERENCE	DESCRIPTION				
September 16, 2019	NTB19-072	Original bulletin published				

7/7

NTB19-072