Seat belt wet, SRS light on

Topic number LI91.40-N-056663

Version 1

Design group 91.40 Seat belts, emergency tensioning retractors

Date 07-23-2013 Validity Model 906

with CODE (T16) Right load compartment sliding door

and/or

with CODE (T19) Left load compartment sliding door

Reason for change Reason for block

Complaint:

Seat belt is wet, SRS light is on.

Cause:

Water ingress at the B-pillar (sliding door side), which can cause contact problems in the connector of the emergency tensioning retractor.

Remedy:

Installing a cover on the opening in the B-pillar (inside) prevents water from entering the electrical connection of the emergency tensioning retractor.

The cover(s) are only to be installed on the side of the vehicle with the sliding door.

The following steps are to be performed:

- 1. Unclip B-pillar trim and place to one side (see: AR68.30-D-4700A).
- 2. Clean and dry electrical connection of emergency tensioning retractor (File 2, item 3).

NOTE: To do this, separate the connection (File 2, item 3) and use suitable tools.

3. Install cover (File 1, item 1 or 2) for emergency tensioning retractor (File 2, item 4).

NOTE: Clip the cover (File 3, item 1 or 2) into the opening (File 3, item 5) in the B-pillar.

- 4. The emergency tensioning retractor (File 2, item 4) should only be replaced (see: AR91.40-D-0630B) if the following conditions are met:
 - Fault codes cannot be erased.
 - Belt has an odor (moldy, musty).

Attachments	
File	Designation
1.jpg	New parts
2.jpg	Electrical connection of emergency tensioning retractor
3.jpg	Installation of covers

Symptoms

Body / Safety system / Airbag/Supplemental restraint system SRS / Indicator lamp / SRS indicator lamp / lit

Body / Body/Cab / Body sealing / Water entry

Body / Safety system / Seat belt / Seat belt indicator lamp / lit

Body / Safety system / Airbag/Supplemental restraint system SRS / Indicator lamp / Airbag / lit

Control unit/fault code				
Control unit	Fault code	Fault text		
SRSSupplemental restraint system (ARCADE906)	9243	R12/1 (Driver ETR [GUS] squib)-Short circuit to ground		
SRSSupplemental restraint system (ARIAN906)	9243	R12/1 (Driver ETR [GUS] squib)-Short circuit to ground		
SRSSupplemental restraint system (ARIAN906)	9244	R12/1 (Driver ETR [GUS] squib)-Test plug connection R12/1 (Driver ETR [GUS] squib).		
SRSSupplemental restraint system (ARIAN906)	9245	R12/1 (Driver ETR [GUS] squib)-Plausibility error		
SRSSupplemental restraint system (ARIAN906)	9250	R12/2 (Front passenger ETR [GUS] squib)-Resistance too large		
SRSSupplemental restraint system (ARIAN906)	9251	R12/2 (Front passenger ETR [GUS] squib)-Resistance too small		
SRSSupplemental restraint system (ARIAN906)	9252	R12/2 (Front passenger ETR [GUS] squib)-Short circuit to positive		
SRSSupplemental restraint system (ARIAN906)	9253	R12/2 (Front passenger ETR [GUS] squib)-Short circuit to ground		
SRSSupplemental restraint system (ARIAN906)	9254	R12/2 (Front passenger ETR [GUS] squib)-Test plug connection R12/2 (Front passenger ETR [GUS] squib).		
SRSSupplemental restraint system (ARIAN906)	9255	R12/2 (Front passenger ETR [GUS] squib)-Plausibility error		
SRSSupplemental restraint system (ARCADE906)	9244	R12/1 (Driver ETR [GUS] squib)-Test plug connection R12/1 (Driver ETR [GUS] squib).		
SRSSupplemental restraint system (ARCADE906)	9245	R12/1 (Driver ETR [GUS] squib)-Plausibility error		
SRSSupplemental restraint system (ARCADE906)	9250	R12/2 (Front passenger ETR [GUS] squib)-Resistance too large		
SRSSupplemental restraint system (ARCADE906)	9251	R12/2 (Front passenger ETR [GUS] squib)-Resistance too small		
SRSSupplemental restraint system (ARCADE906)	9252	R12/2 (Front passenger ETR [GUS] squib)-Short circuit to positive		
SRSSupplemental restraint system (ARCADE906)	9253	R12/2 (Front passenger ETR [GUS] squib)-Short circuit to ground		
SRSSupplemental restraint system (ARCADE906)	9254	R12/2 (Front passenger ETR [GUS] squib)-Test plug connection R12/2 (Front passenger ETR [GUS] squib).		
SRSSupplemental restraint system (ARCADE906)	9255	R12/2 (Front passenger ETR [GUS] squib)-Plausibility error		

XENTRY


Parts							
Part number	ES1	ES2	Designation	Quantity	Note	EPC	Other ma- ke part
A 906 691 00 00			Cover	1	Cover (1) for left B-pillar. For vehicles with code (T19) Left load compartment sliding door.	X	
A 906 691 01 00			Cover	1	Cover (2) for right B-pillar. For vehicles with code (T16) Right load compartment sliding door.	X	

WIS-References			
Document number	Title	Note	Allocation
AR68.30-D-4700A	Remove/install trim on B-pil- lar		Remedy
AR91.40-D-0630B	Remove/install seat belt with emergency tensioning retractor	ONLY when the stated conditions (step 4) are met.	Remedy

Validity		
Vehicle	Engine	Transmission
Sprinter III	*	*

Attachme	ents							
----------	------	--	--	--	--	--	--	--

1.jpg:

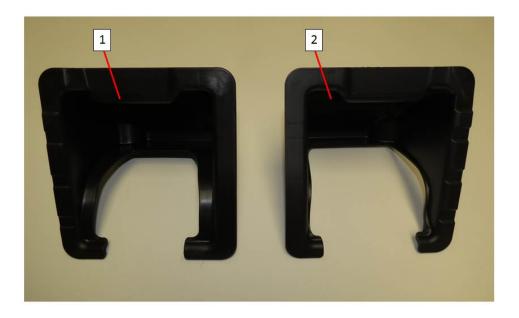

2.jpg:



3.jpg:



