

## Mack Chassis " Air Restriction Light On " In The Cluster



> Internal Content

### Related links and attachments

No links or attachments available

### PRE US17 MRU/LEU Models

The procedure to eliminate the Mack Chassis " Air Restriction Light On " seen in the cluster is to confirm that the parameter - **YYT = enable**.

If there is NO parameter **YYT** available refer to the following instructions:

1. Using the correct schematic locate the " Air Restriction Light " connector and add a jumper harness.
2. Then locate the correct fuse location and add the fuse.
3. Confirm that the " Air Restriction Light " in the cluster is no longer illuminated.

### US17 and newer models

For the US17 and newer models the level 2 parameter RWN (Air Filter Restriction Activation Mode) Needs to be changed. Please open up a Tech Support case and add detailed description of the complaint as well as reference this CBR solution # [CBR-471](#).



Tags

[K00584524](#)

[AXLE BACK](#)

[AXLE FRONT](#)

[AIR RESTRICTION](#)



Feedback

[Give feedback](#) to help improve the content of this article