

## Remote Control Central Door Lock, Programming; Key Fob Cannot Be Programmed Or Does Not Work After Programming - Model Year 2018 And Newer



> Internal Content

Due to the ECU's extended power down time it is recommended to move the ignition switch to the drive position and remove battery power fuse to the central door lock module (at the time of this article's writing the fuse number is F84) 4 times as an alternative to cycling the ignition switch 4 times. Doing this will power down the system faster so this step can be completed within the 15 second time frame. The remaining steps are as follows.

**1.** The direction indicator lamps remain on and the system is now ready to be programmed.

Note: **The instrument cluster does not indicate programming mode.**

**2.** Press button 1 or 2 on the original remote control.

Note: **It is recommended that at least one remote control to be secured at all times, to avoid the replacement of the module-remote control pair, if both original remote controls are missing.**

Note: **This step is a security feature.**

**3.** The direction indicator lamps turn off for approx. 1 second to indicate that the module has recognized the original remote control.

Note: **No reprogramming is possible without an original remote control.**

**4.** Press button 1 or 2 on each remote control that is desired to be programmed.

**5.** The direction indicator lamps go out for approx. 1 second to indicate that the new remote control has been added.

**6.** To program the next remote control repeat Step 4. The system will exit programming status after 15 seconds if no additional remote

### Related links and attachments

No links or attachments available

controls are programmed. This is also the maximum time between activating the remote control within the programming cycle. The system will also exit after eight remote controls are programmed.

**7.** When the remote control returns to the 'Normal' mode, If no buttons are pressed, then the last remote control programmed, remains current for the system.

**Note:** Due to the security feature, all desired remote controls to be programmed must be programmed, before the programming mode is exited into the Normal mode. To add a new remote control and keep the previous ones, all steps must be taken again having all the controls ready. The module starts each programming process anew.



[CENTRAL DOOR LOCKS](#)

[CENTRAL DOOR LOCK PROGRAMMING](#)      [K10075112](#)



[Give feedback](#) to help improve the content of this article