



2021 VW Maintenance Schedule – Electric Models

MY 2021 Maintenance Intervals - USA

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals.

Service intervals in miles												
	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K
Minor Maintenance ¹⁾	X		X		X		X		X		X	
Standard Maintenance ²⁾		X		X		X		X		X		X
Additional Maintenance Items	Refer to the Additional Maintenance Items Table below											

¹⁾ First minor maintenance service at 10,000 miles or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 20,000 miles or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last standard maintenance service, whichever occurs first.

✓ all completed items

Minor Maintenance

- Battery, 12 Volt: Checking with battery tester if necessary
- Service interval display: Reset
- Tires: Check condition and wear pattern. Record tread depth
- Guided Fault Finding: Use the Vehicle Diagnostic Tester to check for, resolve, and clear any Diagnostic Trouble Codes that may be present

Standard Maintenance (Includes All Minor Maintenance Items)

- Battery, 12 Volt: Checking with battery tester if necessary
- Battery, High-voltage: Check charge level and charge as necessary
- Body Interior and Exterior: Check for corrosion
- Brake fluid: Check level depending on brake wear
- Brake Pads (Front and Rear): Check thickness and brake disc condition. Look for contact pattern and corrosion of brake discs
- Brake System and Shock Absorbers: Check for leaks and damage
- Charging cable: Check that the cable is present and check condition of the cable
- Coil Springs and Rubber Stop Buffers: Inspect for damage
- Cooling System: Check frost protection and coolant level
- Exterior lighting: Check function of front and rear lights, headlights (adjust if necessary), automatic headlights (if equipped), turn signals, cornering lights, and hazard warning lights
- Guided Fault Finding: Use the Vehicle Diagnostic Tester to check for, resolve, and clear any Diagnostic Trouble Codes that may be present
- Headlight Washing System: Check function (if equipped)
- High-voltage Charging Sockets in Radiator Grille and Filler Cap: Inspect for dirt, debris, and damage
- High-voltage components and High-voltage Cables: Inspect for damage and correct routing and securing
- Horn: Check function
- Interior lighting: Check function of headliner, luggage compartment and glove compartment
- Motor and Motor compartment components (from above): Check for leaks and damage
- Motor and Motor compartment components (from below): Check related components including transmission, final drive, and drive axle boots for leaks and damage



Standard Maintenance (continued)

- Service interval display: Reset
- Suspension and Steering: Check ball joints, wheel bearings, drive axles, coupling rods, tie rod ends, and stabilizer bar rubber bushings for damage and excessive play.
- Test Drive: Check braking, steering, electrical, heating/ventilation systems, air conditioning, handling, and parking brake
- Tire pressure: Check LF _____ RF _____ LR _____ RR _____ Spare _____
- Tire Repair Kit: Check for damage and prior use
- Tires: Check condition and wear pattern. Record tread depth
- Tire Pressure Monitoring System: Calibrate to correct tire pressure settings
- Underbody: Check underbody protection, underbody trim panels, wire routing, and plugs for damage
- Warning Labels: Check that they are present
- Windshield: Check for damage
- Windshield Wiper/Washer System: Check for damage, function and adjust spray nozzle if necessary, fluid level, and freeze protection
- Wiper Blades: Bring into service position, check for damage, and check park position

Additional Maintenance Items	
<input type="checkbox"/> Brake fluid: Change	3 years after registration and then every 2 years regardless of mileage
<input type="checkbox"/> Dust and pollen filter: Replace	Every 40,000 miles or 2 years, whichever comes first.