

Classification:

COPYRIGHT@ NISSAN NORTH AMERICA, INC.

Reference: March 19, 2013 FA99-002a ITB99-001a

# STRUT AND SHOCK ABSORBER REPLACEMENT GUIDELINES

This bulletin has been amended. The Applied Vehicles section has been updated and revisions have been made throughout. Please discard earlier versions.

APPLIED VEHICLES: All 1990-2013 Infiniti vehicles except those listed below

This bulletin does not apply to:

1990-1995 Q45 (G50)

QX56 (Z62) – vehicles equipped with rear-leveling air suspension

#### SERVICE INFORMATION

This bulletin provides information to identify:

- A leaking strut or a shock absorber that qualifies for replacement under warranty.
- A strut or shock absorber that has slight oil seepage, a condition which is considered normal, does not affect strut/shock absorber operation or performance, and does not require replacement.
- A strut or shock absorber that should be replaced due to rod resistance/noise issues.

#### IMPORTANT:

- If strut/shock absorber leakage is diagnosed in one strut/shock absorber, do NOT automatically replace struts/shock absorbers on both sides. Replace the leaking strut/shock absorber only.
- In cases where diagnosis of a strut indicates part replacement and the labor operation states that it includes toe or alignment check/set, the alignment check/set must be supported with a printout from your alignment machine (i.e., "alignment printout").

Infiniti Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Infiniti dealer to determine if this applies to your vehicle.

### Inspect the Condition of Oil Leakage

If oil does  $\underline{\mathsf{NOT}}$  extend beyond the spring seat or upper 1/3 of shock:

 This is slight oil seepage. The strut/shock absorber should <u>NOT</u> be replaced.

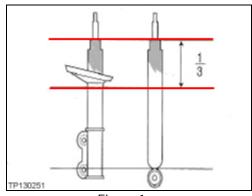


Figure 1

If oil does extend beyond the spring seat or upper 1/3 of shock:

• Use a finger to touch the oil that has extended beyond the spring seat or upper 1/3 of shock.


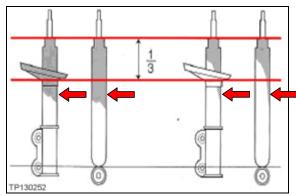


Figure 2

 If you confirm the oil layer is thick and contains large pieces of dust and debris, the strut/shock absorber should be replaced. Thick oil layer, large pieces of dust and debris

Figure 3

 If you confirm the oil layer is thin and does <u>NOT</u> contain large pieces of dust and debris, the strut/shock absorber should <u>NOT</u> be replaced.

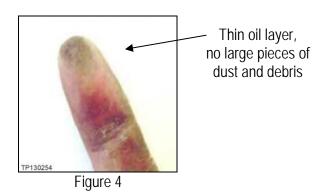

2/3 ITB99-001a

## Inspect the Strut/Shock Absorber Rod

- 1. Compress and extend the strut rod or shock absorber rod more than four (4) times by hand.
- 2. Confirm the resistance and sound is normal when operating.
  - If atypical resistance or sound is noted, the strut/shock absorber should be replaced.

ITB99-001a

3/3