

SERVICE BULLETIN



REFERENCE:	Nova Bus Manuals
SECTION:	16: Electrical System
RS N°:	MQR 7621-2280
EFFECTIVE IN PROD.:	N/A

APPLICATION DEADLINE: 2022JN10
CLAIM REFERENCE NUMBER: WB-5079

SUBJECT:	Alternator fail light coming on in service.		
JUSTIFICATION:	A 12V relay is installed instead of a 24V relay for the alternator ouput status signal.		

LEVEL	DESCRIPTION	DIRECT C	TIME	
LEVEL		LABOUR	MATERIAL	IIIVIE
1	Removal and Replacement of Relay.	Novabus	Novabus	0.25 hr
2	-	-	_	_

MATERIAL

QTY	PART N°	REV.	DESCRIPTION	REPLACES PART N°				
LEVEL 1	LEVEL 1							
1	N11613	_	RELAY 24V WITH DIODE	N82209				
LEVEL 2								
_	_	_	-	_				
SHOP SUPPLY								
_	_	_	-	_				

Note: N11613 ss to G1077774

Materials will be available within 32 days once your order has been placed. To order, please contact Prevost Parts by phone at 1-800-771-6682, by fax at 1-888-668-2555 or by email at prevostparts.commandes@volvo.com. Specify document number, quantity of parts required and shipping address.

DISPOSAL OF PARTS

REMOVED PARTS ARE:	DISCARDED*	RETAINED	* Dispose of the unused parts and the defective parts in
REMOVED PARTS ARE.	Yes	_	accordance with local environmental standards in effect.

REVISION HISTORY

REV.	DATE	CHANGE DESCRIPTION	WRITTEN BY
NR	2021AL26	Initial release	Devanand

APPROVED BY: PAGE 1 OF 4



SERVICE BULLETIN

CLIENT	ORDER	ROAD NUMBER		VIN (2NVY/4RKY)		OTV
CLIENT		FROM	то	FROM	то	QTY
Montgomery County - Maryland	LC33	194600	194600	S92J1K9777351	S92J1K9777351	1
Montgomery County - Maryland	LC34	1946001D	1946015D	S92J4L9777474	S92J2L9777490	15
San Juan Puerto Rico	LD01	2020-01	2020-01	L82J0L9777561	L82J0L9777561	1
San Juan Puerto Rico	LD32	2021-01	2021-10	L82J5L9777751	L82J6L9777760	10





Follow your internal safety procedures.

PROCEDURE

- 1.1. Park the vehicle on an even surface with transmission in neutral (N).
- 1.2. Turn the ignition switch to OFF position and engage the parking brake.
- 1.3. Set the master control switch in the STOP position (see figure 1).

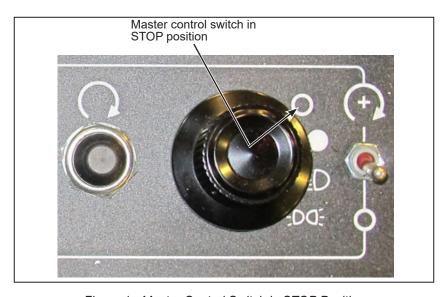


Figure 1 - Master Control Switch in STOP Position

1.4. Set the battery disconnect switch in the battery compartment to the OFF position (see figure 2).

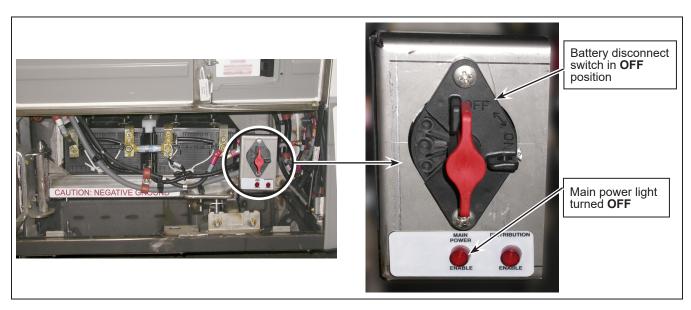


Figure 2 - View of Battery Disconnect Switch



1.5. Locate the 12V relay at position +IB RL99AH1 inside the interior back panel (see figure 3).

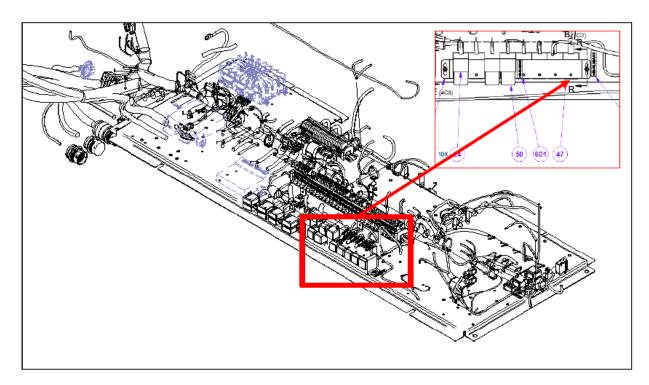


Figure 3 - Interior Back Panel

- 1.6. Remove the 24V relay N82209 and replace it with a N11613 relay.
- 1.7. Close the rear panel and test the bus (the alternator tell tale light should not be lit).
- 1.8. Return the bus to service. ❖