

## KITCHEN AND BATH

**Purpose**

This document outlines the procedures for low water flow for Flow Max Faucets.

**Safety****⚠ WARNING**

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

**⚠ CAUTION**

Moving parts can pinch, crush, or cut. Keep clear and use caution.

**Resources Required (Depending on model, not all resources are needed)**

- Pliers
- Small slotted screwdriver
- Towel or rag

**Procedure**

Aerator styles may differ, depending on faucet model.

- Screw-on head (Fig. 1A) see page 2.
- Pull down head (Fig. 2A) see page 3.
- Snap-in head (Fig. 3A) see page 4.


Fig. 1



Fig. 2



Fig. 3

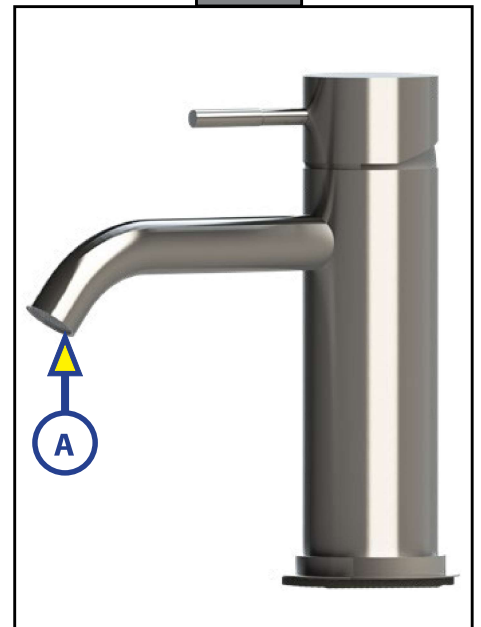

## KITCHEN AND BATH

Screw-On Head

**NOTE:** The head is screwed on hand tight. With build-up of mineral deposits and debris, pliers may be needed to remove the faucet head.

1. Remove the head by unscrewing from neck (Fig. 4).

**NOTE:** If pliers are needed, place a towel over the head to protect from any damage from the jaws of the pliers.

2. Remove the aerator from the head.
3. Separate the aerator and screen.
4. Rinse aerator and screen under water to clean any debris or build-up.
5. Reattach and tighten head.

Fig. 4



**NOTE:** If there is a leak from the aerator when the faucet is on, it is possible that the aerator may not be installed correctly. Remove the aerator and reinstall.

## KITCHEN AND BATH

Pull-Down Head

1. Pull the nozzle down (Fig. 5) and unscrew from the connector.
- NOTE:** Be sure to secure the hose from retracting back into neck.
2. Slide the connector up to access the rubber washer/screen.
  3. Remove the rubber washer/screen from the hose by pulling off with by hand.
  4. Rinse washer/screen under water to remove any debris or build-up.
  5. Reattach rubber washer/screen.
  6. Pull the connector down so the rubber washer/screen seats securely inside.
  7. Reattach the nozzle to nozzle connector and tighten.

Fig. 5




**NOTE:** If there is a leak from the aerator when the faucet is on, it is possible that the aerator may not be installed correctly. Remove the aerator and reinstall.

## KITCHEN AND BATH

Snap-In Head

1. Remove the aerator from the neck (Fig. 6A) with a small slotted screw driver by placing the edge into the tabs (Fig. 6B) gently prying the aerator from the neck.
2. Separate the aerator and screen (Fig. 6C).
3. Rinse aerator and screen under water to remove any debris or build up.

Fig. 6

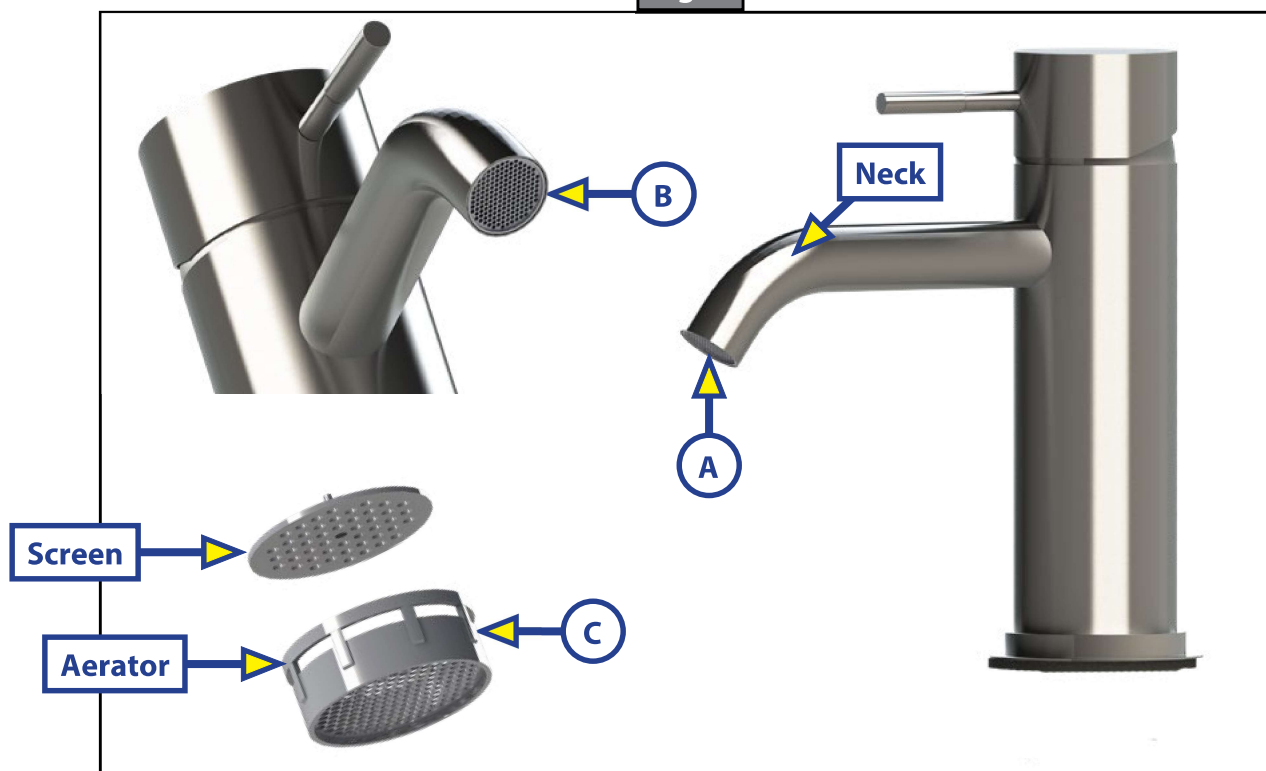

4. Reinsert aerator and screen by pressing the aerator back into the neck.

**NOTE:** If there is a leak from the aerator when the faucet is on, it is possible that the aerator may not be installed correctly. Remove the aerator and reinstall.