

Bearing cap L01 can drop into the transmission

Topic number	LI27.40-P-073393
Version	1
Function group	27.40 - Housing
Date	8/5/21
Validity	Model series 177; 247; 118_with_724.10x
Reason for change	

Complaint

The customer might complain about the following:

- Transmission does not shift (This complaint can happen at any speed)
- Transmission does not shift into reverse.

In both cases, the vehicle will go into limp home and can be driven to the Workshop.

Attachments	
File	Description
Lagrdeckel L01.pptx	

Cause

Bearing cap L01 can drop into the transmission

Remedy

If a concern occurs, contact product support

Bearing cap replacement part A 247 371 17 00 is blocked, because replacing the bearing cap does not resolve the concern.

WIS-References		
Document number	Title	Note
ar2710p0510mfa	Disassemble/assemble transmission	Only a transmission replacement is currently possible

Symptoms
Power transmission > Function > Jolting/shuddering during start-off
Power transmission > Function > No power flow
Power transmission > Function > Vibrates

XENTRY TIPS

Operation numbers/damage codes				
Op. no.	Operation text	Time	Damage code	Note
			2702P04	