



**IMPORTANT SERVICE
INFORMATION FOR:**

- ✓ SERVICE MANAGER
- ✓ SERVICE ADVISOR
- ✓ TECHNICIAN
- ✓ PARTS DEPARTMENT
- ✓ WARRANTY PERSONNEL

BULLETIN NUMBER:
IB22-J-001

ISSUE DATE:
MARCH 2022

GROUP:
ENGINE

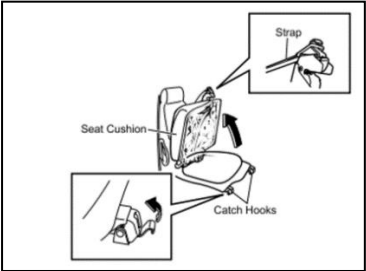 
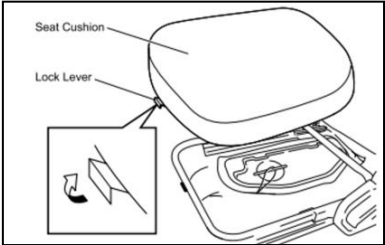 
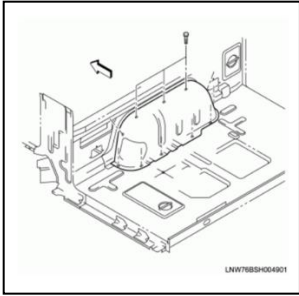 

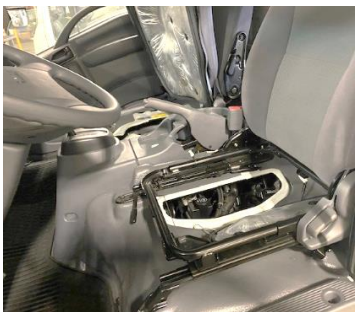 

N-SERIES CREW CAB ENGINE ACCESS

AFFECTED VEHICLES

- 2011MY - Current Isuzu N-Series Crew Cab Vehicles

INFORMATION

On Isuzu N-Series Crew Cab Models, most engine and engine driven components for on-vehicle service, both for gasoline and diesel engines, can be accessed through the interior of the cab. There are 3 access points to create space for service and maintenance. The 3 access points are:

		
		
Passenger Front Seat (Access the front of the engine and radiator)	Driver Front Seat (Access the front of the engine, power steering pump, vacuum pump)	Rear Seat Access (Access for intake manifold, rear of engine, front of transmission)

Detailed information is now available in the Crew Cab section of all applicable Workshop Manuals (WSM). Please review the specific WSM for your vehicle for further details.