




# Eaton Endurant Shift Pad Corrected Schematic



## > Internal Content

A limited amount of published information regarding the Eaton Endurant shift pad is available. When troubleshooting wiring between the Eaton Endurant shift pad to Transmission ECU please use the schematic below.

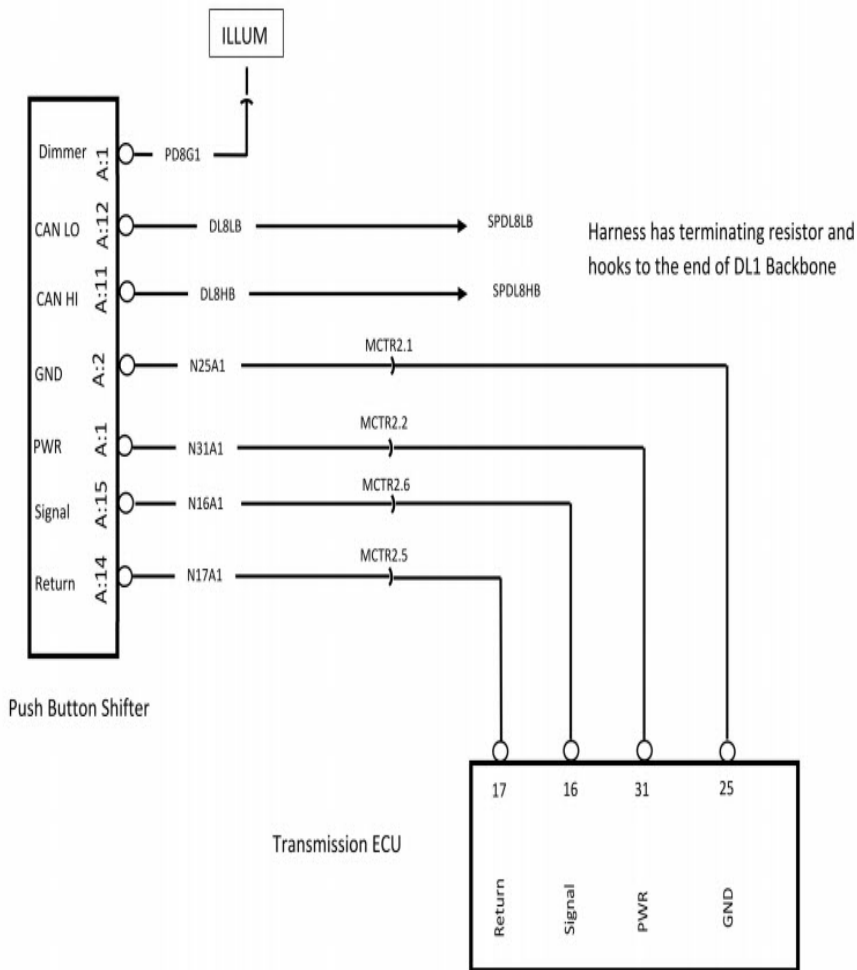

Driver Interface Type (VCP Parameter 79 / ACN 19) = 3

Neutral Output Signal (VCP Parameter 96 / ACN 42)=1

### Related links and attachments

No links or attachments available



### Feedback

[Give feedback](#)

to help improve the content of this article