



Mack Chassis - Accessory / Auxiliary Connection Points (Power/Ground Points) - Anthem, Pinnacle, Granite - Model Year 2018 And Newer



> Internal Content

Six Accessory Plugs are located in the dash. There are two plugs located at the Fuse and Relay Center (FRC), one for ignition and one for battery power, and four additional plugs located inside the access panel on the underside of the dash to the left of the steering column.

A. Determine which connector(s) will be used and remove the correct access panel. The connectors under the dash by the steering column are shown below. The connectors in the FRC are identical:



B. Install a compatible connector onto the accessory wire(s):

Part	Description	Volvo PN	Vendor PN	QTY
Delphi 2P 280 Series MP US	Connector	25159660	12034343	1
2.0/1.0 280 MP F US Terminal (Cavity A)	Terminal	25168132	12066214	1
0.8/0.5 280 MP F US Terminal (Cavity B)	Terminal	25096383	12034046	1

Live UI || the fuse that corresponds to the connector used. The correct fuse for each connector is printed on a harness label by the connector as shown

below:



 Tags

- [k63700284](#)
- [cu15](#)
- [cu12 cng](#)
- [cu9 cng](#)
- [cu9](#)
- [mack](#)

Related links and attachments

No links or attachments available

 **Feedback**

[Give feedback](#)

to help improve the content of this article