HYUNDAI Technical Service Bulletin

GROUP	NUMBER
BODY ELECTRICAL	22-BE-004H
DATE	MODEL(S)
JULY, 2022	ALL

SUBJECT: IAU/IBU/BLE LEARNING AFTER PARTS REPLACEMENT

Description: This bulletin provides information on the learning procedure after IAU (Identity Authentication Unit), IBU (Integrated Body Control Unit), and/or BLE (Bluetooth Low Energy) unit(s) replacement.



Applicable Vehicles:

Digital Key equipped Hyundai Models 2022MY or earlier.

Warranty Information:

Normal warranty applies.

Service Procedure:

1. Collect PIN information from Hyundai Tech Info website that will be used for programming in later steps.

2. Select **Search Key/Pin Code** after entering VIN information and record New PIN information.



Circulate To: General Manager, Service Manager, Sales Manager, Parts Manager, Warranty Manager, Service Advisors, Technicians, Body Shop Manager, Fleet Repair

- 3. Connect VCI and confirm VIN has been updated on GDS.
- 4. Select **SW Management.**



5. Scroll down to **Identity Authentication Unit.**

NOTICE

Both "IAU-IBU learning" and "IAU-BLE learning" must be done if replacing either IAU, IBU, or BLE units.

S/W Management		I Home Official	Versie 😈 L
Systems Components	Unfold All	S/W Management	
Engine Control		Systems Components	Unfold All
System Identification		Driver Door Module	1
Resetting Adaptive Values			
Auto Detected Configuration Reset		Head Up Display	(
Read VIN		Identity Authentication Unit	đ
Write VIN	8	System Identification	•
Evap. Leakage Test		Neutralization Mode	Ξ
 ISG TEST(Option) 	8	Status Information	E
ETC TEST(Option)	8	IAU - IBU Learning Function	8
 Leakage test for the evaporative gas system 		IAU - BLE Learning Function	8
Integrated Thermal Module Coolant Filling Mode		Card Key Registry Mode Activation	8
CVVD learning		Integrated Body Control Unit-BCM	9
ECU Mapping Verification	Ξ	Integrated Body Control Unit-IMMO	4
Automatic Transaxle	۲	Integrated Body Control Unit-SMK	6
E-Shifter		Integrated Body Control Unit-TPMS	8
SBW Control Unit (SCU)	۲	Multi Function Switch	đ
ABS/ESC		Mood Lamp Module	(
Front Radar	e l	Bower Sort Medule	a

6. Select **System Identification** and take a screenshot of the System Identification.



7. Select **Status Information** & take a screenshot (Replacement parts should be in Virgin State).

NOTIC	E
State	Description
Virgin	Initial state
Learnt	Learning completed state
Neutralized	Neutral state

8. Select **Neutralization Mode** and follow directions to neutralize both IAU & IBU.

NOTICE

PIN Code retrieved in Step 2.

	Unfold All	
Fingerprint Module	۲	
Face Recognition Unit		
Identity Authentication Unit	•	
System Identification		
Status Information		
Learning Mode		
Neutralization mode Card Key Registry Mode Activation		
Variant Coding		
 Variant coding (BackUp & Input) 		
 EOL variant coding (EOL code input) 		
HOME Online Identity Authentication Unit VCI	* 🔫 🖂	
S/W Management		
Status Information		
• [IAU Status Info]		
* This applies only to the 'cigital key teaching' among the teaching	functions.	
Item State		
IAU Status VIRGIN		
IBU Status VIRGIN		
	••*	
(Related parts : IAU, IBU) * Becaue neutralization is not required when the IAU or the IBU Is		
with a new one, conduct only the IAU-IBU teaching function. "IBU neutralization" applies only to the digital key teaching among functions. •[Condition]	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. 18U neutralization' applies only to the digital key teaching among functions. I (Condition) 1.10 OFF 2. Generation leave at P	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. 1980 neutralization' applies only to the digital key teaching among functions.	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. 19U neutralization applies only to the digital key teaching among functions.	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. 'IBU neutralization' applies only to the digital key teaching among functions. • [Condition] . Gendition] 2. Gensriht lever at P When ready, select a menu.	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. 'IBU neutralization' applies only to the digital key teaching among functions. • [Condition] . 1.60 OFF 2. Gesarihit lever at P When ready, select a menu.	replaced the IBU	
with a new one, conduct only the IAU-IBU teaching function. "IBU neutralization applies only to the digital key teaching among functions. = [Condition] . 1.00 FF 2. Genarisht lever at P When ready, select a menu.	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. "IBU neutralization" applies only to the digital key teaching among functions.	ireplaced the IBU	
with a new one, conduct only the IAU-BU teaching function. "BU neutralization applies only to the digital key teaching among functions.	replaced the IBU	
with a new one, conduct only the IAU-BU teaching function. "BU neutralization applies only to the digital key teaching among functions.	Ineplaced the IBU	nt
with a new one, conduct only the IAU-BU teaching function. "BU neutralization applies only to the digital key teaching among functions.	I replaced the IBU	nt
with a new one, conduct only the IAU-BU teaching function. "BU neutralization applies only to the digital key teaching among functions.	replaced the IBU Total S/W Management Neuroinstantisation Mode + [IBU resultration mode] Entry the IPN and the VIN and click the INME	at nt
with a new one, conduct only the IAU-BU teaching function. "BU neutralization applies only to the digital key teaching among functions.	In replaced the IBU Addates th	nt ton.
with a new one, conduct only the IAU-BU teaching function. "BU neutralization applies only to the digital key teaching among functions.	In replaced the IBU TONE THE MADE Advancements Note: State of the IBU Note: State of the IBU Advancements Note: State of the IBU Advancements Note: State of the IBU and Click the ISM but Click the ISM and the VBL and Click the ISM but Click the ISM advancements Note: Take a cure in injuting the FIB and th the veroing PIN or VIN five times may limit the up	tton. e VIB
with a new one, conduct only the IAU-IBU teaching function. 1BU neutralization applies only to the digital key teaching among functions. I [Condition] 1.10 OFF 2. Generalfit lever at P When ready, select a menu. Cancel Canc	In replaced the IBU Total S/W Management S/W Management S/W Management Notestalization Mode * [IBU reutralization mode] Ensor the PNI and the VNI, and click the [ON] but second PNI or UNI five times may limit the unit PNI :	at iton. e VIN e of f
with a new one, conduct only the IAU-IBU teaching function. TBU neutralization applies only to the digital key teaching among functions.	I replaced the IBU I I TOM S/W Manageme S/W Manageme S/W Manageme (IBU neutralization mode) Entor the PNN and the VNR, and click the [26] but a Caution: Take care in injuting the FNR and th the wrong PNH or VNR five times may limit the un PNH :	ton. e VIN e of f
with a new one, conduct only the IAU-IBU teaching function. 1BU neutralization applies only to the digital key teaching among functions.	I replaced the IBU TOUL VALUE S/W Management S/W Management S/W Management (I Government of the VHL and click the ISM plut a Caution: Take care in injurities the FNL and the the wrong PNL or VNL for times may limit the un PNL : VNL :	it ton. e VIN e of t
with a new one, conduct only the IAU-IBU teaching function. 1980 neutralization applies only to the digital key teaching among functions.	I replaced the IBU I I ROUT Soft Advectation to Soft Management (I BU replaced) (I BU replac	e the second sec
with a new one, conduct only the IAU-IBU teaching function. 1980 neutralization applies only to the digital key teaching among functions.	I replaced the IBU TOUT TWO Yours Advancements Note: Style Advanceme	et nt tton.
with a new one, conduct only the IAU-IBU teaching function. 1980 neutralization applies only to the digital key teaching among functions.	Is replaced the IBU Total Tot	et nt ston.

0K Cancel

Cancel

ок

9. Select **IAU-IBU Learning Function** and follow the steps.

When performing IAU-IBU or IAU-BLE learning, the digital key information previously stored in the vehicle is deleted.

Identity Authentication Unit	5
S/W Management	
IAU - IBU Learning Function	
[LAU-IBU teaching function] This function is for conducting LAU-IBU teaching, for setting the digital key system. It shall be also conducted when the IAU or the IBU is replaced with a new one. (Related parts : IAU, IBU) * This process applies only to the digital key teaching among the IAU and IBU	
functions. +[Condition] 1. IG GFF 2. Gearshift lever at P	
Click the [OK] button.	
OK Cancel	

.....

10. Select **IAU-BLE Learning Function** and follow the steps.

	identity re	
IAU - BLE Learning Function	ю s/w м	anagement
	I IAU - BLE Learning Function	
This function is for conducting IAU-BLE teaching, for setting the digital key pystem, It shall be also conducted when the IAU or the BLE is replaced with a new one. (Related parts : IAU, BLE) = Caution : Check on the connector connection condition of the BLE module. = [Condition] 1. I6 OFF 2. Gearchift tever at P 3. IAU teaching status : Learnt Click the [OK] button. Click the [OK] button. TORK Concel NUME Concel S/W Management Status Information = [IAU Status Info] * This applies only to the kigital key teaching' among the teaching functions. Rem State IAU Status LEARNT IBU Status LEARNT IBU Status LEARNT	• [IAU-BLE teaching function]	
ever one. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) (Related parts : AU, BLE) Caution : Check on the connector connection condition of the BLE module. (Related parts : AU, BLE) (Related parts : AU, Automatication blut (Related parts : Automatication blut (Related parts : Automatication blut (Related parts : Automatication blut (Related parts : Automatication blut (Related parts : Automaticatio	This function is for conducting IAU	BLE teaching, for setting the digital key
Iner one. (Related parts : IAU, BLE)	system. It shall be also conducted	when the IAU or the BLE is replaced with a
(Related parts : LAU, BLE)	new one.	
Caution : Check on the connector connection condition of the BLE module. (Condition] 1. IG OFF 2. Gearchift lever at P 3. IAU teaching status : Learnt Click the [OK] button. OK Cancel OK Cancel OK Cancel Identity Authentication bive *Clific S/W Management Status Information IAU Status Info] * This applies only to the 'sigital key teaching' among the teaching functions. Inom State IAU Status LEARNT IBU Status LEARNT IBU Status LEARNT	(Related parts : IAU, BLE)	
	· Caution : Check on the connector	r connection condition of the BLE module.
	• [Condition]	
Clarachift lever at P Address Learnit OK Cancel OK Cancel OK Cancel OK Cancel Idu Status Information Idu Status Information Idu Status LEARNT IBU Status LEARNT IBU Status LEARNT IBU Status LEARNT IBU Status	1. IG OFF	
Click the [OK] button. Click	 Gearshift lever at P IAU teaching status : Learnt 	
Click the [OK] button. OK Cancel OK Cancel Comment Co		
OK Cancel NUME Collective Monthly Authentication Box Vol. 8	Click the [OK] button.	
OK Cancel NUME Mainty Authoritication bith Normalian S/W Management Status Information * This applies only to the 'sigital key teaching' among the teaching functions. Rom State IAU Status LEARNT IBU Status LEARNT		
OK Cancel NVMC Usentry Authentication (bot) VCR S/W Management Status Information * [JAU Status Info] * This applies only to the 'cigital key teaching' among the teaching functions. Item State Item State IAU Status LEARNT IBU Status LEARNT		
OK Cancel PUMC Identity Authentication lont Inclusion S/W Management Status Info \$LUUS status Info Info Info * Tais applies only to the 'cigital key teaching' among the teaching functions. Info Info State		
OK Cancel TORE OREN Authentication Box TORE OREN Solution (AUS status Info] * This applies only to the 'cigital key teaching' among the teaching functions. Rem State IAU Status LEARNT IBU Status LEARNT IBU Status LEARNT		
OK Cancel OK Sales Information (AU Status Info]		
OK Cancel NUML CORRECT Mentalitation that the second of t		
OK Cancel RUGAL Concel RUGAL Softwards and the state sta		
	ок	Cancel
Induits Description S/W Management Status Information * [IAU Status Info] * This applies only to the logital key teaching' among the teaching functions. Item State IAU Status LEARNT IBU Status LEARNT		
S/W Management Status Information [IAU Status Info] * This applies only to the kightal key teaching' among the teaching functions. Rem State IAU Status LEARNT IBU Status LEARNT	HOME Unite Identity A	uthentication Unit
Status Information I (AU Status Info] * This applies only to the 'cigital key teaching' among the teaching functions. Rem State IAU Status LEARNT I BU Status LEARNT	а s/w м	anagement
* [IAU Status Info] * This applies only to the kightal key teaching' among the teaching functions. Rem State IAU Status LEARNT IBU Status LEARNT	Status Information	
[IAU Status Info] * This applies only to the kightal key teaching' among the teaching functions. Reem State IAU Status LEARNT IBU Status LEARNT		
* This applies only to the 'cigital key teaching' among the teaching functions. Item State IAU Status LEARNT IBU Status LEARNT	• [IAU Status Info]	
hem State IAU Status LEARNT IBU Status LEARNT	* This applies only to the 'cigital ke	v teaching' among the teaching functions.
Rom State IAU Status LEARNT IBU Status LEARNT		
IAU Status LEARNT IBU Status LEARNT	Item	State
IAU Status LEARNT		
IBU Status LEARNT	IAU Status	LEARNT
	IBU Status	LEARNT
ОК		ок

11. Recheck the Status Information (step #7) – both IAU/IBU should be in **LEARNT.**

12. Register the card key by selecting "**Card Key Registry Mode Activation**".

NOTICE

For detailed steps on registering NFC card key, please refer to TSB 20-01-031H-1

