

Service Category	General		
Section	Pre-Delivery Service	Market USA	Toyota Supports

#### Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2023	Prius	

#### Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

Customer retention and proper maintenance of vehicles are and have always been a major focus for Toyota. To help remind customers that regular service is essential to the proper maintenance of the vehicle, dealers are required to install a service reminder sticker before delivery. By doing this, customers will be reminded to return to your dealership for service. Your current service reminder sticker may be used. (See PDS Check Sheet item 8 of "Final Inspection and Cleaning.")

This bulletin contains the PDS procedures that apply specifically to 2023 model year Prius vehicles. A universal PDS <u>Check Sheet</u> that contains PDS steps that apply to all 2023 model year Toyota vehicles has been developed. To properly perform a complete PDS, you must complete all procedures contained in this TSB as well as the universal PDS <u>Check Sheet</u>.

In addition, if the vehicle is stored for over 30 days, be sure to follow <u>Long-Term Vehicle</u> <u>Storage Guidelines</u>.

# Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
001013	Pre-Delivery Service (PDS)	1.6	-	-	-

#### **Required Tools & Equipment**

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream ADVi*		TSADVUNIT	
Techstream 2.0		TS2UNIT	
Techstream Lite	ADE	TSLITEPDLR01	
Techstream Lite (Green Cable)	1	TSLP2DLR01	]

\*Essential SST.

### NOTE

- Only ONE of the Techstream units listed above is required.
- Software version 17.20.013 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

### Procedures


٠	D/C Cut Fuse Installation	4
•	Head Unit System Reset	5
•	Seating Position Control ECU Initialization*	5
•	Power Back Door Initialization	5
•	Customize ACC Function	6
•	Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation	6
•	Front License Plate and Mounting Bracket Installation*	9
•	Installation of Rubber Body Plugs	
•	Tire Pressure Warning System (TPWS) Initialization	12
•	Set Hybrid Radio Feature to OFF	12
•	Navigation — Set Date & Time by GPS	

\*If applicable.

### D/C Cut Fuse Installation

To minimize battery discharge, the D/C cut fuse (30A) has been removed and is stored in the engine compartment relay block. Install the D/C cut fuse (30A) and confirm ALL related Diagnostic Trouble Codes (DTCs) are cleared.



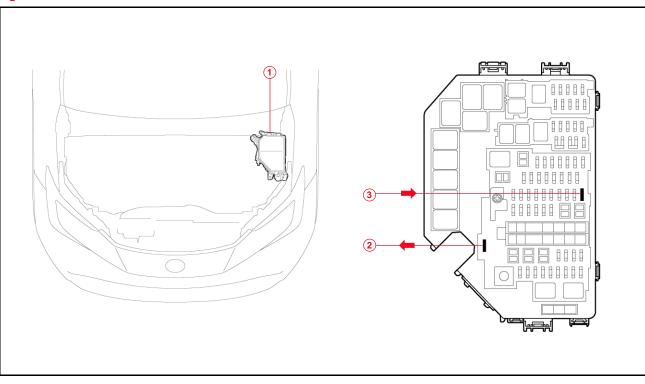

1	Relay Block
2	Remove D/C Cut Fuse (30A)
3	Install D/C Cut Fuse (30A)

# NOTE

With the D/C cut fuse (30A) removed, if ANY DTCs are detected when the ignition is turned on during transportation, use Global Techstream Software (GTS) to clear ALL DTCs AFTER ensuring that there are no malfunctions.

### Head Unit System Reset

Before selling a Toyota vehicle, confirm that the welcome screen with language options appears on the head unit display when the ignition is switched to the ON position. There may be instances where the welcome screen with language options may not properly appear on the head unit display.

If the welcome screen showing language options is not displayed, complete the following steps:

- 1. Select the Settings option (gear icon).
- 2. Scroll down and select the Info & Security option.
- 3. The System Reset dialogue box will appear. Select Reset to confirm the resetting of the system.
- 4. Confirm that the welcome screen with language options is now displayed.

### **Seating Position Control ECU Initialization**

Refer to the applicable Repair Manual for the seating position control ECU <u>initialization</u> <u>procedure</u> (procedure 2).

### **Power Back Door Initialization**

As a result of removal of the D/C cut fuse with the back door opened, the "automatic open and close" function of the power back door will be inoperative due to loss of the back door position memory stored in the computer. Therefore, it is necessary to initialize the power back door during PDS.

If the D/C cut fuse is removed with the back door closed, the initialization is not required, because the back door position memory is still stored in the computer. If the welcome screen showing language options is not displayed, complete the following steps:

- 1. Close the back door completely by hand.
- 2. Check that the back door fully opens and fully closes.
- 3. Check that the power door main switch is in the ON (Operative) position.
- 4. Check that the back door fully opens and fully closes by operating the power back door switch, the power back door closer switch, or the transmitter switch.

# **Customize ACC Function**

The pre-startup function detects when a user enters the vehicle and energizes the audio head unit (+BA) so that the multimedia system can quickly be used. This function is not enabled at the factory to reduce parasitic current draw in transit and storage. To enable this function, it is necessary to set the ACC customization function in the navigation display to OFF.

- 1. Turn the engine switch (power switch) to the ON position (ON mode).
- 2. Enter the following menus: Settings Vehicle Customization Utility ACC Customize.
- 3. Change the setting to OFF (toggle at left with gray background).


# Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation

 Remove the front and rear emergency towing eyelets from the front and rear bumpers by turning them counterclockwise.

#### NOTE

If it is difficult to loosen the emergency towing eyelets, use a steel bar.

Figure 2.

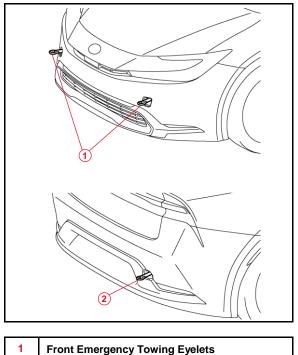

-	
2	Rear Emergency Towing Eyelet

NOTE

# 2023 Prius Pre-Delivery Service (PDS)

### Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation (continued)

2. Place one of the removed emergency towing eyelets into the luggage tray in the luggage compartment.

Dispose of the other removed emergency towing eyelets. Figure 3. B T 57  $\mathcal{V}$  $(\mathbf{1})$ 1 J 6- $(\mathbf{1})$ 

Α	Туре А	С	Туре С
В	Туре В	1	Emergency Towing Eyelet


# Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation (continued)

- Install the front AND rear emergency towing eyelet hole covers, which are stored in the glove compartment, onto the front and rear bumpers.
  - A. Insert the arrow-shaped part "A" of the front emergency towing eyelet hole covers into eyelet holes "B" as shown.

B. Install the front and rear emergency towing eyelet hole covers into the holes of the front bumper.

# NOTE

Make sure the front emergency towing eyelet cover is installed in the front, and the rear emergency towing eyelet cover is installed in the rear.

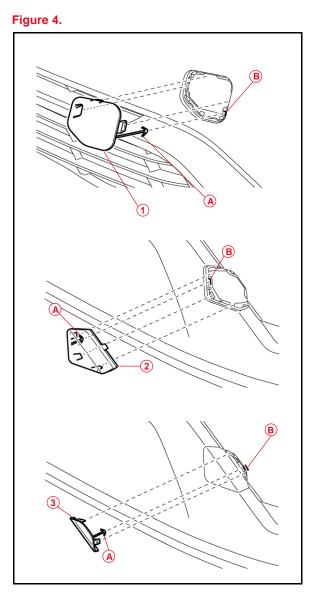

A	Arrow-shaped Part
в	Eyelet Hole
1	Front Emergency Towing Eyelet Hole Cover
2	Rear No. 1 Emergency Towing Eyelet Hole Cover
3	Rear No. 2 Emergency Towing Eyelet Hole Cover

Page 9 of 12

# 2023 Prius Pre-Delivery Service (PDS)

### Front License Plate and Mounting Bracket Installation


The front license plate bracket and two self-tapping screws are loaded in the luggage compartment at the assembly plant. Follow this procedure to install the front license plate bracket and front license plate in states where it is required by law.

1. Align holes "A" of the mounting bracket with the dimples on the front bumper cover and mark the location of holes "B" on the radiator lower grille.

#### NOTE

- Holes "A" are used for installation of the mounting bracket to the radiator lower grille.
- Holes "B" are used for the installation of the front license plate to the mounting bracket.



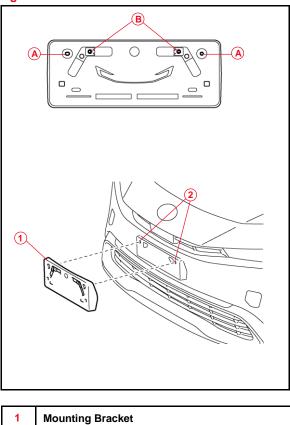

Dimples


2

### Front License Plate and Mounting Bracket Installation (continued)

2. Install the mounting bracket to the front bumper cover by attaching the two self-tapping screws into the dimples.

#### NOTICE

Do NOT overtighten the self-tapping screws.

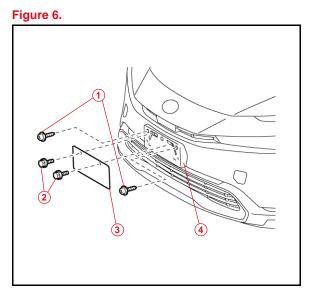


1	Self-tapping Screws
2	Bolts
3	Front License Plate
4	Mounting Bracket

3. Install the front license plate to the mounting bracket at holes "B" using two noncorroding bolts with the following dimensions:

Length: 15.0 mm (0.59 in.) Diameter: 6.0 mm (0.24 in.)


#### Figure 7.

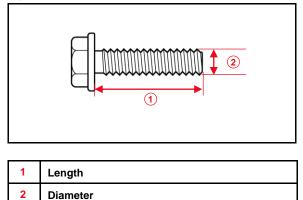

#### Installation of Rubber Body Plugs

- 1. Confirm the number of plugs in the glove box. If two plugs are present, perform substep 2A ONLY. If four plugs are present, perform substep 2A AND substep 2B.
- 2. Install plugs according to the following instructions by confirming the number of plugs in the glove box.
  - A. Install two plugs in the rear side member hole or rocker inner hole.
  - B. Install two plugs in the torque box hole or rocker inner hole.

#### Figure 8.

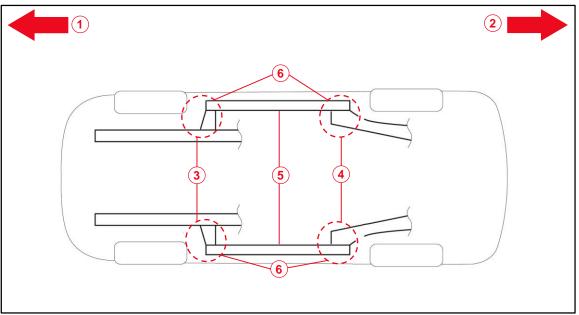

1	Front Side
2	Rear Side
3	Torque Box Hole or Rocker Inner Hole
4	Rear Side Member Hole or Rocker Inner Hole
5	Rocker Inner
6	Install Plug Here (if Applicable)

#### NOTICE

- The installation of these plugs is required to prevent rust.
- These plugs are stored in the glove box.
- The number of plugs may vary according to production locations in the same vehicle model.

Page 12 of 12

# 2023 Prius Pre-Delivery Service (PDS)

### Tire Pressure Warning System (TPWS) Initialization

Refer to the applicable Repair Manual for the TPWS <u>initialization procedure</u>. Note the spare tire does NOT have a TPWS sensor.

### NOTE

To adjust the tire pressure correctly when the outside temperature is significantly colder than shop temperature, perform a Health Check using Techstream and select the compensation tire pressure checkbox. Compensation pressures will display on the Health Check results screen. Adjust the tire pressure when the tires are cold.

### Set Hybrid Radio Feature to OFF

Without a Wi-Fi subscription, the customer will receive a "Subscription Required" pop-up while in weak broadcast radio signal areas. This pop-up notification may cause confusion to the customer. Therefore, it is necessary to toggle the Hybrid Radio feature to the OFF position.

- 1. Turn the engine switch (power switch) to the ON position (ON mode).
- 2. Navigate the following menus in the head unit: Settings Sound and Media Radio Hybrid Radio.
- 3. Ensure the Hybrid Radio feature is set to the OFF position.

### NOTE

The Enable Hybrid Radio feature is factory preset to the ON position.

### Navigation — Set Date & Time by GPS

Before selling a Toyota vehicle, it is necessary to turn the Set Date & Time by GPS setting to the ON position.

- 1. Turn the engine switch (power switch) to the ON position (ON mode).
- 2. Navigate the following menus in the head unit: Settings General Date & Time Set date & time by GPS.
- 3. Ensure the Set Date & Time by GPS function is set to the ON position.