




Preliminary Information

PIT5993 No Crank Due To Dead Battery / Battery Draw / Unwanted Alarm

Models

| Brand: | Model: | Model Years: | VIN: | | Engine: | Transmissions: |
|-----------|-----------------|--------------|------|-----|---------|----------------|
| | | | from | to | | |
| Cadillac | Escalade Models | 2021 - 2023 | All | All | All | All |
| Chevrolet | Suburban | 2021 - 2023 | All | All | All | All |
| Chevrolet | Tahoe | 2021 - 2023 | All | All | All | All |
| GMC | Yukon Models | 2021 - 2023 | All | All | All | All |

| | |
|----------------------------|--|
| Involved Region or Country | North America |
| Additional Options (RPO) | Theft-deterrent alarm system RPO UTT Or UTR |
| Condition | Some customers may comment on a low or dead battery, no crank due to a dead battery or unwanted alarm. |
| Cause | <p>These concerns could be caused by high resistance in the glass breakage loop, which is shown below with a dotted red line. The glass breakage loop consists of the rear window defogger grid and each rear quarter glass, which are all connected in series. Normally, the complete glass breakage loop should have less than 20 ohms of resistance to ground. If there is high resistance or a break at any place in this series circuit, it could cause the condition.</p> <p>Note: In some cases, the battery draw may only be duplicated if the vehicle is completely closed up (all door and hood latches tripped) and the vehicle is locked.</p> |

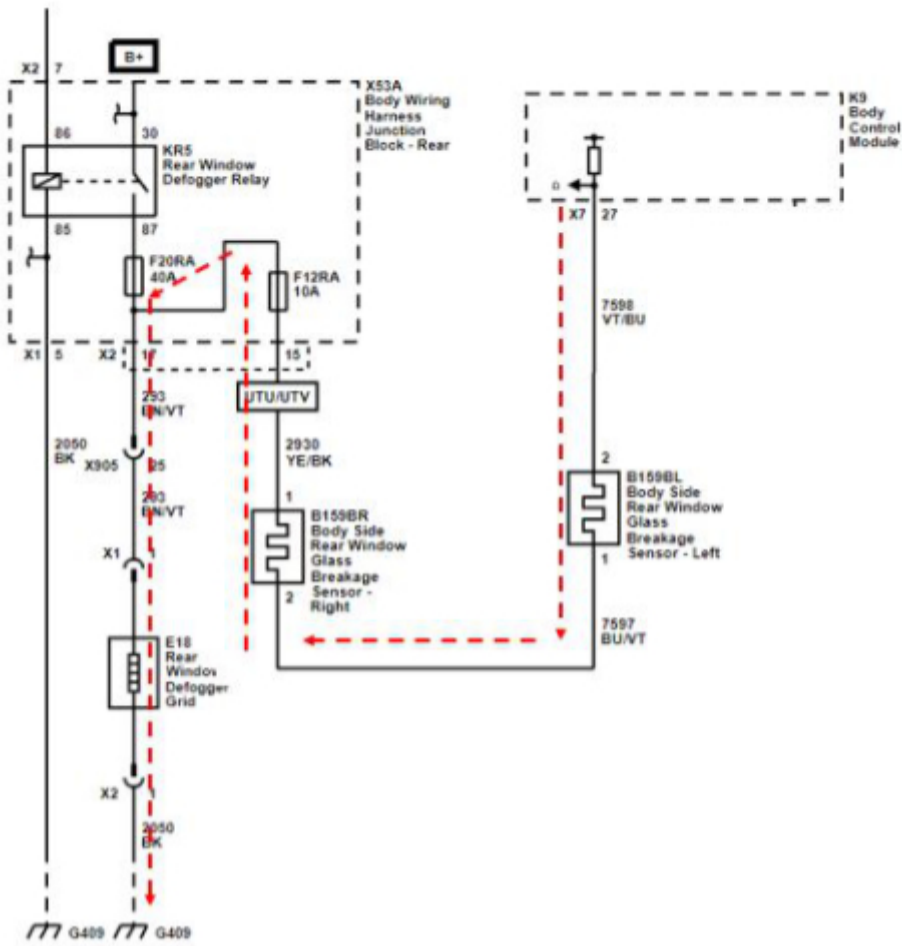

Correction:

To test the glass breakage loop, disconnect the battery and the BCM X4 and X7 connectors. Using the correct test probe (EL-38125-58) check for proper terminal tension at the BCM X7 terminal 27. If terminal tension is good then use an ohmmeter to check the resistance of the glass breakage loop to the BCM ground. Do this by connecting one lead of the ohmmeter to the BCM ground at connector X4 terminal 24 or 25 and the other ohmmeter lead to terminal 27 of the BCM X7 connector. Measure the resistance.

If the resistance to ground is greater than 20 ohms, then inspect the glass breakage loop for poor connections, which could occur at any point in the series circuit, shown above. The most common areas seen are the connections at either of the rear quarter glass assemblies.

If the resistance to ground is less than 20 ohms, then the loop resistance is within spec, but if you are dealing with an intermittent issue then inspect and manipulate the glass breakage loop connections/wiring to see if the resistance increases. Repair any points of high resistance.

Warranty Information

For vehicles repaired under warranty, please use the appropriate warranty labor operation based on the actual cause and repair.

Additional SI Keywords

draw lo low Parasitic

Version History

| | |
|----------|-------------------------|
| Version | 1 |
| Modified | 03/23/2023 -Created on. |



GENERAL MOTORS