

Outside door handle does not return to end position

Topic number	LI72.00-P-053016
Version	1
Design group	72.00 General
Date	01-18-2012
Validity	W166
Reason for change	
Reason for block	

Complaint:

The outside door handles on the front and/or rear doors no longer return automatically to the end position after actuation.

Cause:

Incorrectly installed shim between outside door handle and door shell cutout.

Remedy:

1. Remove door handle.
2. Loosen bolt of bearing bracket, see item 1, Figure 1.
3. Push bearing bracket towards the rear of the vehicle as far as the stop and retighten bolt.
3. Check position of shim in door and correct if necessary, see Figure 1 and Figure 2.
4. Install door handle.
5. Perform function test.

Attachments	
File	Designation
Bild1.jpg	Incorrectly positioned shim
Bild2.jpg	Correctly positioned shim

Symptoms

Body / Door handle / Are loose / Door/Flap / Door /

Body / Door handle / Jammed / Door/Flap / Door /

WIS-References

Document number	Title	Note	Allocation
AR72.10-P-2400GZ	Remove/install outside door handle on front door		Remedy
AR72.12-P-2410GZ	Remove/install outside door handle on rear door		Remedy

Validity		
Vehicle	Engine	Transmission
M (166)	*	*

Full model designation breakdown		
Vehicle	Engine	Transmission
166.004	651.960	722.908
166.023	642.826	722.903
166.024	642.826	722.903
166.055	276.955	722.906
166.057	276.955	722.906
166.058	276.955	722.906
166.073	278.928	722.909
166.074	157.980	722.905
166.074	157.980	722.931
166.074	157.982	722.905
166.074	157.982	722.931

Attachments

Bild1.jpg:

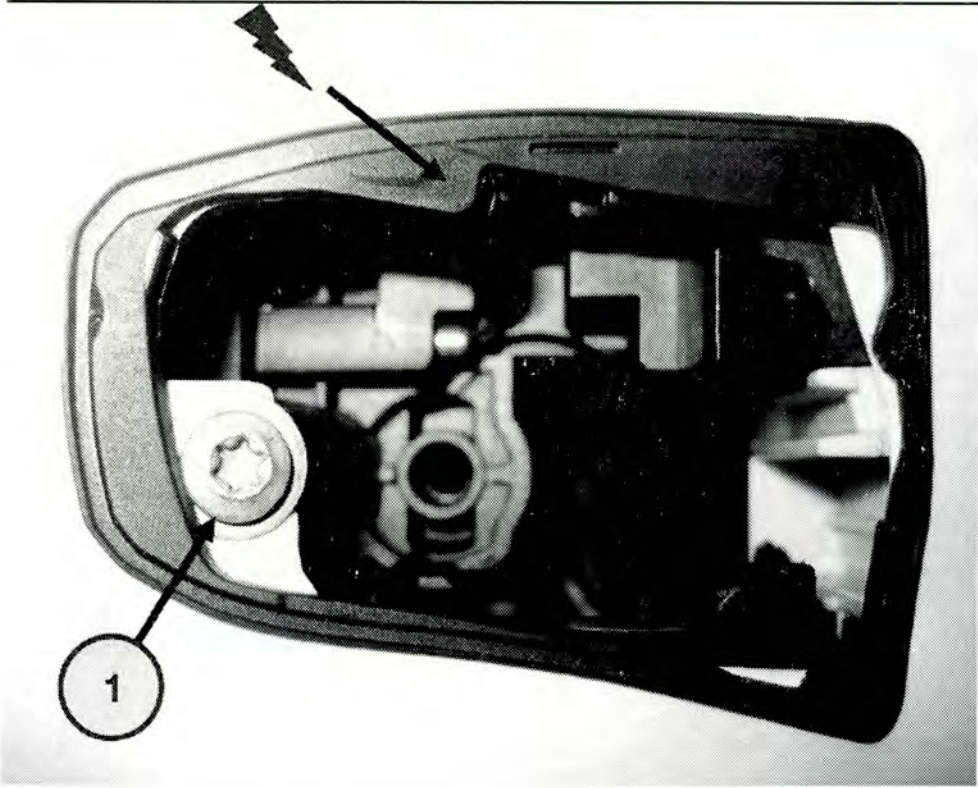


Bild2.jpg:

