# Vehicle jerks during gearchange, hard 1-2 and 2-3 shifts, torque converter lockup clutch (KüB) not engageable

Topic number LI27.20-P-051537

Version

Design group 27.20 Torque converter

Date 02-13-2012

Validity Model designation 212, 216, 218, 221,251 and 164 with

automatic transmission NAG2FE+ (identifiable by EHS

part no., starting with A 212 ...)

In combination with OM 642 LS up to transmission sequence no. 3.154.598 and M278 up to transmission sequence no. 3.166.389, OM651 100 kW up to transmission sequence no. 3.155.579, OM651 125/150 kW up to

transmission sequence no. 3.155.551.

Reason for change AR document on flushing transmission deleted.

### Complaint:

Vehicle jerks during gearchange or has hard or slipping shifts. In some cases the torque converter lockup clutch (KüB) cannot be actuated. The following fault codes may be stored in the transmission control unit: 2783, 0741, 0894, 0893, 0735, 0734, 0733, 0732, 0731, 0729, 0606, 076F Affects veh. up to production date 10.01.2011

#### Cause:

Torque converter lockup clutch (KüB) cannot be actuated due to a clogged filter in the KüB valve. Other valve filters, e.g. K1 control solenoid valve (Y3/8y2), may also be clogged with wear debris.

### Remedy:

Removal of EHS and removal of all valves from the EHS to evaluate the contamination of the valve filters. Please observe AR27.19-P-0212A.

Install repair filter A 221 277 00 00.

The filter is only valid for NAG2FE+ with OM 642 LS up to transmission sequence no. 3.154.598 and M278 up to transmission sequence no. 3.156.389, OM651 100 kW up to transmission sequence no. 3.155.579, OM651 125/150 kW up to transmission sequence no. 3.155.551.

Replacement of the torque converter is not necessary if this repair is performed.

Important: It must always be ensured that the valves are installed correctly, as each valve has a specific characteristic.

The transmission magnets must always be replaced.

Finally, re-adapt only the specific problem gearshifts.

### Symptoms

Automatic transmission / Power transmission / Automatic transmission - function / Limp-home mode /

Automatic transmission / Power transmission / Automatic transmission - function / General /

Automatic transmission / Power transmission / Shifts / Automatic transmission - function /

Automatic transmission / Power transmission / Automatic transmission - function / Slips /

Automatic transmission / Shifting is not performed or is delayed / Power transmission / Automatic transmission - function /

Power generation / Engine performance / Engine management / No/poor output /

Power generation / Engine performance / Engine management / Cuts off /

Power generation / Engine performance / Engine management / Poor acceleration /

Automatic transmission / Poor shift quality / Power transmission / Automatic transmission - function /

Control unit/fault code		
Control unit	Fault code	Fault text
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0893	Hydraulic fault in transmission (disengaging shift element does not disengage). ([VGS2_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0894	The gear is implausible or the transmission is slipping. ([VGS3_*])
EGS53 - Electronic transmission control (N15/3) (GLK (204), E (212))	0741	Actuation of the torque converter lockup clutch is not possible.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0894	The gear is implausible or the transmission is slipping. ([VGS2_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0741	Actuation of torque converter lockup clutch is not possible. ([VGS3_*](not(ECU1_DV_HEX@04A1),not(ECU1_DV_HEX@04A2),not(ECU1_DV_HEX@04A3)))
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0606	This fault code relates to a bogus fault. ([VGS3_*](not(ECU1_DV_HEX@04A1),not(ECU1_DV_HEX@04A2),not(ECU1_DV_HEX@04A3)))
ETC-Electronic transmission control (EGS3) (CL (216),S (221))	0741	Actuation of torque converter lockup clutch is not possible.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	2783	The friction power of the wet start-off clutch (NAK) is too high. ([VGS3_*](ECU1_DV_HEX@04A1)or(ECU1_DV_HEX@04A2) or(ECU1_DV_HEX@04A3))
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0893	Hydraulic fault in transmission (disengaging shift element does not disengage). ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0729	The gear is implausible or the transmission is slipping.(6. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	076F	The gear is implausible or the transmission is slipping.(7. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0733	The gear is implausible or the transmission is slipping.(3. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0741	Actuation of torque converter lockup clutch is not possible. ([VGS2_*])

### XENTRY

ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0741	Actuation of the wet start-off clutch (NAK) is not possible. ([VGS3_*](ECU1_DV_HEX@04A1)or(ECU1_DV_HEX@04A2) or(ECU1_DV_HEX@04A3))
ETC-Electronic transmission control (EGS3) (CL (216),S (221))	2783	The torque converter lock-up clutch has excessive power consumption.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0731	The gear is implausible or the transmission is slipping.(1. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0732	The gear is implausible or the transmission is slipping.(2. gear) ([VGS3_*])
EGS53 - Electronic transmission control (N15/3) (GLK (204), E (212))	2783	The input power at the torque converter lockup clutch is too high.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0734	The gear is implausible or the transmission is slipping.(4. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0606	Component Y3/8n4 (Fully integrated transmission control (VGS) control unit) is defective. ([VGS3_*](ECU1_DV_HEX@04A1) or(ECU1_DV_HEX@04A2)or(ECU1_DV_HEX@04A3))

Parts							
Part number	ES1	ES2	Designation	Quantity	Note	EPC	Non- EPC
A0019897803	09	11	ATF fluid	1	As required: ES1= 1 Liter ES2= 5 Liter		Х
A 220 277 09 98			Control solenoid valve	1	Valve with rising characteristic (blue cap)	Х	
A 220 277 10 98			Control solenoid valve	1	Valve with falling characteristic (black cap)	Х	
A 221 277 00 00			Repair filter	1	Only for NAG2FE+ with OM 642 LS with transmission sequence no. 3.154.599 and M278 with transmission sequence no. 3.166.390, OM651 100 kW up to transmission sequence no. 3.155.579,OM651 125/150 kW up to transmission sequence no. 3.155.551	X	

Work ur	nits			
Op. no.	Operation text	Time	Damage code	Note
			27287 D1	Torque converter lockup clutch

### XENTRY

WIS-References			
Document number	Title	Note	Allocation
AR27.19-P-0212A	Remove/install control sole- noid valves of electric con- troller unit	Transmission 722.9	Remedy

# Vehicle jerks during gear change, hard 1-2 and 2-3 shifts, torque converter lockup clutch (KüB) not engageable

Topic number L127.20-P-051537

Version

Design group 27.20 Torque converter

Date 11-18-2011

Validity BM 212, 216, 218, 221,251 and 164 with A/T NAG2FE+

(recognizable by EHS part no., starting with A 212 ...)
In combination with OM 642 LS up to GFZ 3.154.598 and M278 up to GFZ 3.166.389, OM651 100 KW up to GFZ 3.155.579, OM651 125/150 KW up to GFZ 3.155.551

Reason for change Changed repair measure, no more replacement of con-

verter, but rather install the repair filter.

Reason for block

### Complaint:

Vehicle jerks during gear change or has hard or slipping shifts. In some cases the torque converter lockup clutch (KüB) cannot be actuated. The following fault codes may be stored in the transmission control unit: 2783, 0741, 0894, 0893, 0735, 0734, 0733, 0732, 0731, 0729, 0606, 076F Affected vehicles up to production date 10.01.2011.

#### Cause:

Torque converter lockup clutch (KüB) cannot be actuated due to a clogged filter in the KüB solenoid valve. Other solenoid valve filters, e.g. K1 control solenoid valve (Y3/8y2), may also be clogged with wear debris.

### Remedy:

Removal of EHS and removal of all Solenoid valves from the EHS to evaluate the contamination of the Solenoid valve filters. Please observe AR27.19-P-0212A.

Install repair filter A 221 277 00 00.

The filter is only valid for NAG2FE+ with OM 642 LS up to serial number 3,154,598 and M278 up to serial number 3,166.389.

A replacement of the torque converter is no longer necessary for this repair.

Important: It must always be ensured that the solenoid valves are installed in the correct location, as each valve has a specific characteristic.

The transmission magnets must always be replaced.

Finally, only the shift mechanisms with complaint need to be adapted again to suit.

### Symptoms

Automatic transmission / Power transmission / Automatic transmission - function / Limp-home mode /

Automatic transmission / Power transmission / Automatic transmission - function / General /

Automatic transmission / Power transmission / Shifts / Automatic transmission - function /

Automatic transmission / Power transmission / Automatic transmission - function / Slips /

### KENTRY

Automatic transmission / Shifting is not performed or is delayed / Power transmission / Automatic transmission - function /

Power generation / Engine performance / Engine management / No/poor output /

Power generation / Engine performance / Engine management / Cuts off /

Power generation / Engine performance / Engine management / Poor acceleration /

Automatic transmission / Poor shift quality / Power transmission / Automatic transmission - function /

Control unit/fault code		
Control unit	Fault code	Fault text
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0893	Hydraulic fault in transmission (disengaging shift element does not disengage). ([VGS2_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0894	The gear is implausible or the transmission is slipping. ([VGS3_*])
EGS53 - Electronic transmission control (N15/3) (GLK (204), E (212))	0741	Actuation of the torque converter lockup clutch is not possible.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0894	The gear is implausible or the transmission is slipping. ([VGS2_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0741	Actuation of torque converter lockup clutch is not possible. ([VGS3_*](not(ECU1_DV_HEX@04A1),not(ECU1_DV_HEX@04A2),not(ECU1_DV_HEX@04A3)))
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0606	This fault code relates to a bogus fault. ([VGS3_*](not(ECU1_DV_HEX@04A1),not(ECU1_DV_HEX@04A2),not(ECU1_DV_HEX@04A3)))
ETC-Electronic transmission control (EGS3) (CL (216),S (221))	0741	Actuation of torque converter lockup clutch is not possible.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	2783	The friction power of the wet start-off clutch (NAK) is too high. ([VGS3_*](ECU1_DV_HEX@04A1)or(ECU1_DV_HEX@04A2) or(ECU1_DV_HEX@04A3))
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0893	Hydraulic fault in transmission (disengaging shift element does not disengage). ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0729	The gear is implausible or the transmission is slipping.(6. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	076F	The gear is implausible or the transmission is slipping.(7. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0733	The gear is implausible or the transmission is slipping.(3. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0741	Actuation of torque converter lockup clutch is not possible. ([VGS2_*])

ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0741	Actuation of the wet start-off clutch (NAK) is not possible. ([VGS3_*](ECU1_DV_HEX@04A1)or(ECU1_DV_HEX@04A2) or(ECU1_DV_HEX@04A3))
ETC-Electronic transmission control (EGS3) (CL (216),S (221))	2783	The torque converter lock-up clutch has excessive power consumption.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0731	The gear is implausible or the transmission is slipping.(1. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0732	The gear is implausible or the transmission is slipping.(2. gear) ([VGS3_*])
EGS53 - Electronic transmission control (N15/3) (GLK (204), E (212))	2783	The input power at the torque converter lockup clutch is too high.
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0734	The gear is implausible or the transmission is slipping.(4. gear) ([VGS3_*])
ETC-Electronic transmission control (EGS2) (CL (216),M (164),R (251),S (221))	0606	Component Y3/8n4 (Fully integrated transmission control (VGS) control unit) is defective. ([VGS3_*](ECU1_DV_HEX@04A1) or(ECU1_DV_HEX@04A2)or(ECU1_DV_HEX@04A3))

Parts							
Part number	ES1	ES2	Designation	Quantity	Note	EPC	Non- EPC
A0019897803	09	11	ATF fluid	1	as required: ES1= 1 Liter ES2= 5 Liter		Х
A 220 277 09 98			Control solenoid valve	1	Valve with rising characteristic (blue cap)	Х	
A 220 277 10 98			Control solenoid valve	1	Valve with falling characteristic (black cap)	X	
A 221 277 00 00			Repair filter	1	Only for NAG2FE+ with OM 642 LS with GFZ 3.154.599 and M278 with GFZ 3.166.390, OM651 100 KW up to GFZ 3. 155.579,OM651 125/150 KW up to GFZ 3.155.551	Х	

Work ur	nits			v
Op. no.	Operation text	Time	Damage code	Note
			27287 D1	Torque converter lockup clutch

WIS-References				
Document number	Title	Note	Allocation	

# KENTRY

AR27.55-P-0100SX	Flush out automatic trans- mission and converter	TRANSMISSION 722.9 in MODEL 221.00 /02 /05 /07 / 10 /12 /15 /17, 216.37 With transmission flushing unit	Remedy
AR27.19-P-0212A	Remove/install control sole- noid valves of electric con- troller unit	Transmission 722.9	Remedy

Vehicle	Engine	Transmission
164.120	642	*
164.121	2000	*
164.121	642	*
The state of the s	642	
164.124	642	*
164.125	642	
204.901	651	722.996
204.901	651	722.908
204.902	651	722.908
204.982	651	722.965
204.984	651	722.965
212.002	651	722.908
212.003	651	722.908
212.005	651	722.996
212.023	*	*
212.082	651	722.965
212.093	*	*
212.202	651	722.908
212.203	651	722.908
212.205	651	722.996
212.223	*	*
212.282	651	722.965
212.293	*	*
216.373	*	*
216.394	*	*
218.323	•	*
221.003	651	722.908
221.026	*	*
221.083	*	*
221.103	651	722.908
221.126	*	122.906 *
221.183	*	*
251.021	*	*

XENTRY

251.023	*	*
251.123	*	*