

**ONLINE AUTOMOTIVE SERVICE INFORMATION SYSTEM
FOR AUGUST 2014**

SB-10056828-3250

44681

2011-2015 F-Super Duty - 6.7L Diesel - Runs Rough or Cranks no Start With MIL On
And Diagnostic Trouble Codes (DTC) P0087, P0088, P0089, P0093, P228F, P2291

Some 2011-2015 F-Super Duty 6.7L diesel equipped vehicles may exhibit an illuminated MIL and DTC P0087, P0088, P0089, P0093, P228F or P2291 associated with a rough idle or crank no start condition. If this condition is present, inspect fuse 33 in the Battery Junction Box (BJB) for an open condition. Use a Digital Volt/Ohm Meter (DVOM) to check the voltage on each pin of the fuse. If there is a voltage difference of more than .5V the fuse is open. Replace the fuse and re-evaluate the concern. If the fuse is not open or any DTC's other than the above are present, follow normal PC/ED diagnostics.