/ehicle No St	art, Steering Lock	Engaged	Market USA
arvice Category	and, Oteering Look	Section	
steering pplicability		Steering Column	
oyota Models with	n Smart Key without LED		
PPLICABLE VEHIC	LES		
2012-2014	Camry	2012-2014	Prius
2013-2014	Avalon	2013-2014	Avalon HV
2012-2014	Prius PHV	2012-2014	Prius V
2012-2014	Prius C	2012-2014	Camry HV
ONDITION			
		-	gaged so that the steering
heel may only be	turned very little from sid	e-to-side.	
INT: The above li	sted vehicles are not equ	ipped with an LED indicate	or on the "ENGINE START
		ad will display a message	
			to disengage from the steering
	the event that the steern	ig look dotador lo dilabie t	dischigage norn the steering
column			
column.			
	mots to ready-on or start	the vehicle while there is t	
the operator atte			ension on the steering lock
the operator attention the operator attention the operator attention of the operator attention o	be able to fully disengage	when the "ENGINE STAF	ension on the steering lock RT STOP" or "POWER" switch
the operator atten ctuator, it will not epressed. This co	be able to fully disengage indition will cause the veh	when the "ENGINE STAF nicle message center to dis	ension on the steering lock RT STOP" or "POWER" switch
the operator attenctuator, it will not epressed. This co	be able to fully disengage	when the "ENGINE STAF nicle message center to dis	ension on the steering lock RT STOP" or "POWER" switch
the operator atten ctuator, it will not epressed. This co	be able to fully disengage indition will cause the veh	when the "ENGINE STAF nicle message center to dis	ension on the steering lock RT STOP" or "POWER" switch
the operator attenctuator, it will not epressed. This co ngaged" error me	be able to fully disengage andition will cause the veh assage and the vehicle will	when the "ENGINE STAF nicle message center to dis	ension on the steering lock RT STOP" or "POWER" switch
the operator attenctuator, it will not epressed. This congaged" error me	be able to fully disengage ondition will cause the veh essage and the vehicle will s	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock
the operator attenctuator, it will not epressed. This co ngaged" error me ecommendation	be able to fully disengage ondition will cause the veh essage and the vehicle will s eering wheel from side-to	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attenctuator, it will not epressed. This co ngaged" error me ecommendation	be able to fully disengage ondition will cause the veh essage and the vehicle will s eering wheel from side-to	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Sently move the store steering lock at	be able to fully disengage ondition will cause the veh essage and the vehicle will s eering wheel from side-to	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start. o-side to relax tension on th ge, the vehicle will be able	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the store steering lock at	be able to fully disengage andition will cause the veh assage and the vehicle will s eering wheel from side-to ctuator is free to disengag	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start. o-side to relax tension on th ge, the vehicle will be able	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Sently move the st be steering lock at additional informat	be able to fully disengage andition will cause the veh assage and the vehicle will s eering wheel from side-to ctuator is free to disengag	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start. o-side to relax tension on th ge, the vehicle will be able	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st be steering lock at additional informat	be able to fully disengage andition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st be steering lock at additional informat	be able to fully disengage andition will cause the veh assage and the vehicle will s eering wheel from side-to ctuator is free to disengag	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st be steering lock at additional informat	be able to fully disengage andition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st be steering lock at additional informat	be able to fully disengage andition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st be steering lock at additional informat	be able to fully disengage andition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st ne steering lock at additional informat	be able to fully disengage andition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st ne steering lock at additional informat	be able to fully disengage andition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once
the operator attend ctuator, it will not epressed. This co ingaged" error me RECOMMENDATION Gently move the st ne steering lock at additional informat	be able to fully disengage ondition will cause the veh essage and the vehicle will s eering wheel from side-to ctuator is free to disengag ion may be found in the v	e when the "ENGINE STAF nicle message center to dis Il fail to ready-on or start.	ension on the steering lock RT STOP" or "POWER" switch splay the "Steering Lock he steering lock actuator. Once