



Multi-Model - Active Driving Display (AD-Disp) Service Caution

If the Active Driving Display (AD-Disp) unit requires removal, use caution when disconnecting/connecting the wiring harness. If the harness is not connected properly, the AD-Disp may not operate.

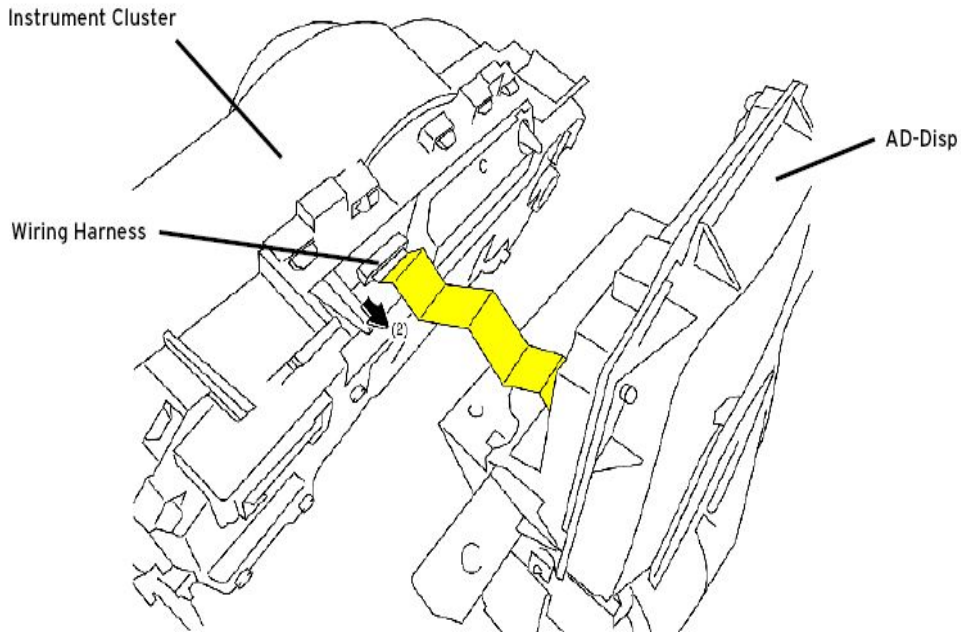


Removal

While pressing the tabs in the direction of arrows (1) as shown below, pull the wiring harness in the direction of arrow (2).

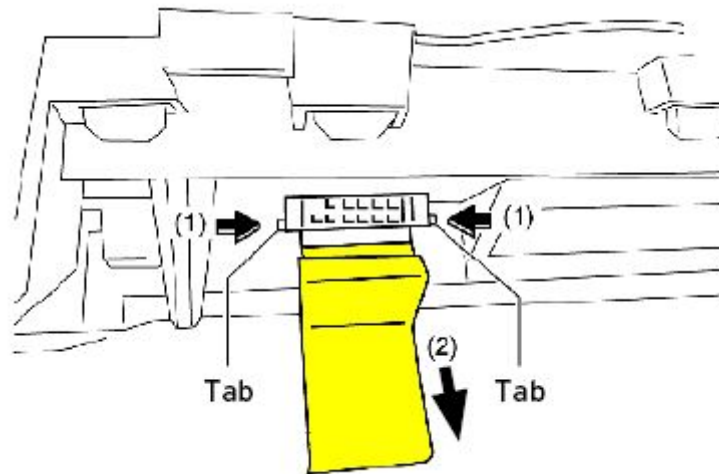


Installation

While pressing the tabs in the direction of arrows (1) as shown below, push the wiring harness straight in the direction of arrow (2) and release the tabs to lock the wiring harness end.

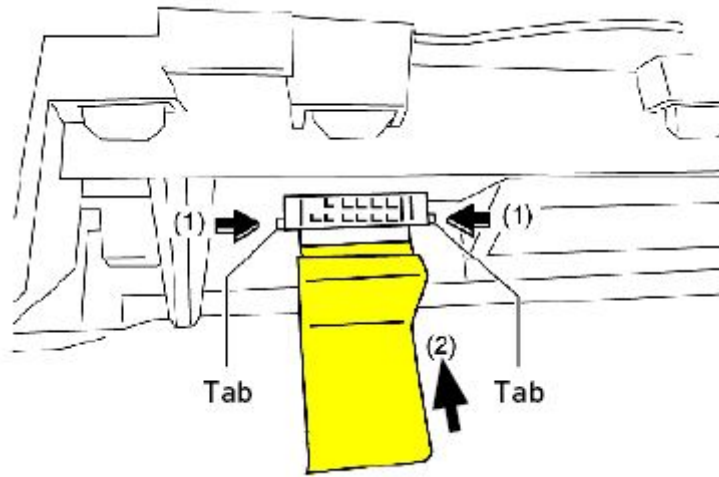

NOTE: Verify that the wiring harness end is inserted straight and securely locked in the position as shown below.

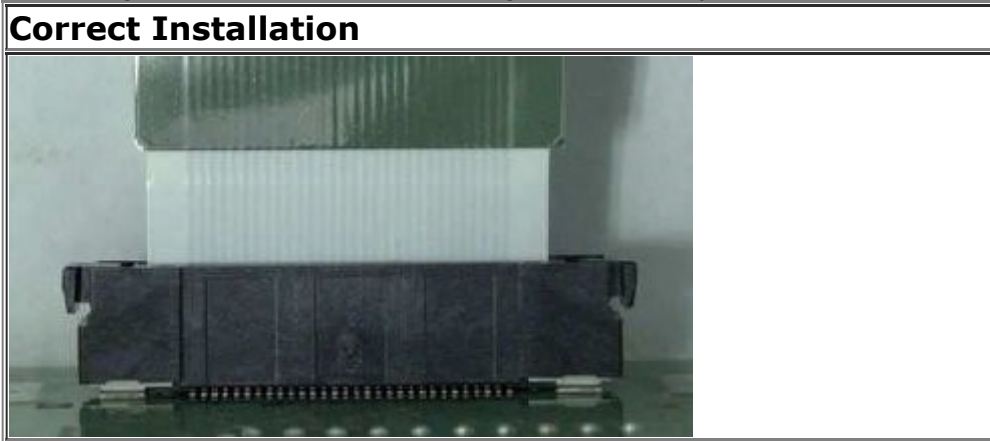

Caution: Do not force out/insert the wiring harness end without pushing the tabs, or the wiring harness end hook(s) may be damaged. If the hooks are damaged, the AD-Disp may not operate because of a loose and/or incorrect fit of the wiring harness end.

