

TECHNICAL BULLETIN  
JTB00472NAS1  
18 FEB 2016



© Jaguar Land Rover North America, LLC

NOTE: The information in Technical Bulletins is intended for use by trained, professional Technicians with the knowledge, tools, and equipment required to do the job properly and safely. It informs these Technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by 'do-it-yourselfers'. If you are not a Retailer, do not assume that a condition described affects your vehicle. Contact an authorized Jaguar service facility to determine whether this bulletin applies to a specific vehicle.

**SECTION: 418-00**

Engine Intermittently Will Not Start

**AFFECTED VEHICLE RANGE:**

**F-TYPE (X152)**

**Model Year:** 2014-2016  
**VIN:** K05320-K25432  
**Assembly Plant:** Castle Bromwich

**MARKETS:**

NAS

**CONDITION SUMMARY:**

**Situation:** The engine may intermittently fail to start.

**Cause:** This may be caused by the Battery Junction Box (BJB) connection not being tightened to correct torque value.

**Action:** Should a customer express this concern, follow the Service Instruction below.

**PARTS:**

No Parts Required

**TOOLS:**

Refer to Workshop Manual / Service Instruction for any required special tools.

**WARRANTY:**

 **NOTE: Repair procedures are under constant review, and therefore times are subject to change; those quoted here must be taken as guidance only. Always refer to TOPIx to obtain the latest repair time.**

 **NOTE: DDW requires the use of causal part numbers. Labor only claims must show the causal part number with a quantity of zero.**


DESCRIPTION	SRO	TIME (HOURS)	CONDITION CODE	CAUSAL PART
Battery Junction Box (BJB) Connection - Torque Check	86.94.94	0.2	33	T2R5726

 **NOTE: Normal Warranty procedures apply.**

**COMPONENT LOCATION**

1.  **NOTE: Coupe shown; Convertible similar.**


Battery Junction Box (BJB) location.

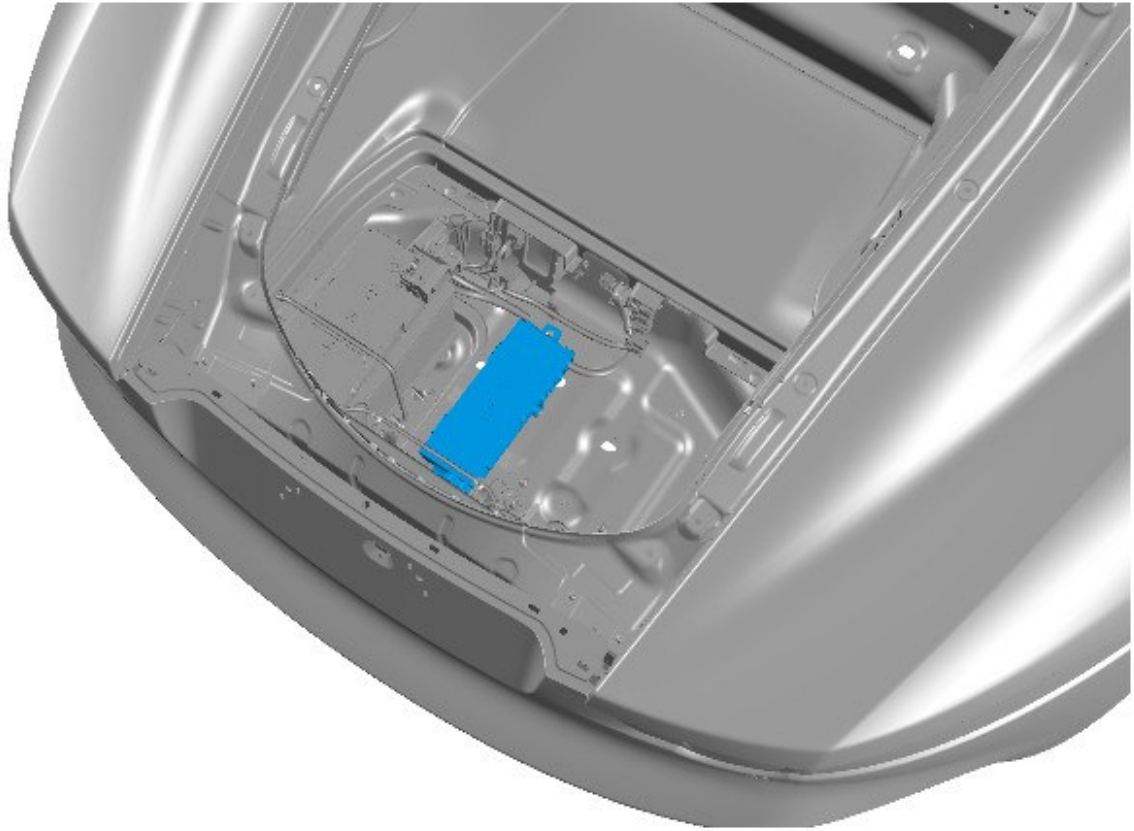

E186896


**SERVICE INSTRUCTION:**

1. Disconnect the battery cables (see TOPIx Workshop Manual, section 414-01: Battery, Mounting and Cables).
2. Open the Battery Junction Box (BJB) cover.

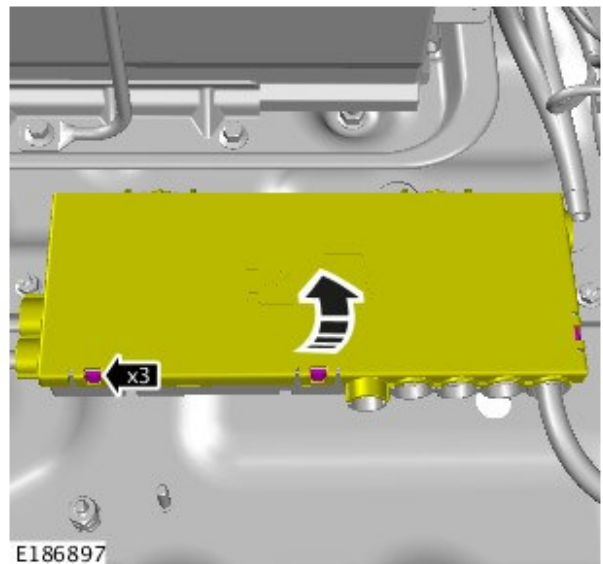

E186897

3. Tighten the distribution plate retaining nut.
  - Torque: 12 Nm.

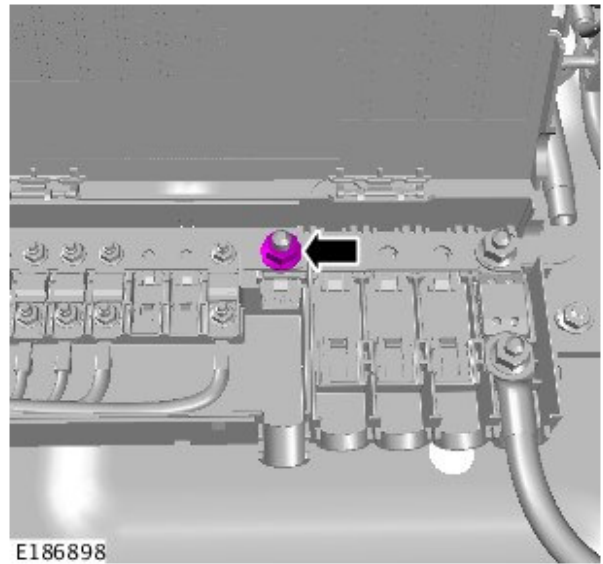

**4.** Close the BJB cover.

**5.** Connect the battery cables (see TOPIx Workshop Manual, section 414-01: Battery, Mounting and Cables).