# **Technical product information**

Торіс	Bentayga - Engine oil pressure warning
Market area	Bentley: worldwide (2WBE),Hongkong-Macau (5HK)
Brand	Bentley
Transaction No.	2045686/5
Level	EH
Status	Approval
Release date	

#### **Event memory entries**

Diagnostic address	Event memory entry	Fault type	Fault status
0001 - Engine electronics	P15AA00: Engine oil pressure lower limit not reached		Intermittent
0001 - Engine electronics	P15AA00: Engine oil pressure lower limit not reached		static

#### New customer code

Object of complaint	Complaint type	Position
vehicle service -> vehicle diagnosis -> guided fault finding	control units, services -> with event log entry	
engine -> lubrication system	electrics	
information, navigation, communication, entertainment -> instrument displays -> engine oil pressure indicator	functionality -> increases	

## Vehicle data

## Bentayga W12

## Sales types

Туре	MY	Brand	Designation	Engine code	Gearbox code	Final drive code
4V14A9	2017	E		*	*	*
4V14A9	2018	E		*	*	*
4V14A9	2019	E		*	*	*
4V14A9	2020	E		*	*	*
4V14A9	2021	E		*	*	*
4V14A9	2022	E		*	*	*
4V14A9	2023	E		*	*	*
4V14G9	2020	E		*	*	*
4V14G9	2021	E		*	*	*
4V14G9	2022	E		*	*	*
4V14G9	2023	E		*	*	*

## **Documents**

Doc	ument name
mas	ster.xml

## Customer statement / workshop findings

Low oil pressure warning illuminated in the driver instrument panel as shown in Figure 1 and event code P15AA00 is evident in one or both of the Engine Control Modules



#### Figure 1


## Technical background

One failure mode for the oil control valve (item 1 Figure 2) results in low engine oil pressure when engine rpm is above 3500 and as with any low oil pressure occurrence the *Oil pressure too low* warning will be displayed in the driver instrument panel. Obviously this warning is legitimate and when it is the case that the oil control valve has failed then a replacement valve will rectify the issue, but other causes of low engine oil pressure will trigger this warning and these should not be overlooked. It is therefore critical that the root cause of the low oil pressure is identified.

### **Production change**

#### Not applicable

#### Measure

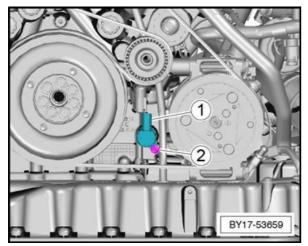

## Figure 2

In the event of *Oil pressure too low* warning displayed in the driver instrument panel as shown in Figure 1 and event code P15AA00 evident in one or both of the engine control modules then carry out the following checks to confirm the diagnosis is correct before considering replacing the oil control valve (item 1 Figure 2)

### **Primary Checks**

- 1. Confirm engine oil level is correct, if not then correct and retest car
- 2. Drain and inspect engine oil and engine oil filter for debris (Refill with new engine oil and fit new engine oil filter). If debris is present investigate cause. If required raise a DISS concern for Product Support assistance.
- 3. Check the function of the suspect solenoid by using the following process:

The oil control valve is switched (off) at approximately 3500rpm to give a substantial and affectively instant increase oil pressure to meet expected engine demand. When this is functioning <u>correctly</u> the increase in oil pressure can be observed in the measured values as an instant increase in pressure by at least 100kPa. Using Bentley diagnostic tool access Engine Control Module 1 (01)

Within engine control module select the following measured values

- Oil temperature in sump IDE06570
- Oil pressure actual value IDE02742
- Engine speed IDE00021

Drive the vehicle in manual mode in order to keep the vehicle speed down whilst a colleague monitors the above pre-selected measured values

With the oil temperature in the sump below 100° c observe the oil pressure value change as the engine rpm increases through approximately 3500 rpm. If the oil pressure significantly rises as the engine rpm passes through 3500 rpm then the oil control value is functioning correctly. If an instant raise is not seen and the *Oil pressure too low* warning is displayed in the driver instrument panel then replace the oil control value with new part, part number 07P115243. Reference workshop manual Rep.Gr.17 - Value for oil pressure control (N428) - To remove and fit.

Measured value name	ID	Value	1
[LO]_Bit 3		0	
[LO]_Bit 4		0	
[LO]_Bit 5		0	
[LO]_Bit 6		0	
[LO]_Bit 7		0	
Oil fill level	IDE00151		
no display	MAS00194	89.2 mm	
Oil level and oil temp. sensor	, c IDE06570		
no display	MAS00194	49.06 °C	E
Oil pressure actual value	IDE02742		
no display	MAS00194	463.7 kPa	
Engine speed	IDE00021		
no display	MAS00194	2806 1/min	
Search			
1921		Select measured values Stopping update	pdate once OK
		Select measured values Stopping update 0	puate once OK

#### Figure 3

Offboard Diagnostic Information System Service	- 4.3.3	11	
por Read measured values		LAW MULTING	
ale Measured value name	ID	Value	
[LO]_Bit 3		0	
[LO]_Bit 4		0	*
[LO]_Bit 5		0	
23. [LO]_Bit 6		0	
U [LO] Bit 7		0	
* Oil fill level	IDE00151		
asuno display	MAS00194	91.856 mm	
· Oil level and oil temp. ser	isor, c IDE06570		
no display	MAS00194	72.36 °C	E
<ul> <li>Oil pressure actual value</li> </ul>	IDE02742		
no display	MAS00194	671.3 kPa	
Engine speed	IDE00021		
no display	MAS00194	3525 1/min	y.
Search			*
387		Select measured values Stopping up	date Update once OK
			Execution of the test
) 🧉 🖸 🛄 🕅	NR 07 PR	🖬 G 👩 🚾 🛷	- 😳 🐂 🛔 🐗 🌗 1045 AM
			5/23/2018

#### Figure 4

Figure 3 displays a 483kPa reading just below the 3500 rpm (2806 1/min) switching point and figure 4 displays the instant and substantial increase to 671kPa observed on a correctly functioning valve as engine rpm raises through 3500 (3525 1/min). Note: the pressure readings shown in the measured value are 'absolute'

If as a result of the above tests no root cause is found then raise a DISS query with Product Support

#### Parts information

Part number	Description	Quantity
07P115243	W12 oil control valve	1