

**DOORS**

## Purpose


This document describes the procedure to replace the vertical mullion in the center of the screen door of an RV entry door.

## Resources Required

- Cordless or electric drill or screw gun
- Rubber mallet or flat screwdriver and hammer
- Appropriate drive bits
- PN 645028 replacement vertical mullion

## Procedure

1. Remove both top screws on each side of the screen's horizontal mullion (Fig. 1).
2. Pull out enough of the screen spline in order to provide room to maneuver during the replacement procedure, about 4" past the vertical mullion (Fig. 2).
3. Pull out on vertical mullion to remove it (Fig. 2).
4. Install replacement vertical mullion by tapping it softly to seat it.
5. Replace the spline using a rubber mallet or a flat screwdriver and hammer to reinstall.
6. Reinstall the top horizontal mullion screws (Fig. 1) on both sides of the screen.

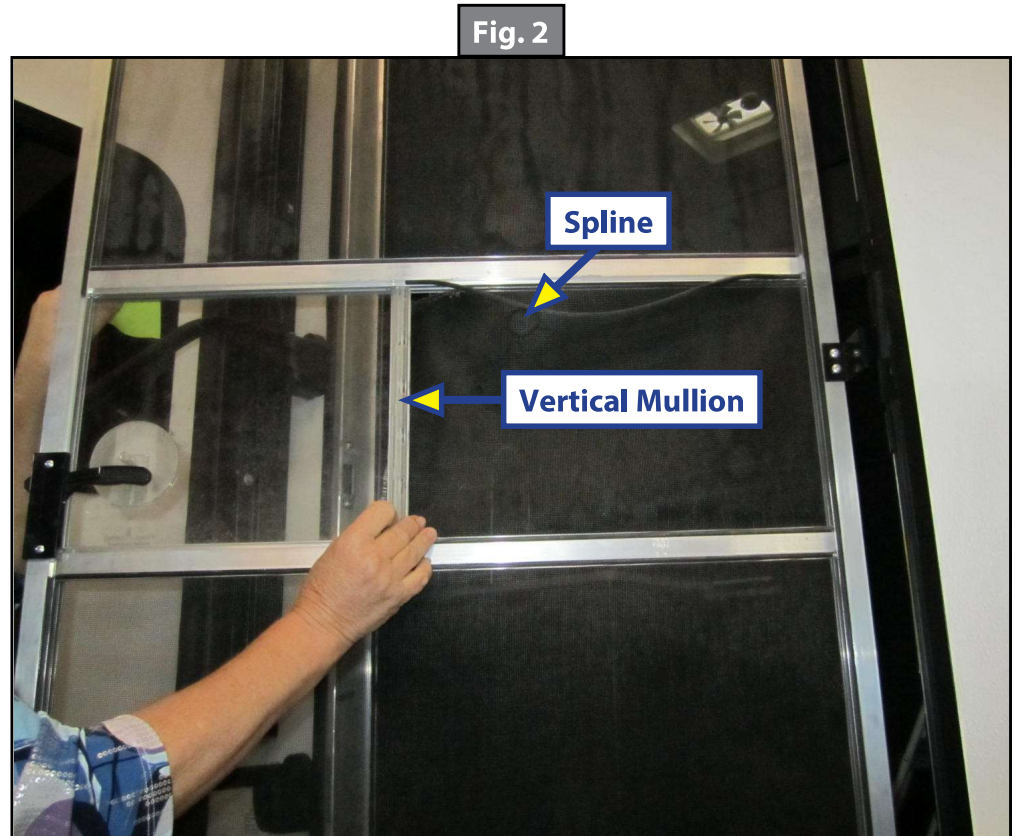

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at [customerservice@lci1.com](mailto:customerservice@lci1.com). Self-help tips, technical documents, product videos and a training class schedule are available at [lci1.com](http://lci1.com) or by downloading the MyLCI app.