

REFERENCE:	Nova Bus Manuals
SECTION:	15: Paint and Decals
RS N°:	MQR 7621-2035
EFFECTIVE IN PROD.:	N/A

APPLICATION DEADLINE: 2021MR26
CLAIM REFERENCE NUMBER: WB-4836

SUBJECT:	Driver decal legend.
JUSTIFICATION:	Driver legend decal does not match the pictograms of the dashboard.

LEVEL	DESCRIPTION	DIRECT CHARGES		TIME
		LABOUR	MATERIAL	
1	Installation of a new decal.	Nova Bus	Nova Bus	0.16 hr
2	–	–	–	–

MATERIAL

QTY	PART N°	REV.	DESCRIPTION	REPLACES PART N°
LEVEL 1				
1	N65907029	–	DECAL LEGEND ENGLISH	–
–	–	–	–	–
LEVEL 2				
–	–	–	–	–
–	–	–	–	–

Materials will be available within 18 days. To order, please contact Prevost Parts by phone at 1-800-771-6682, by fax at 1-888-668-2555 or by email at prevostparts.commandes@volvo.com. Specify document number, quantity of parts required and shipping address.

DISPOSAL OF PARTS

REMOVED PARTS ARE:	DISCARDED	RETAINED	* Dispose of the unused parts and the defective parts in accordance with local environmental standards in effect.
	X	–	

REVISION HISTORY

REV.	DATE	CHANGE DESCRIPTION	WRITTEN BY
NR	2020MR11	Initial release	Nandan BS

CLIENT	ORDER	ROAD NUMBER		VIN (2NVY/4RKY...)		QTY
		FROM	TO	FROM	TO	
Rochester New York - RTS	LB77	1902	1910	L82J4K9777352	L82J3K9777360	9
North Bay Ontario - metrolinx	LC38	792	793	L82J3K3752092	L82J7K3752094	2
Burlington Ontario - metrolinx	LC18	1901	1907	L82J9K3752095	L82J0K3752101	7
Durham Region Transit Ontario - metrolinx	LC36	6113	6116	L82J2K3752102	L82J8K3752105	4
Niagara Falls Ontario - 60' metrolinx	LB98	1935	1936	S92J9K3752106	S92J0K3752107	2
Niagara Falls Ontario - 60' metrolinx	LC61	1937	1938	S92J2K3752108	S92J4K3752109	2
York Regional Transit Ontario LFX 60'	LC24	1971	1980	S92J0K3752110	S92J3K3752120	10
Oakville Ontario	LC57	—	—	L82J6K3752121	L82J5K3752126	6
Proto EPA 2021 ARTIC	LC75	—	—	S92J4K9777473	S92J4K9777473	1

**WARNING**

FOLLOW YOUR INTERNAL SAFETY PROCEDURES.

PROCEDURE

- 1.1. Park the vehicle on an even surface with transmission in neutral (N).
- 1.2. Set the master control switch in the STOP position (see figure 1).

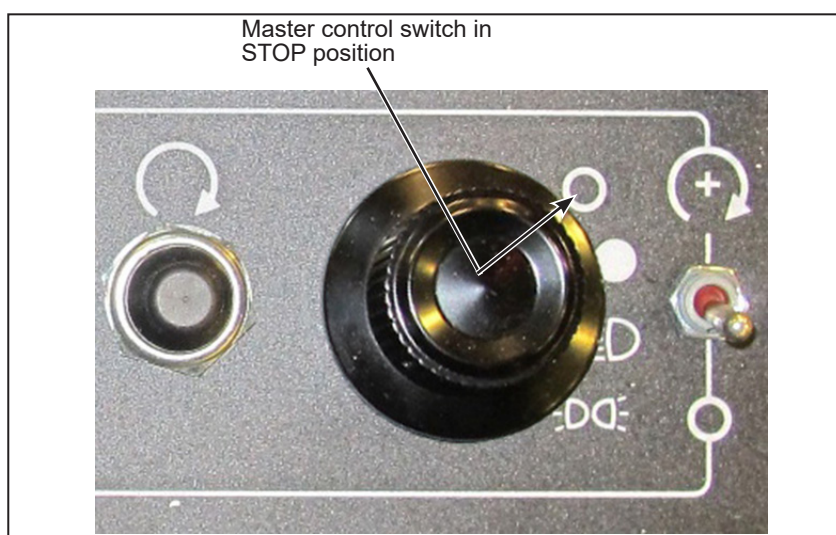


Figure 1 - Typical View of Master Control Switch in STOP Position

- 1.3. Locate the decal on the partition behind the driver's seat (see figure 2).

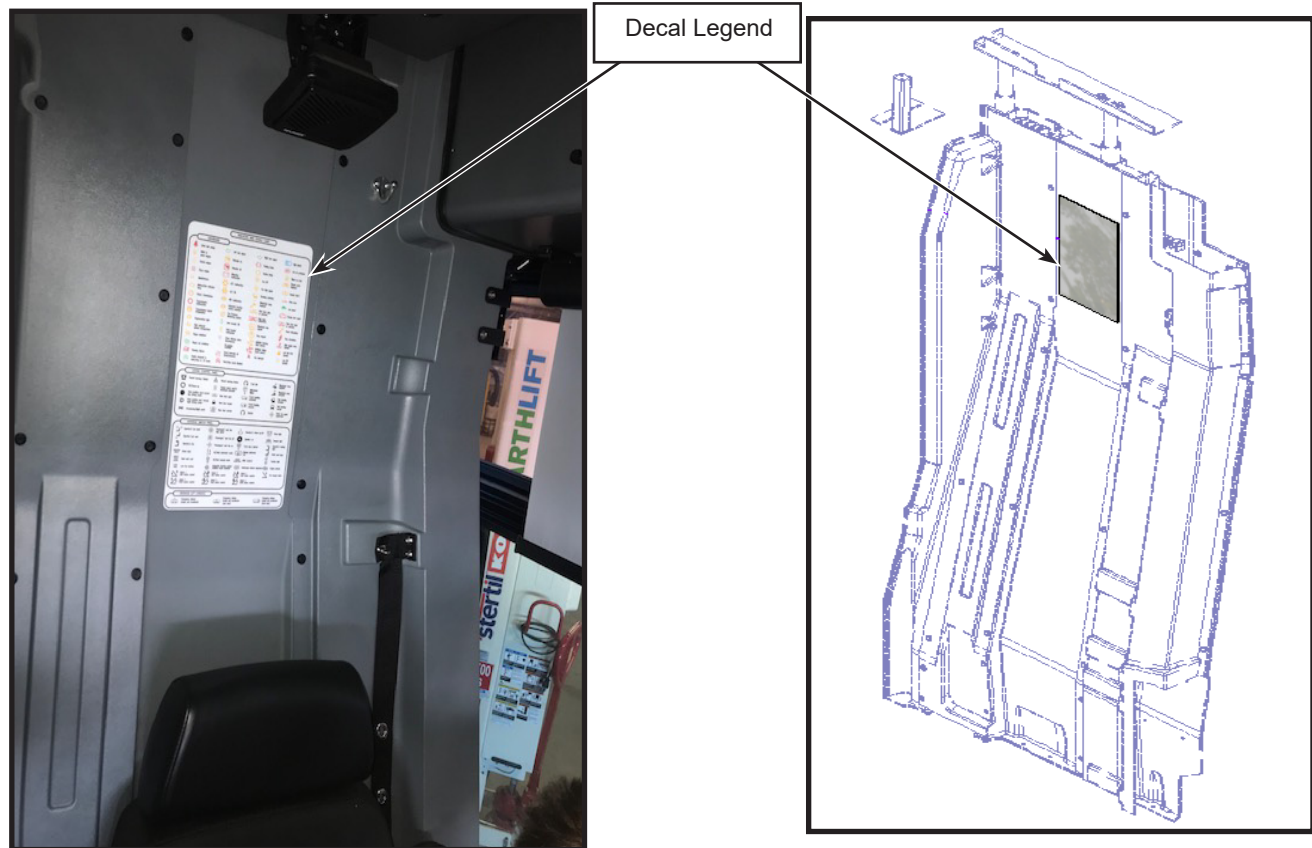


Figure 2 - View of Decal Located on the Partition

INSTALLATION OF THE NEW DECAL

- 1.4. Mark the location of the existing decal using masking tape or pencil in order to install new decal at the same place.
- 1.5. Peel off the existing decal gently and install the new decal PN N65907029.
- 1.6. Place the master control switch in ON position.
- 1.7. The vehicle may be returned to service. ❖