

PREVOST

Instruction Sheet

IS-20905

HAND SANITIZER DISPENSER INSTALLATION

First Release

04-29-2020

MATERIAL

Kit #IS20905_1 includes the following parts:

Part No.	Description	Qty
900148*	DISPENSER, GEL, PURELL ANTISEPTIC	1
500642	SCR TP PAN PH Z050 10X3/4	4
IS-20905	INSTRUCTION SHEET	1
FI-20905	FEUILLE D'INSTRUCTION	1

*Use Purell refills # 2770-CAN

Kit #IS20905_2 includes the following parts:

Part No.	Description	Qty
900088**	WALL MOUNTED SOAP DISPENSER	1
500638	SCR TP PAN PH Z050 8X1/2	4
IS-20905	INSTRUCTION SHEET	1
FI-20905	FEUILLE D'INSTRUCTION	1

**Use refills # 901385 or other liquid sanitizer type

Kit #IS20905_3 includes the following parts:

Part No.	Description	Qty
22435173**	WALL MOUNTED SOAP DISPENSER	1
500642	SCR TP PAN PH Z050 8X1/2	4
IS-20905	INSTRUCTION SHEET	1
FI-20905	FEUILLE D'INSTRUCTION	1

**Use refills # 901385 or other liquid sanitizer type



PROCEDURE



DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.


ENTRANCE INSTALLATION

NOTE

Dispenser model 900148 used for reference purposes, use provided positioning for all dispenser models (9900148, 900088 & 22435173).

H345 ENTRANCE INSTALLATION

1. To avoid the risk of drilling through the wiring harness, we recommend to remove the modesty panel prior to the installation.
2. Position the hand sanitizer dispenser as shown in the picture. This position is recommended to avoid interference with the passenger shoulders.
3. Drill 1/8" pilot holes and secure the back plate using the 4 provided tapping screws.

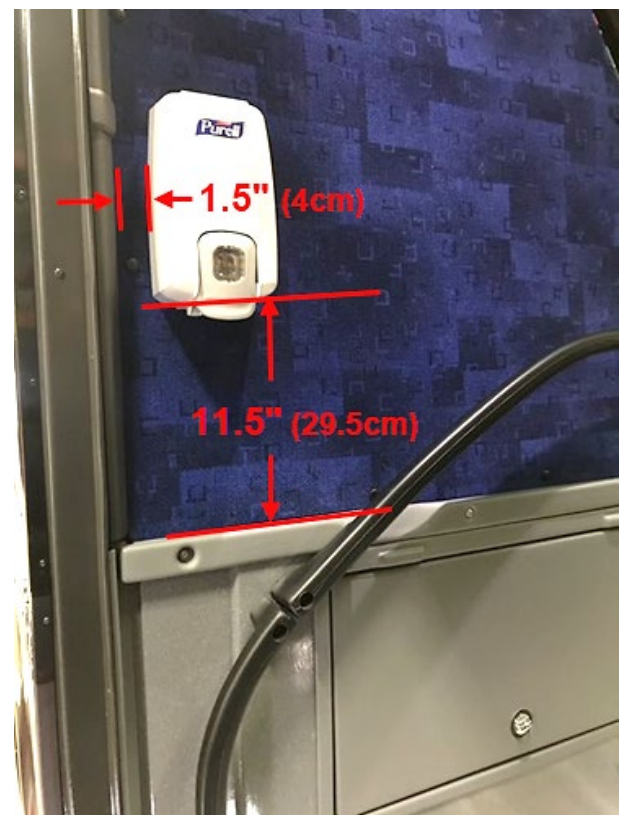

X3-45 ENTRANCE INSTALLATION

1. To avoid the risk of drilling through the wiring harness, we recommend to remove the modesty panel prior to the installation.
2. Position the hand sanitizer dispenser as shown in the picture. This position is recommended to avoid interference with the passenger shoulders.
3. Drill 1/8" pilot holes and secure the back plate using the 4 provided tapping screws.



VOLVO 9700 ENTRANCE INSTALLATION

1. Position the hand sanitizer dispenser as shown in the picture. This position is recommended to avoid interference with the passenger shoulders.



2. Drill 1/8" pilot holes and secure the back plate using the 4 provided tapping screws.



LAVATORY INSTALLATION

H345 LAVATORY INSTALLATION

1. Position dispenser as shown in pictures.
2. Drill 1/8" pilot holes and secure the back plate using the 4 provided tapping screws.




3. Optional Installation: Clean surface with alcohol, peel off backing from double sided tape provided with the dispenser and stick in place.



X3-45 LAVATORY INSTALLATION

1. Position dispenser as shown in pictures.
2. Drill 1/8" pilot holes and secure the back plate using the 4 provided tapping screws.
3. Optional Installation: Clean surface with alcohol, peel off backing from double sided tape provided with the dispenser and stick in place.

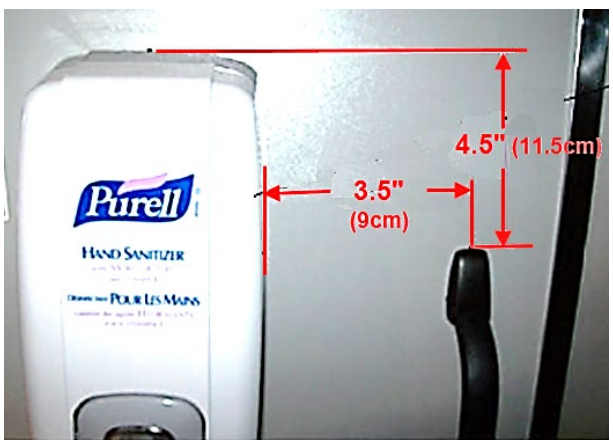

VOLVO 9700 LAVATORY INSTALLATION

1. Position dispenser as shown in pictures.
2. Drill 1/8" pilot holes and secure the back plate using the 4 provided tapping screws.
3. Optional Installation: Clean surface with alcohol, peel off backing from double sided tape provided with the dispenser and stick in place.



PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)