# **Workshop Tools & Equipment Bulletin**

| TITLE:                                    |                         |                                      |             |  |
|---|-------------------------|--------------------------------------|-------------|--|
| Newsletter 109: Mandatory Tool Allocation |                         |                                      |             |  |
| NO:<br>WTE-006P                           | ISSUE DATE: 2020-10-23  | CAR MARKET: United States and Canada | Page 1 of 2 |  |
|   | STATUS DATE: 2020-10-23 |                                      |             |  |

For all special tools in this newsletter valid methods have been developed. To carry out the method in a correct way the special tools are required to be used in terms of quality, safety and time.

Special tool pictures in this newsletter may be prototypes and may not exactly represent the final distributed product.

#### **Overview of content: Kit 33300361**

| Art No. | Description  | Standard |
|---------|--------------|----------|
| 9513199 | Warning sign | C2       |
| 9513202 | Adapter      | C2E      |
| 9513166 | Hook         | C2E      |

## **Workshop Tools & Equipment Bulletin 006P**

951 3199



04

#### Warning sign 9513199

Warning sign to put on the charging outlet lid for safety reason.

Tool standard C2
Tool group 31

Model POLESTAR 2

Tool board 39

Weight 40 grams
Material PVC
Country of origin Estland

31

31

### **Adapter 9513202**

Adapter cable to mount between car and BECM for diagnosis of disassembled battery.

Tool standard C2E Tool group 39

Model POLESTAR 2


Tool board 39

Weight 470 grams (2 meter)

Material Plastic Country of origin Estland





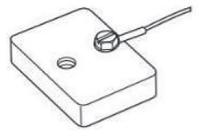

#### Hook 9513166

Hook - Tool to fish up the high voltage cable to the engine compartment. when reinstalling the battery.

Tool standard C2E Tool group 31

Model POLESTAR 2

Tool board 31

Weight 55 grams (4 meter)

Material Plastic Country of origin Italy

Page 2 of 2 2020-10-23