



Volvo Chassis - Model VN - Water Intrusion In Back Of Cab, Back Wall Of Bunk Leaking



> Internal Content

In some Volvo VN models wet floors and water behind the bunk and cabinets have been reported.


Affected models will have water intrusion in the back of cab area seen in the illustration below.




Parts Needed

Polyurethane Sealant



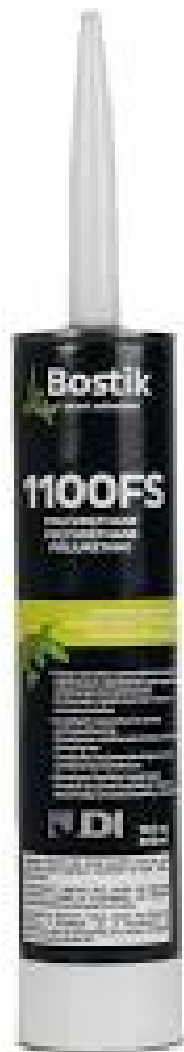

Alcohol Based Cleaner

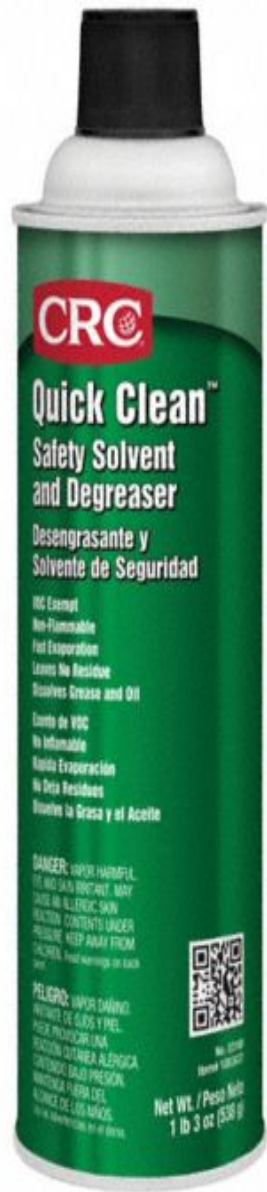

Masking Tape



Repair

1. Tape the complete channel area for sealant.





2. Clean channel using Alcohol based cleaner.




Live UI

3. Apply Sealant in an even bead at base of the channel where the roof cap meets back of cab. ALLOW TO DRY FOLLOWING MANUFACTURER INSTRUCTIONS.




4. Apply a second bead of sealant. This will seal off the channel and allow any standing water in channel to run off. Use a scraping tool too smooth the bead as shown in picture below.





5. Let the sealant dry according to manufacturer instructions. Sealant should not be visible when looking at the back of the vehicle.





 Tags

[roof leaks](#)

[back of cab](#)

[volvo](#)

[wet carpet](#)

 Live UI

[related links and attachments](#)



Feedback

Test For Cab Leaks

[Give feedback](#)

to help improve the content of this article