



# Service Bulletin

Bulletin No.: 16-NA-309

Date: July, 2022

## INFORMATION

**Subject:** Electric Charge Cord Velcro Strap Installation During Pre-Delivery Inspection (PDI)

Brand:	Model:	Model Year:		VIN:		Propulsion:	Transmission:
		from	to	from	to		
Chevrolet	Bolt EV	2017	2023	—	—	All	All
Opel	Ampera-e	2017	2018	—	—	All	All

<b>Involved Region or Country</b>	North America, Europe, Middle East, GM Korea Company, Brazil, Japan, Palestine
<b>Condition</b>	In the trunk bag there is a velcro strap that needs to be installed to the tool storage assembly during the PDI process to retain the electric charge cable when not in use.


### Instructions

The following are instructions showing the assembly of the velcro strap in the trunk kit.



4584032

1. Remove the strap from the pocket.

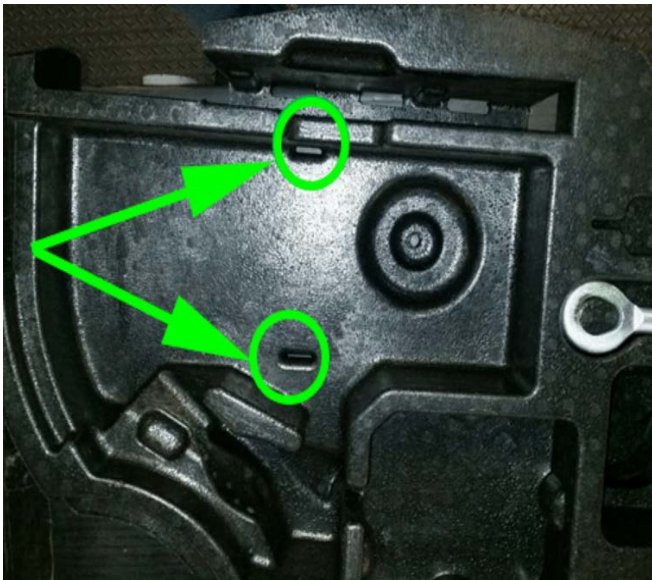

4584034

2. Insert the strap through the two holes illustrated above.



4584036

3. Once the velcro strap is installed, the electric charge cable can be placed in the middle of the straps location.

<b>Version</b>	5
<b>Modified</b>	<p>May 14, 2018 – Added the 2018-2019 Model Years, the Opel Ampera-e and Europe/ Middle East to the Involved Region or Country section.</p> <p>Revised February 11, 2021 – Added the 2020-2021 Model Years and updated the Involved Region or Country section.</p> <p>Revised March 11, 2021 – Added the 2022 Model Year to Bolt EV, corrected Model Years for Ampera-e and updated the Involved Region or Country section.</p> <p>Revised July 22, 2022 – Added the 2023 Bolt EV.</p>

