

Splash Guards 911 Dakar

Installing

Revision: This bulletin replaces bulletin Group 5 03/23, dated June 30, 2023.

Model Year: **As of 2023**

Vehicle Type: **911 Dakar**

Cause: **Retrofitting**

Parts Info: **992.044.012.91**



Figure 1

- 2x Front splash guard (included in set)
- 2x Rear splash guard (included in set)
- 000.043.305.30 1x Adhesive tape (included in set) ⇒ Figure 1-3-

| | | |
|-----------------------|----|---|
| 9A7.007.517.00 | 6x | Screw with collar ⇒ <i>Figure 1-1-</i> |
| 9A7.007.698.00 | 8x | Screw without collar ⇒ <i>Figure 1-2-</i> |
| N.912.425.01 | 5x | Sheetmetal nuts ⇒ <i>Figure 1-4-</i> |

Tool:



Information

- Some of the repair illustrations show only one side of the vehicle or a similar component.
- Naturally, some steps also have to be performed on the opposite side of the vehicle as well.



Information

Please pass all this information on to the customer.

Also give the customer a copy of the first pages of these Installation and Conversion Instructions, including the legal regulations.

1 Installing front splash guard

- 1.1 Install splash guard cover on wheel housing liner and mark bores (2x per side) ⇒ *Figure 2*. Then remove front wheel housing liner rear section ⇒ *Workshop Manual 'Removing and installing front wheel housing liner (rear section)'*.



Figure 2

- 1.2 Make slits for sheetmetal nut ⇒ *Figure 3-1-*. Then insert sheetmetal nuts ⇒ *Figure 3-2-*.

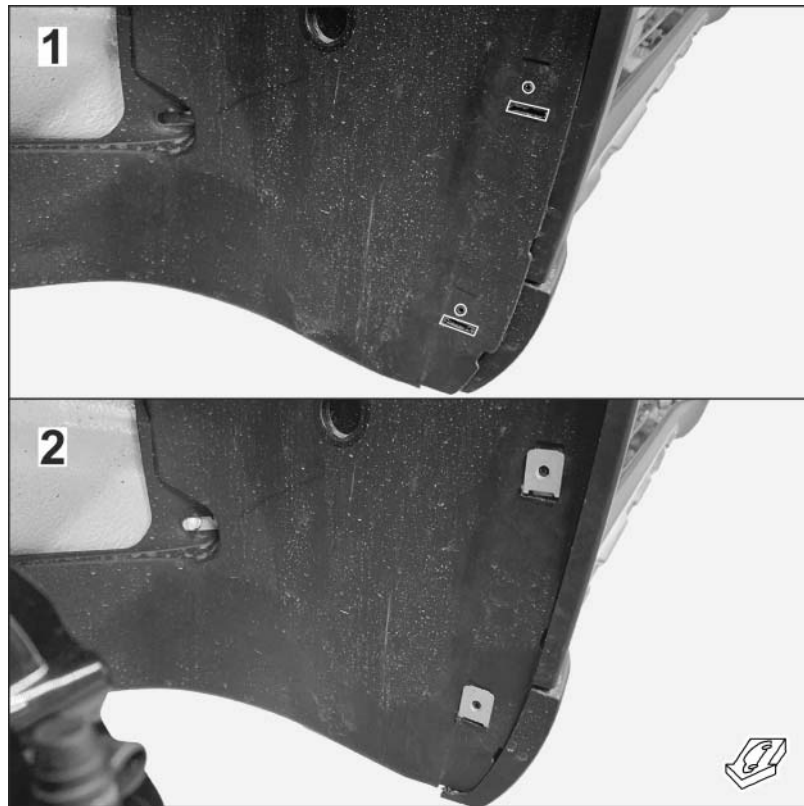


Figure 3

- 1.3 Thoroughly clean the adhesive edge on the splash guard cover and vehicle and make it grease-free ⇒ *Figure 4-1-*. Affix adhesive strip, remove protective film and install splash guard. Screw connections ⇒ *Figure 4-2 and 3-*.

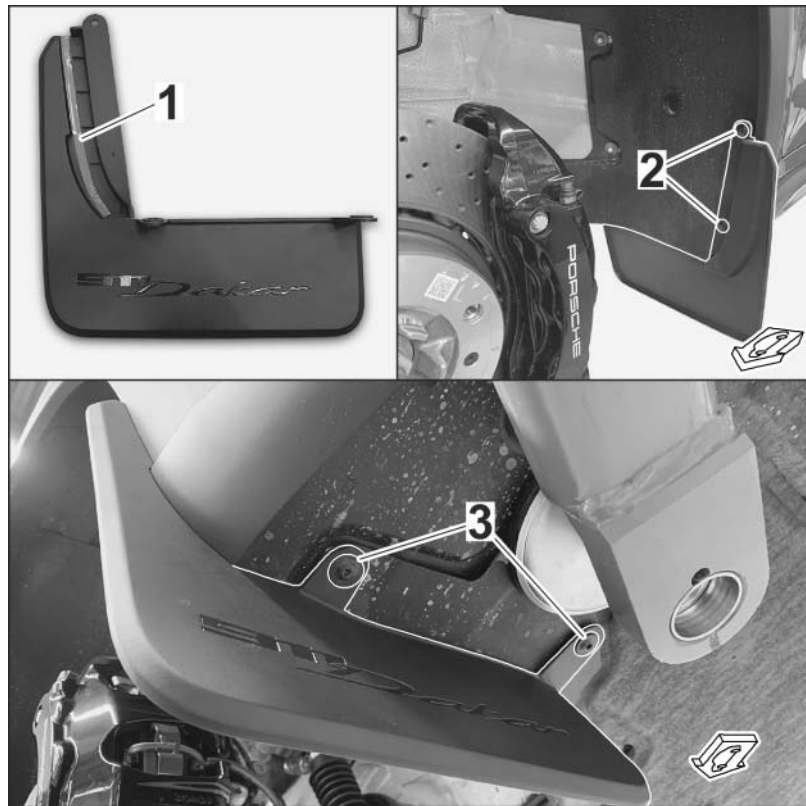


Figure 4

2 Install rear splash guard.

- 2.1 Install splash guard cover on wheel housing liner and mark bores (1x per side) ⇒ *Figure 5*, place lower screw flush over assembly hole on splash guard cover. Remove rear wheel housing liner rear section ⇒ *Workshop Manual 'Removing and installing rear wheel housing liner (rear section)'*.



Figure 5

- 2.2 Make slits for sheetmetal nut ⇒ *Figure 6-1-*. Then insert sheetmetal nuts ⇒ *Figure 6-2-*.

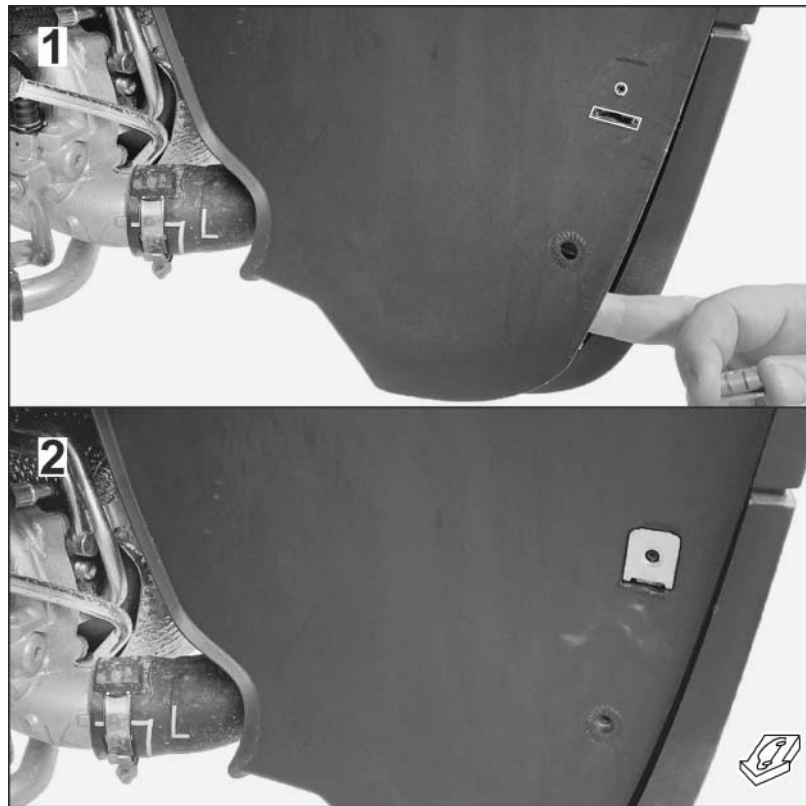


Figure 6

- 2.3 Thoroughly clean the adhesive edge on the splash guard cover and vehicle and make it grease-free ⇒ *Figure 7-1-*. Affix adhesive strip, remove protective film and install splash guard. Screw connections ⇒ *Figure 7-2 and 3-*.



Figure 7

53692440 and 50562440: Installing front wheel housing liner (splash protection flap) and installing rear wheel housing liner (splash protection flap)

Labor time: 210 TU

Important Notice: Technical Bulletins issued by Porsche Cars North America, Inc. are intended only for use by professional automotive technicians who have attended Porsche service training courses. They are written to inform those technicians of conditions that may occur on some Porsche vehicles, or to provide information that could assist in the proper servicing of a vehicle. Porsche special tools may be necessary in order to perform certain operations identified in these bulletins. Use of tools and procedures other than those Porsche recommends in these bulletins may be detrimental to the safe operation of your vehicle, and may endanger the people working on it. Properly trained Porsche technicians have the equipment, tools, safety instructions, and know-how to do the job properly and safely. Part numbers listed in these bulletins are for reference only. The work procedures updated electronically in the Porsche PIWIS diagnostic and testing device take precedence and, in the event of a discrepancy, the work procedures in the PIWIS Tester are the ones that must be followed.

© 2023 Porsche Cars North America, Inc.