



TECHNICAL SERVICE BULLETIN

TSB#: 13-001 Job Code: 9801152 Flat Rate: 0.2 HOUR

NOTE: This Technical Service Bulletin will be valid within (1) year from the original date of publication. REQUIRES PARTS TO BE ORDERED FROM Jayco for every unit.

ACTION REQUIRED:

Install power cord hook and label

MODELS / UNITS:

2013 Jay Flight Travel Trailers

33BHTS **D18Y**0141-0142, 0145-0149, 0151-0152, 0154-0160, 0162-0178, 0180, 0182, 0184, 0187-0188, 0190-0194, 0196-0204, 0206-0208, 0210-0212, 0214-0218, 0221-0225, 0227-0232, 0234-0240, 0242

KIT CONTENTS

13-001

Note: Kit can only be ordered using the order form included with this bulletin.

- (1) Hook w/putty tape
- (1) Warning label
- Instruction sheet

TOOLS/MATERIAL REQ.:

Screw gun w/square head bit
Isopropyl alcohol and shop rag

Instructions

1. Apply putty tape to the back of the hook. Install the hook at the rear trim edge and at a height that will adequately keep the cord away from the furnace vent (**Fig. 1a**).
2. Using the isopropyl alcohol and a shop rag, clean the area between the hook and the cord access door. Allow to dry. Apply the warning label between the hook and cord access (**Fig. 2a**).

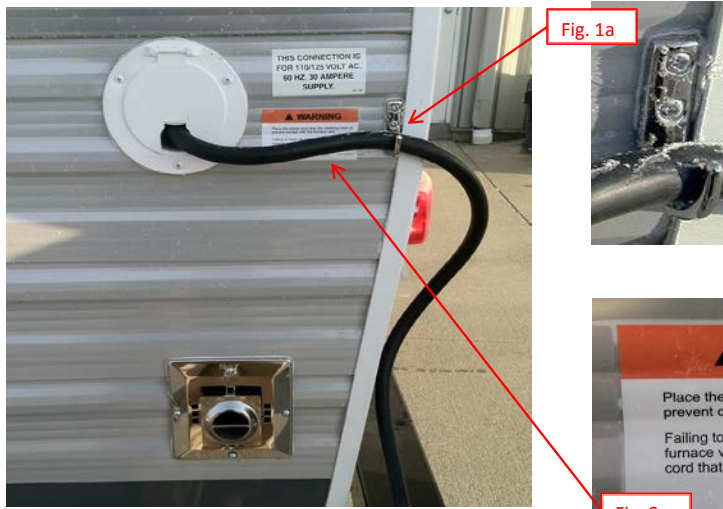


Fig. 1a

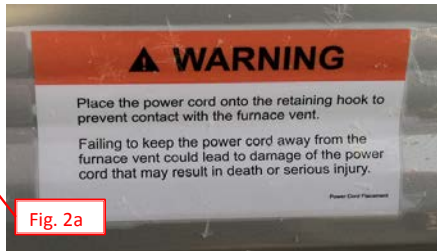


Fig. 2a