



Service Bulletin

File in Section: 08 - Body and Accessories

Bulletin No.: 10-08-110-001A

Date: November, 2013

INFORMATION

Subject: Information on Proper Use of Floor Mats


Models: 2014 and Prior GM Cars and Trucks

This bulletin has been revised to add the 2012-2014 model years. Please discard Corporate Bulletin Number 10-08-110-001.

GM's carpeted and all-weather (rubber) floor mats are especially designed for use in specific GM vehicles. Using floor mats that were not designed for the specific vehicle or using them incorrectly may cause interference with the accelerator or brake pedal. Please review the following safety guidelines regarding proper driver's side floor mat usage with the customer.

Warning: If a floor mat is the wrong size or is not properly installed, it can interfere with the accelerator pedal and/or brake pedal. Interference with the pedals can cause unintended acceleration and/or increased stopping distance which can cause a crash and injury. Make sure the floor mat does not interfere with the accelerator or brake pedal.

- Do not flip the driver's floor mat over (in an effort to keep the floor mat clean).
- Do not place anything on top of the driver's floor mat (e.g. carpet remnant, towel).
- Do not place another mat on top of the driver's floor mat (e.g. do not place all-weather rubber mats over carpeted floor mats).
- Only use floor mats that are designed specifically for your vehicle.
- When using replacement mats, make certain the mats do not interfere with the accelerator or brake pedal before driving the vehicle.

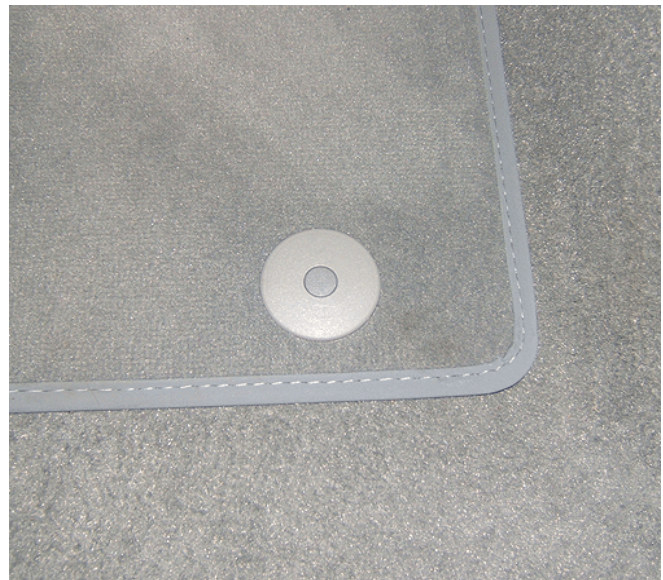

2421102



2421101

If your vehicle is equipped with a floor mat retaining pin(s) or clip(s), make certain the mat is installed correctly and according to the instructions.



2421861



2421862

After installing floor mats, make certain they cannot move and do not interfere with the accelerator or brake pedals.

