Technical Service Bulletin

Торіс	New Continental GT/GTC And Flying Spur - Brake Pad Wear Indicator			
Market area	arket area Bentley: worldwide (2WBE),Hongkong-Macau (5HK)			
Brand Bentley				
Transaction No.	2042924/2			
Level	EH			
Status	Released for publishing			
Release date	Oct 6, 2016			

New customer code

Object of complaint	Complaint type	Position
	Functionality -> Activates	

New workshop code

Object of complaint	Complaint type	Position
Chassis -> Brake system -> Brake pad wear indicator contact	Electrical -> Power supply wire damaged	> no instruction <

Vehicle data

New Continental GT/GTC And Flying Spur

Sales types

Туре	MΥ	Brand	Designation	Engine code	Gearbox code	Final drive code
393*	2012	E		*	*	*
393*	2013	E		*	*	*
393*	2014	E		*	*	*
393*	2015	E		*	*	*
393*	2016	E		*	*	*
394*	2012	E		*	*	*
394*	2013	E		*	*	*
394*	2014	E		*	*	*
394*	2015	E		*	*	*
394*	2016	E		*	*	*
4W2*	2014	E		*	*	*
4W2*	2015	E		*	*	*
4W2*	2016	E		*	*	*

Documents

Document name master.xml master.doc

Technical Service Bulletin

New Continental GT/GTC And Flying Spur - Brake Pad Wear Indicator

Condition

Brake Pad Wear Indicator warning illuminated on the Drivers Instrument Panel. Brake Pad Wear Indicator cable is damaged.

Technical Background

The rear Brake Pad Wear Indicator cable is now available as an individual service item.

The replacement part detailed within this TPI is only applicable to rear brakes.

NOTE: Rear brake pad replacement kits contain two Brake Pad Wear Indicator cables as standard.

Production Solution

Not Applicable - service item only.

Service

On complaint of the Brake Pad Wear Indicator illuminating on the Drivers Information Panel, check the thickness of the brake pad linings –

Refer to Gr.46. Check the thickness of the brake pads – Wheels removed.

If the brake pads are in a serviceable condition, inspect the Brake Pad Wear Indicator cables for damage.

Damaged rear Brake Pad Wear Indicator cables should be replaced. Damaged front Brake Pad Wear Indicator cables will require replacement brake

pads. Refer to – Gr.46, Front Brake Pads – To Remove and Refit.

Warranty

 Normal warranty policies applies
 110 or 910

 Warranty Type
 110 or 910

 Labour Operation Code
 46 39 56 00

 Damage Service Number
 46 39


 Damage Code
 00 25

 Time
 60 TU

Required Parts and Tools

3W0.698.437

Brake Pad Wear Indicator

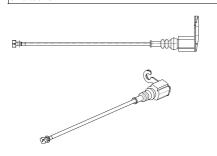

Release date: Oct 6, 2016