

STAR ONLINE PUBLICATION

Case Number: S2008000156

Release Date: 10/16/2020

Symptom/Vehicle Issue: CEL (Check Engine Lamp) On, Intermittent Hard Starting, Rough Idle

Customer Complaint/ Technician Observation: Customer complains the check engine lamp comes on and the vehicle is hard to start. Technician observed the vehicle is setting, DTC P0001 – Fuel Quantity Control Circuit/Open that may be active or stored.

Discussion: Inspect the N17 circuit at the 40-way black connector XY230A, examine the circuit for a pushed out, broken terminal or a connector not fully connected. Repair circuit or secure connections as required Fig 1, 2.

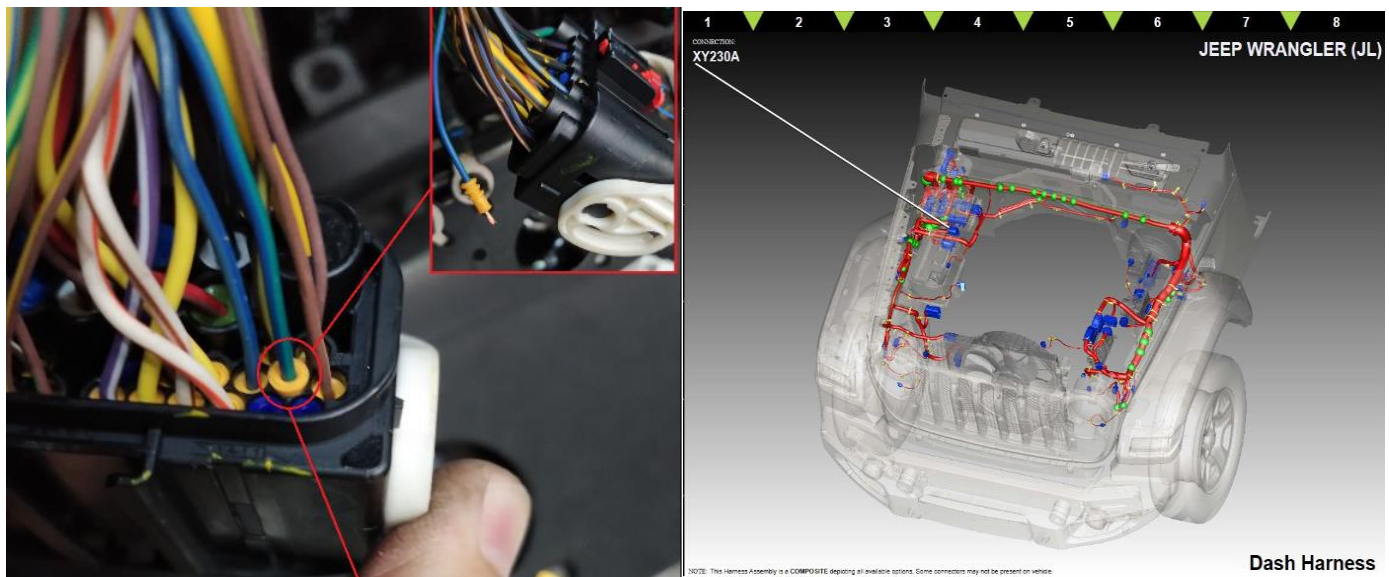


Fig 1, N17 - Circuit XY230A connector

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found

STAR ONLINE PUBLICATION

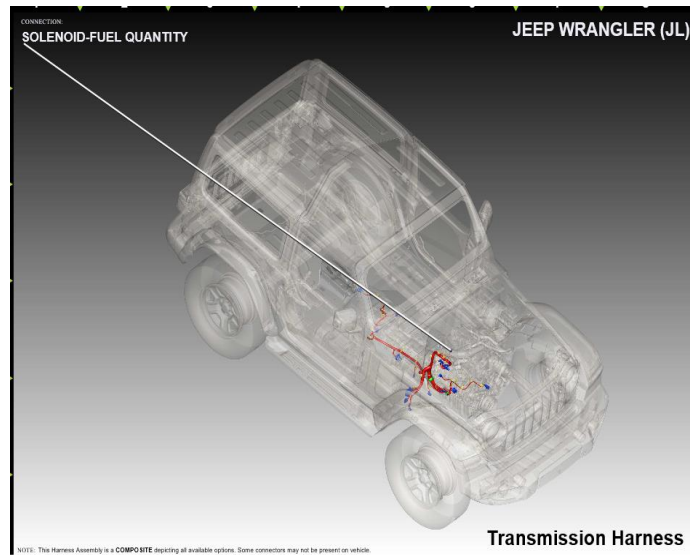
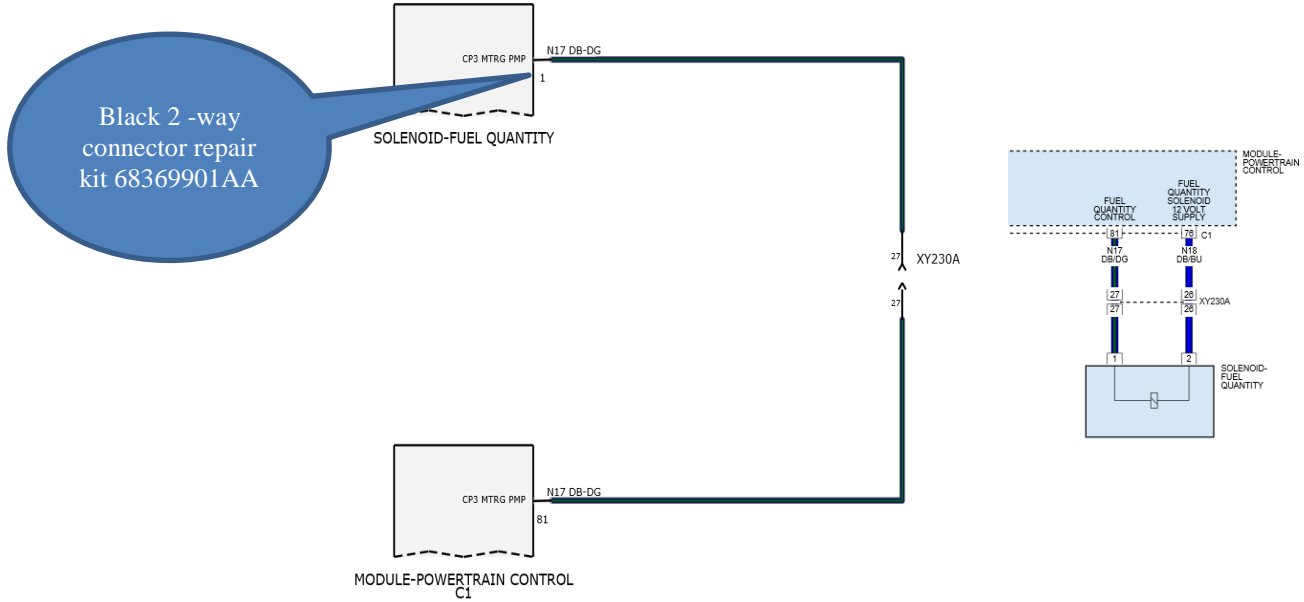


Fig 2

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found