




Generator Baggage Door Ventilation

Bulletin Type:	SRP	Publication Date:	July 2022
Bulletin #(s):	22-061	Make(s):	Jayco & Entegra Coach
Job Code(s):	<i>If affected unit has warranty remaining, submit your claim following the normal process</i>	Model(s):	Alante and Vision with 4K Generator
Flat Rate(s):		Model Year(s):	2021-2022



Incident:	4K Generator drawing engine heat from below and shutting down
Affected Units:	Certain 2021-2022 Jayco Alante & Certain 2021-2022 Entegra Coach Vision
Parts List:	(8) RIVET, .19X01.00 AL BLK W/RBR SEAL (Jayco Part #0308359) (1) BOOT, 4KY GEN AIR INTAKE INR+OTR ADJ (Jayco Part #2016837) (1) Generator Door (Contact Jayco Customer Service Parts Department) (1) Graphic (Contact Jayco Customer Service Parts Department)
Misc. Tools & Supplies:	Drill with 3/16" Drill Bit Rivet Gun Measuring Tape

GENERATOR DOOR INSPECTION INSTRUCTIONS

1. Begin by inspecting the generator door which is located on the driver side behind the front wheel.
2. If the generator door looks like Figure 1, then it will need to be replaced with the door in Figure 2.

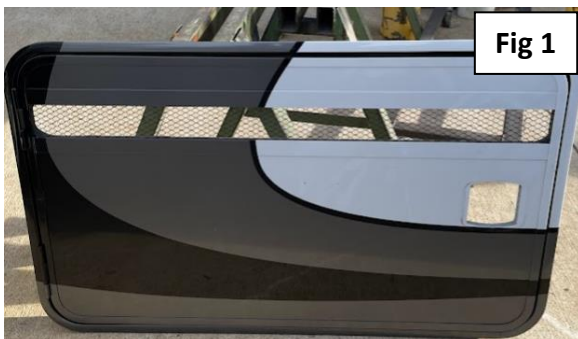

3. In order to determine the correct door size, Jayco Parts Department will need to know the door opening width of the current door installed as shown in Figure 3.
4. In order to determine the correct vent opening location, Jayco Parts Department will need to know the dimensions from the forward door opening to the center of the generator air intake as shown in Figure 4.

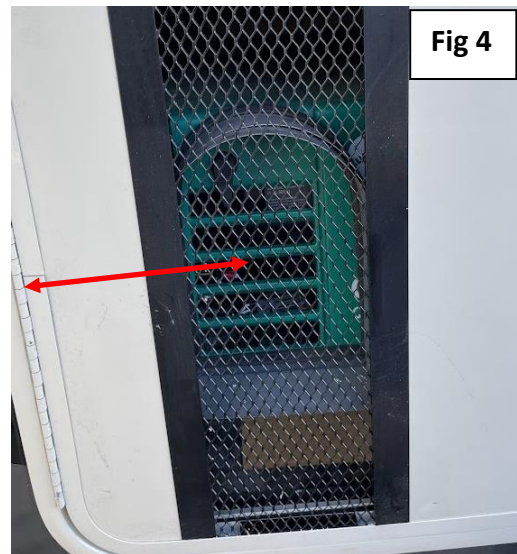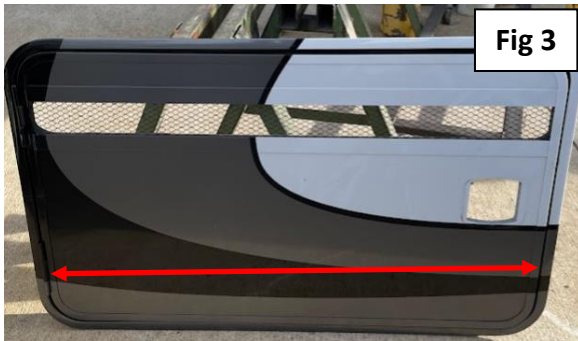


GENERATOR DOOR REPLACEMENT INSTRUCTIONS

1. Install the new generator door with 2 to 3 screws into each side. Please test door to see if closes completely.
2. Continue with opening the generator door and holding the air intake up to the generator as shown in Figure 5.
3. The correct location would have the gasket seal touching the generator and surrounding the generator intake. Verify the gasket seal touches the generator.
 - A. NOTE: The outer flange of the air intake can adjust outwards if needed.
4. Drill (4) 3/16" mounting holes through interior metal of the generator door. (Figure 4 marked with orange arrow)
 - A. NOTE: Drill bit must not go through exterior skin.



5. With rivet gun, secure the air intake to the back of the baggage door at (4) locations (Figure 6 marked with green arrow).
6. Close door and verify that the rubber gasket touches the generator and the door can still close (Fig. 7). Complete the installation of the generator door by installing the handle and graphic. Contact Jayco Customer Service Parts Department for the graphic.

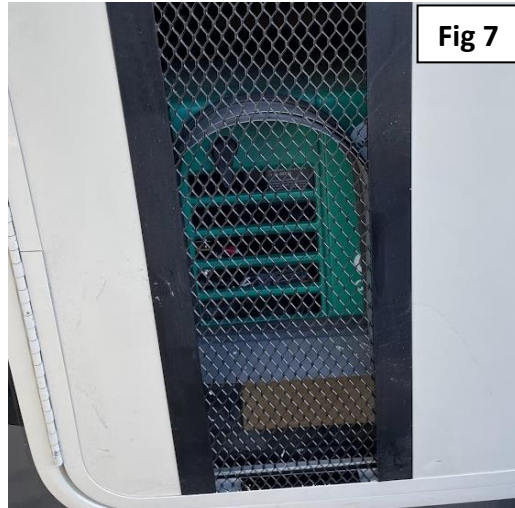

Jayco's sole obligation under our limited warranty is to repair or replace defective materials and/or workmanship deemed our responsibility as determined by Jayco in our sole discretion. Jayco reserves the right to use new and/or remanufactured parts or materials of similar quality to complete any work, and to make parts and/or design changes as appropriate without notice to anyone. Jayco designs and/or materials changes are done without obligation to incorporate such changes in previously manufactured product. Jayco makes every reasonable effort to ensure field remedies will not adversely affect performance and/or safety of the unit. This field remedy is not intended to extend to future performance of this RV, or any of its materials, components or parts beyond the standard warranty period. The RV owner's obligation to notify Jayco, or one of its independent, authorized dealers, of a claimed defect does not modify any obligation placed on the RV owner to contact Jayco directly when attempting to pursue remedies under state or federal law.

903 South Main Street • P.O. Box 460 • Middlebury, IN 46540