SERVICE PROCEDURE

15V-868 / 2015-611 February, 2016

SUBJECT: SAFETY RECALL Wheelchair Lifts on certain AE, BE, CE, FE and RE school bus models built 02 January 2006 thru 23 September 2014 with Ricon Public Use, "S" 2000 and 5500 Series lifts.

DEFECT DESCRIPTION

The platforms included on the subject S-Series model wheelchair lifts are equipped with folding link arms that may have pivot holes that are too big, allowing the bearings to move out of position. If the bearings move out of position, the stowed platform may have excessive movement resulting in failure of the platform mounting. This failure could cause the wheelchair lift platform to fall out of the vehicle when the doors are opened, increasing the risk of injury to the lift operator.

MODELS INVOLVED

This Safety Recall involves certain AE, BE, CE, FE, and RE school bus models built 02 January 2006 thru 23 September 2014 with Ricon Public Use,"S" 2000 and 5500 Series lifts.

ELIGIBILITY

This procedure applies ONLY to vehicles on which the customer has received a letter for NHTSA Recall 15V-868 or Transport Canada Recall 2015-611. Also complete any other open campaigns listed on the International[®] Service PortalSM at this time.

PARTS / SERVICE / ADMINISTRATION INFORMATION

NOTE: All vehicles completed under Safety Recall 14518 will also be required to complete this Safety Recall.

NOTE: All vehicles still incomplete under Safety Recall 14518 will require both campaigns to be performed.

Ricon is managing this recall under NHTSA Recall 15E-068. Please record the lift serial number and contact Ricon Customer Service at (800) 322-2884, or by email, at <u>admin15E068@wabtec.com</u>.

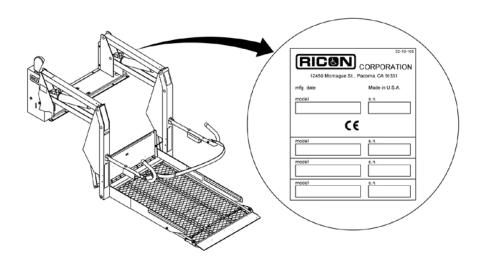


Figure 1. Serial Number General Location

The decals containing the lift serial number are located on top of the right arm and also the inner side of the hydraulic cylinder (Figure 1).

0000396001

CAMPAIGN IDENTIFICATION LABEL

Each vehicle corrected in accordance with this campaign must be marked with a CTS-1075 Campaign Identification Label.

Complete the label and attach on a clean surface next to the vehicle identification number (VIN) plate.



NAVISTAR, INC.