

THOMAS PAYNE® SEATING CONTROL BOX UPDATING TO VERSION 2



INTERIORS

Purpose

This document is for a Thomas Payne seating control box, which is for theater chairs with open/close options. This explains how to update the box from version 1 to version 2.

Safety

Read and fully understand all instructions before installing or operating product. Adhere to all safety labels.

A CAUTION


The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.



Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required

- Cordless or electric drill or screw gun
- Appropriate drive bits
- · Utility knife
- Staple gun

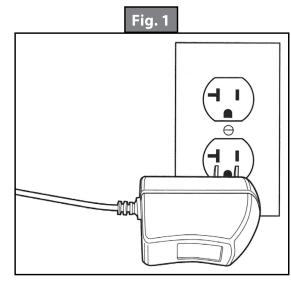

Procedure


1. Unplug power connection from the outlet (Fig.1).

NOTE: Place a protective fabric down before turning the chair over.

- **2.** Flip chair upside down to view the control box.
- **3.** Use screw gun and proper bit to remove the three screws that attach the control box to the chair.
- **4.** With utility knife carefully cut the straps that hold the wiring harness to the edge of the chair.

THOMAS PAYNE® SEATING CONTROL BOX UPDATING TO VERSION 2

INTERIORS

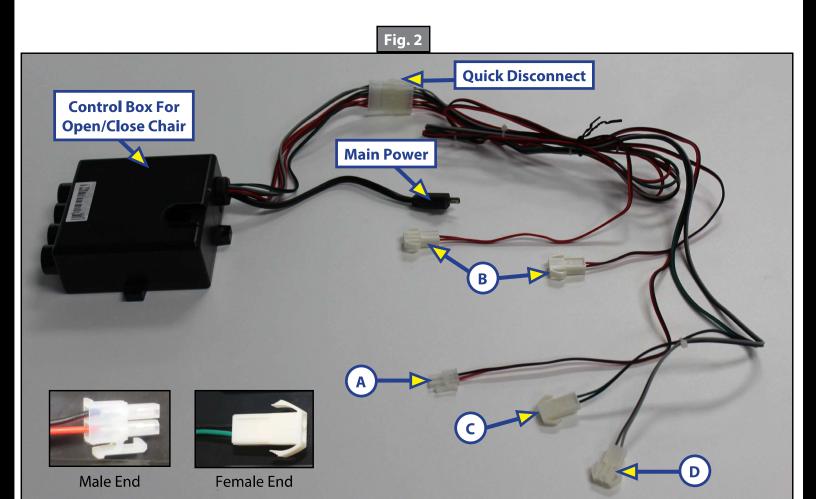

Callout	Description
А	Red/black wire, male end; seat heat
В	Red/black wire, female end (2); LED lights
С	Green/black wire, female end; massage
D	Gray/black wire, female end; massage

- **5.** Unplug controller and wiring harnesses (A-D) (Fig. 2) from the other harnesses in the chair.
- **6.** Remove and replace the control box with the new control box using the three screws.
- **7.** Reattach all harnesses (A-D) and main power plug (Fig. 2).
- **8.** Gather all wiring harnesses and reattach to the chair with straps and staple gun.
- **9.** Plug control box back into power source.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.