



# Service Information

Offboard Diagnostic Information System Service (ODIS Service)

Number: AOS-22-13

Subject: R242 Calibrate Control Module Test Hotfix Instructions

Date: June 21, 2022

## **Important:**

***We recommend installation of this hotfix on one diagnostic device ONLY. Hotfix must be removed immediately after performing the procedure.***

## 1.0 – Introduction

This hotfix corrects a software issue with the R242 Calibrate Control Module test. This hotfix is to be used with all 2018-2022 MY Q5 and A5 vehicles. A future ODIS Service Diagnostic Content version update will include this hotfix.

**!! The Hotfix must be removed after performing the diagnostic procedure. !!**


## 2.0 – Prerequisite

Audi ODIS Service **Diagnostic Content version 2.28.3** must be installed.

To confirm the installed diagnostic content version in ODIS Service, go to: **Info > Versions**.

## 3.0 – Download Hotfix


1. Open **Internet Explorer** on the diagnostic device and logon to **AccessAudi.com > ServiceNet**.
2. Navigate through **Vehicle Diagnostics > Offboard Diagnostic Information System Service > Hotfixes/software**.
3. Click the **R242 Calibrate Control Module Test Hotfix.zip** file and **Save** it to your Windows desktop.
4. Close Internet Explorer.
5. Browse to the desktop and double-click the **R242 Calibrate Control Module Test Hotfix.zip** file to open it.
6. Right click the file name and select **Copy**:

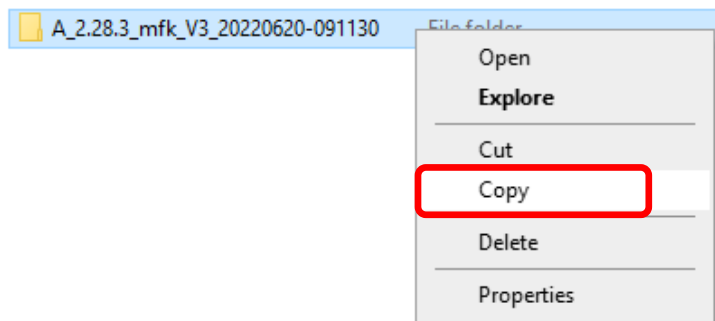

(cont.)



7. Right click anywhere on the Windows desktop and select **Paste**. This file icon must appear on the desktop:

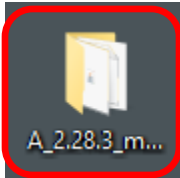


## 4.0 – Install Hotfix into ODIS Service

1. Open ODIS Service (“Run as Administrator”)
2. Expand the **Data** submenu and click **Download** (under **Hotfix**):



3. Click **Continue**:

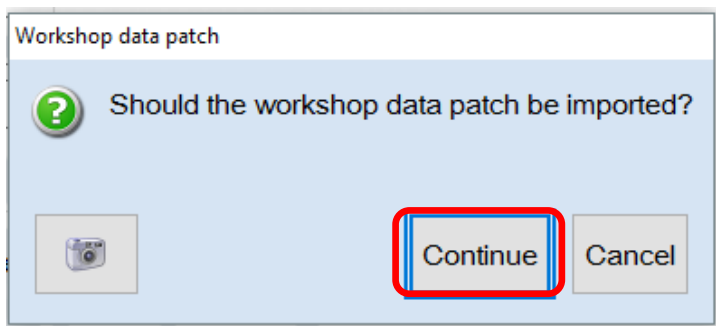


(cont.)


# Service Information



4. A Directory Selection box will appear. Browse to and **highlight the Hotfix file**, then click **Select folder**:

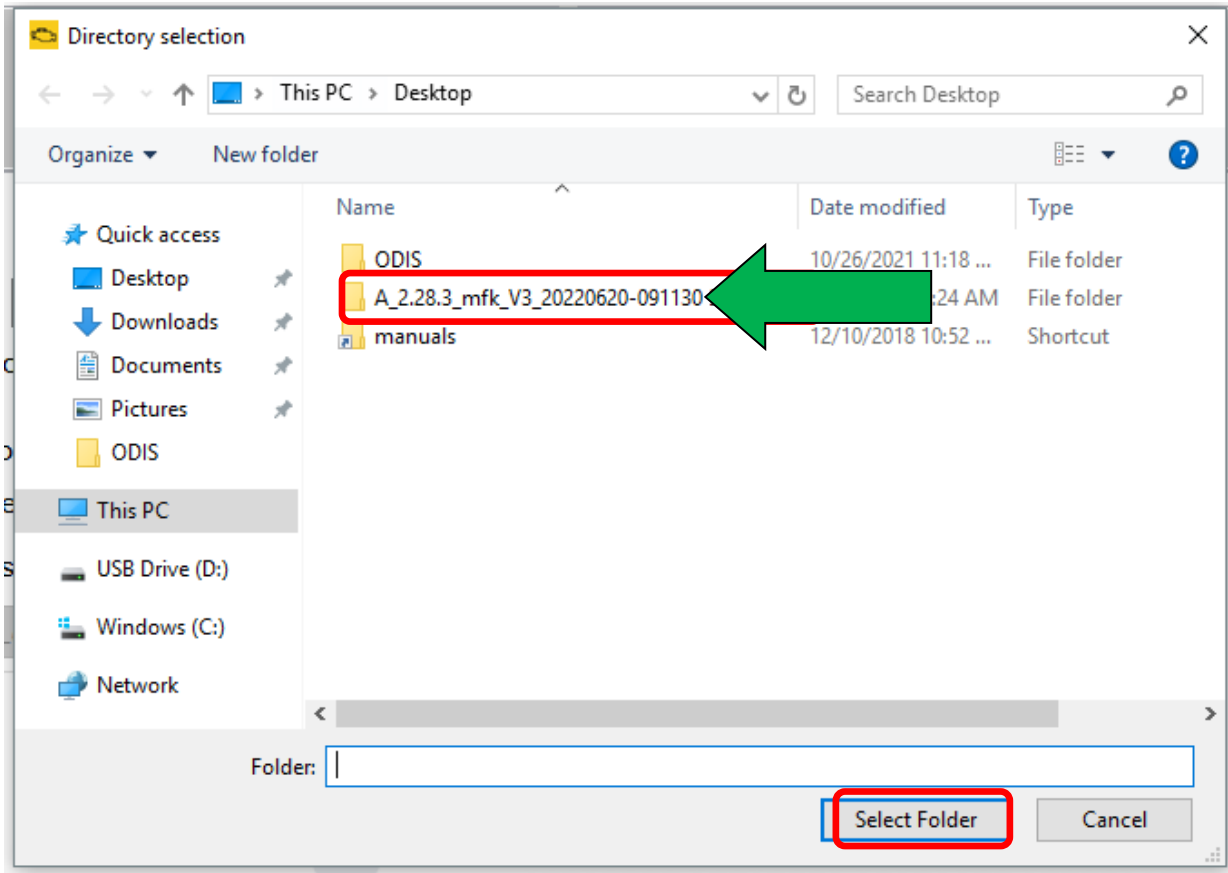

5. Click **OK**:

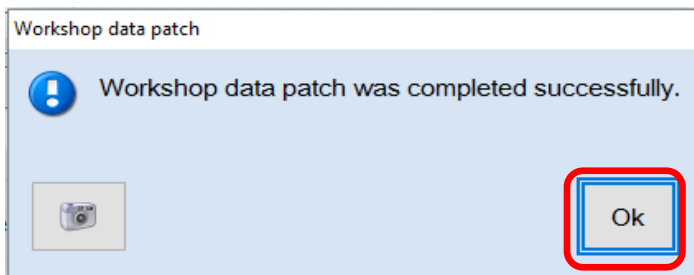

6. Perform the diagnostic procedure.

## **Important:**

**The Hotfix must be removed after performing the procedure. Failure to do so will cause other vehicle diagnostics sessions to malfunction.**


(cont.)

# Service Information




## 5.0 – Uninstall the Hotfix from ODIS Service

1. Select **Delete** (under Hotfix), then **Continue**:

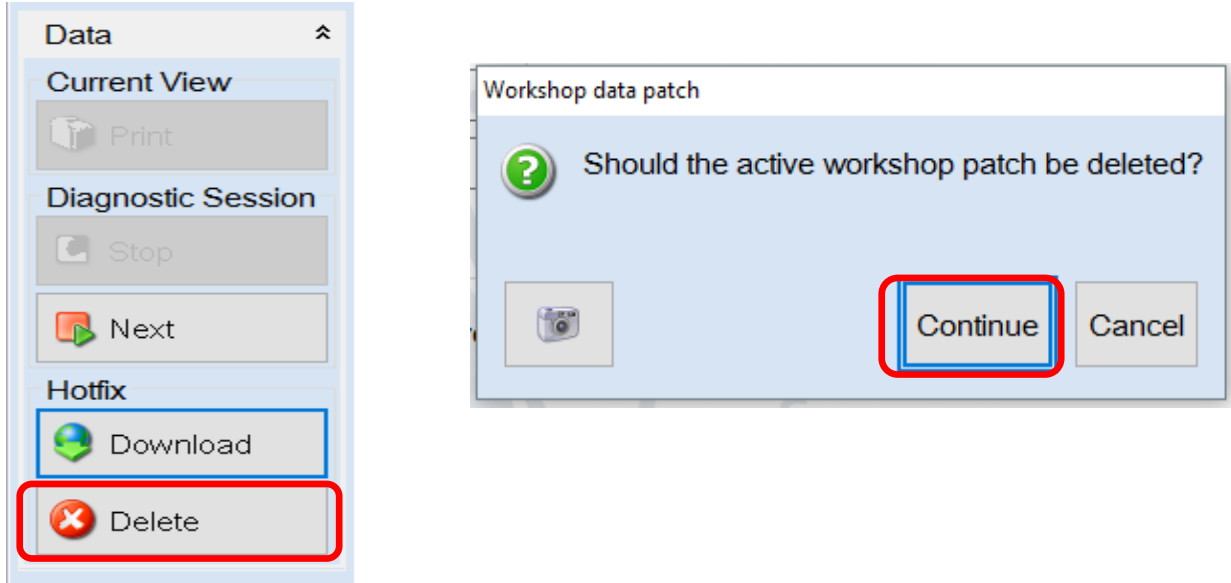

2. Click **OK** and close ODIS Service:

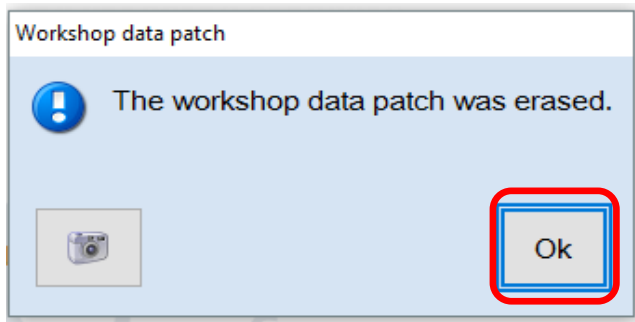

***Please contact Diagnostic Tester Software Support by phone at 888-896-1298 or email [softwaresupport@vw.com](mailto:softwaresupport@vw.com) with any questions or concerns.***