

Subject

Health Check Error Message During Safety Recall DOF - Front Passenger Airbag Inflator Module

Market

USA

Service Category

Vehicle Interior

Section

Supplemental Restraint Systems

Applicability

Certain Modles


APPLICABLE VEHICLES

2003-2004	Tundra	2003-2004	Matrix
2002-2004	Sequoia	2003-2004	Corolla

CONDITION

The technical instructions for Safety Recall DOF (Front Passenger Airbag Inflator Module) require a Techstream Health Check and then a Diagnostic Report (Customer Friendly Health Check.)

During the Health Check, a TIS Access Error (S309-10) dialog box may be displayed for certain Model and Model Year vehicles listed in the applicable vehicle section.

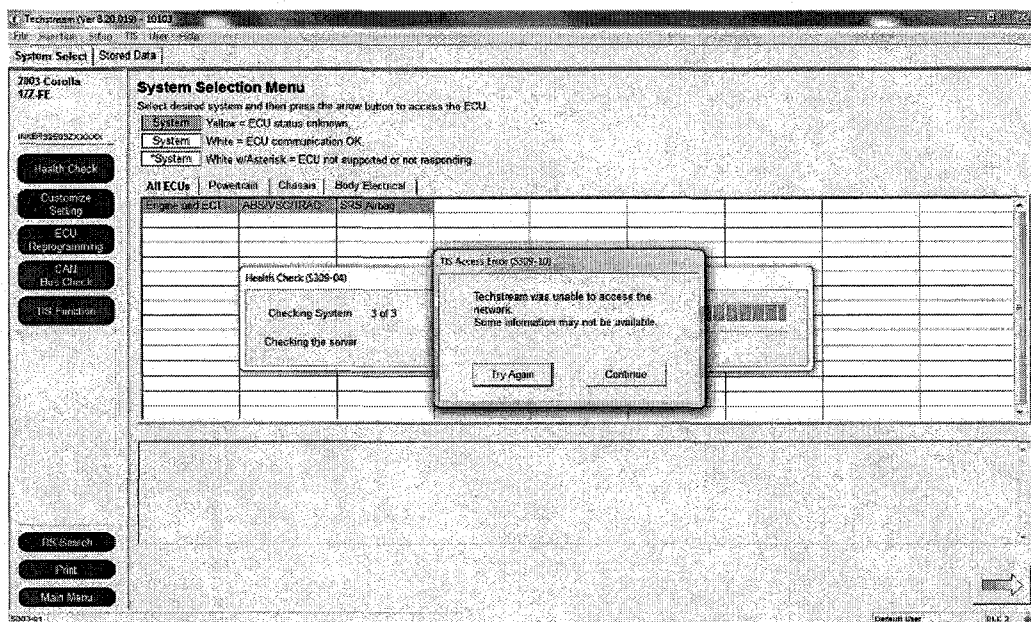

RECOMMENDATIONS

If the error message dialog box appears, click "Continue" and proceed with the Safety Recall's technical instructions.

LINK REFERENCES

This Tech Tip does not contain any link references

Subject

Market

**Health Check Error Message During Safety Recall
DOF - Front Passenger Airbag Inflator Module**

USA

Applicability

Certain Modles